



**HOMELITE**

A **Textron** DIVISION • PORT CHESTER, NEW YORK

Leon's Chainsaw Parts & Repair  
Do Not Sell or Reproduce


PRICE .25

**SUPER**

**XP**

**SERIES**

**PARTS  
LIST**

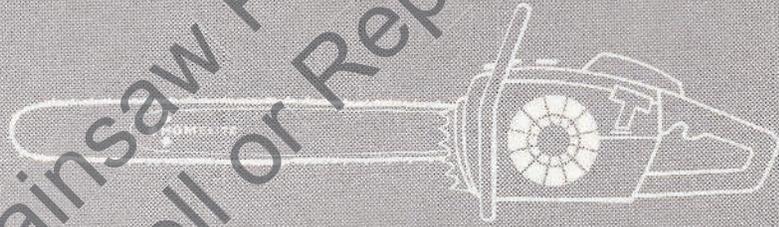

**HOMELITE®**

**XP**


**CHAIN SAWS**

Leon's Chainsaw Parts  
Do Not Sell or Repl

**SUPER  
XP-1020**

**SUPER  
XP-1020 Auto**

**SUPER  
XP-1130-1 Auto**

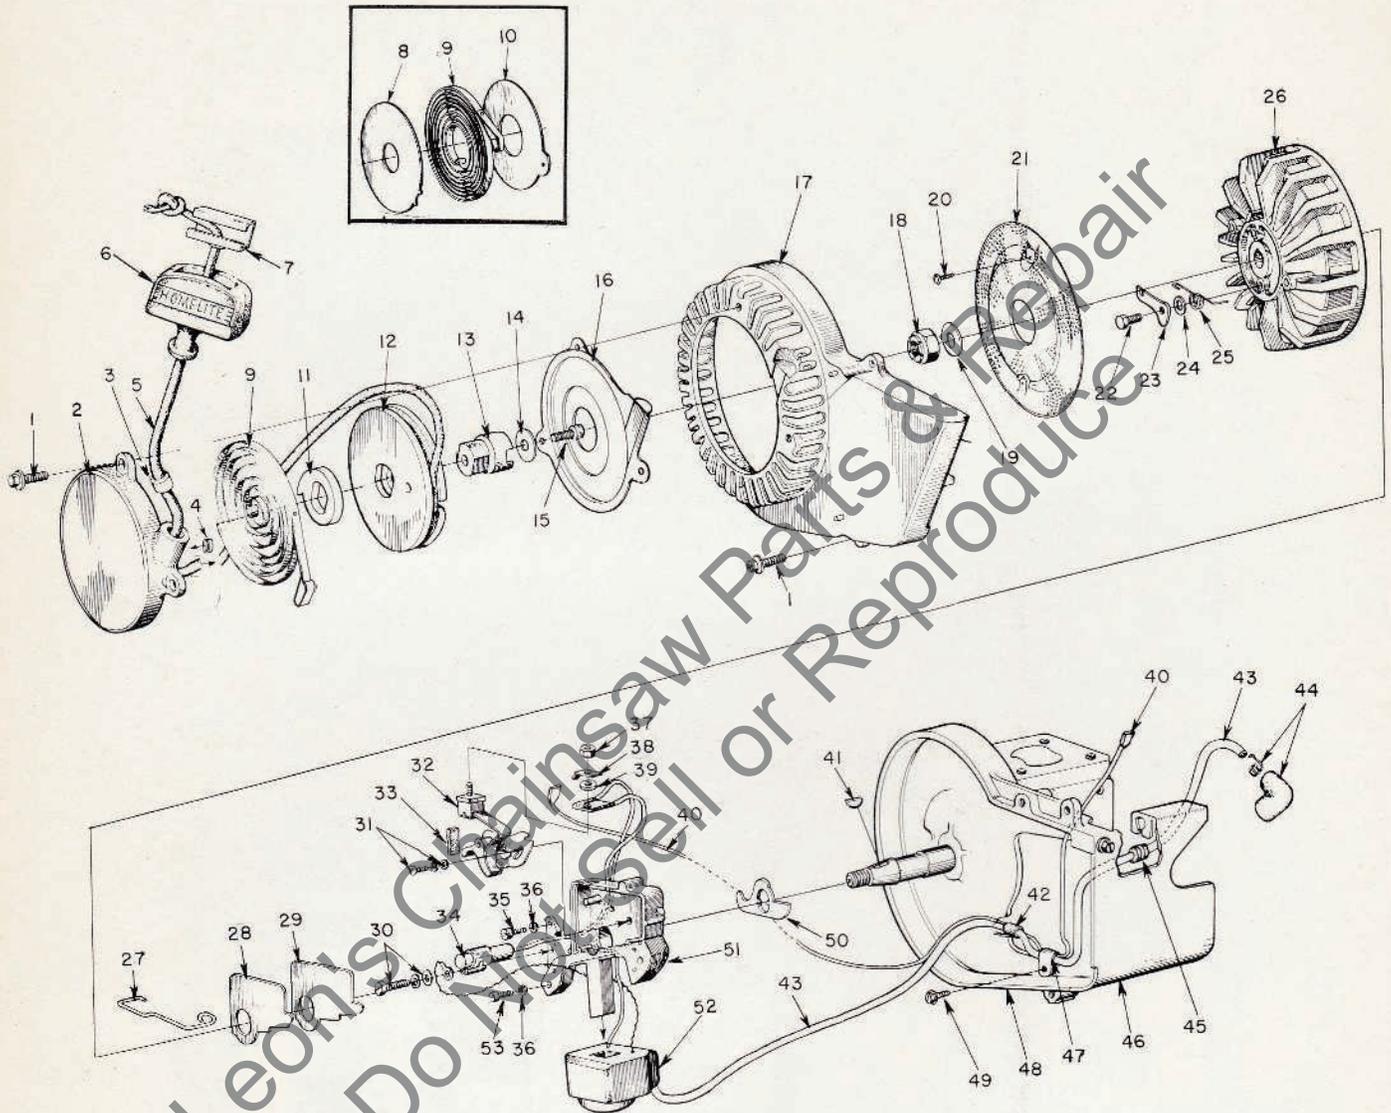

**FIGURE 1**

**SUPER  
XP-1020**

**SUPER  
XP-1020 Auto**

**SUPER  
XP-1130-1 Auto**

No.	Description	Part No.	Qty.
1	SCREW-hex, 12-24 x 3/4	80867	7
2	COVER-starter	A-64178	1
*3	Includes: BUSHING-rope	67177	1
4	BUSHING-spring outer loop	65830	1
5	ROPE-starter	58806	1
6	GRIP-rope	55937	1
7	INSERT-rope retaining	58517	1
8	SHIELD-spring (inner) (optional)	65711	1
9	SPRING-rewind	64180-A	1
10	SHIELD-spring (outer) (optional)	65712	1
11	LOCK-spring rewind	64094-A	1
12	PULLEY-starter	64050-1	1
*13	CUP-starter	67136	1
14	WASHER-retaining	58763	1
15	SCREW-hex, 10-32 x 1/2	80648	1
16	SHIELD-sawdust	64052	1
17	HOUSING-fan	59094-1	1
18	NUT-lock, 7/16-20	81104	1
19	WASHER-flat	84047	1
20	SCREW-hex, (spinlock)	80869-1	2
21	SCREEN-rotary	64055	1
22	STUD-shoulder	64054	2
23	PAWL-starter	58756	2
24	WASHER	58851	2
25	SPRING-starter pawl	58758-1	2
26	ROTOR	64053-A	1
27	CLAMP-dust cover	55980	1
28	COVER-dust	55979	1
29	GASKET-dust cover	55978-2	1
30	SCREW GROUP-condenser	57750	1
31	SCREW GROUP-point	57749	1
32	POINT SET	A-58165	1
33	Includes: WICK	55984	1
34	CONDENSER-w/terminal	55987	1
35	SCREW-HI, 10-24 x 1/2	80595	1
36	WASHER-lock, #10	83046	3
37	NUT-terminal	55982	1
38	TAB-ground	57733	1
39	WASHER-terminal	55983	1
40	LEAD-ground w/terminals	A-58321	1
41	KEY-rotor	75078	1
42	SLEEVE	55290	1
43	LEAD-high tension	58382	1
44	TERMINAL-spark plug	A-55373-A	1
45	GROMMET	60929	1
46	SHIELD-cylinder	A-63736-1	1
47	CLAMP-lead	56014	1
*48	CRANKCASE-w/pin (see Fig. 2)	A-64532	1
49	SCREW-hex, 10-32 x 3/8	80869-1	1
50	SEAL-breaker box	56292-A	1
51	BOX-breaker w/core	57744	1
52	COIL-w/ground terminal	55986-A	1
53	SCREW-fil, 10-32 x 7/8	80660	2

\*Denotes new part

# SUPER XP-1020

# SUPER XP-1020 Auto

# SUPER XP-1130-1 Auto

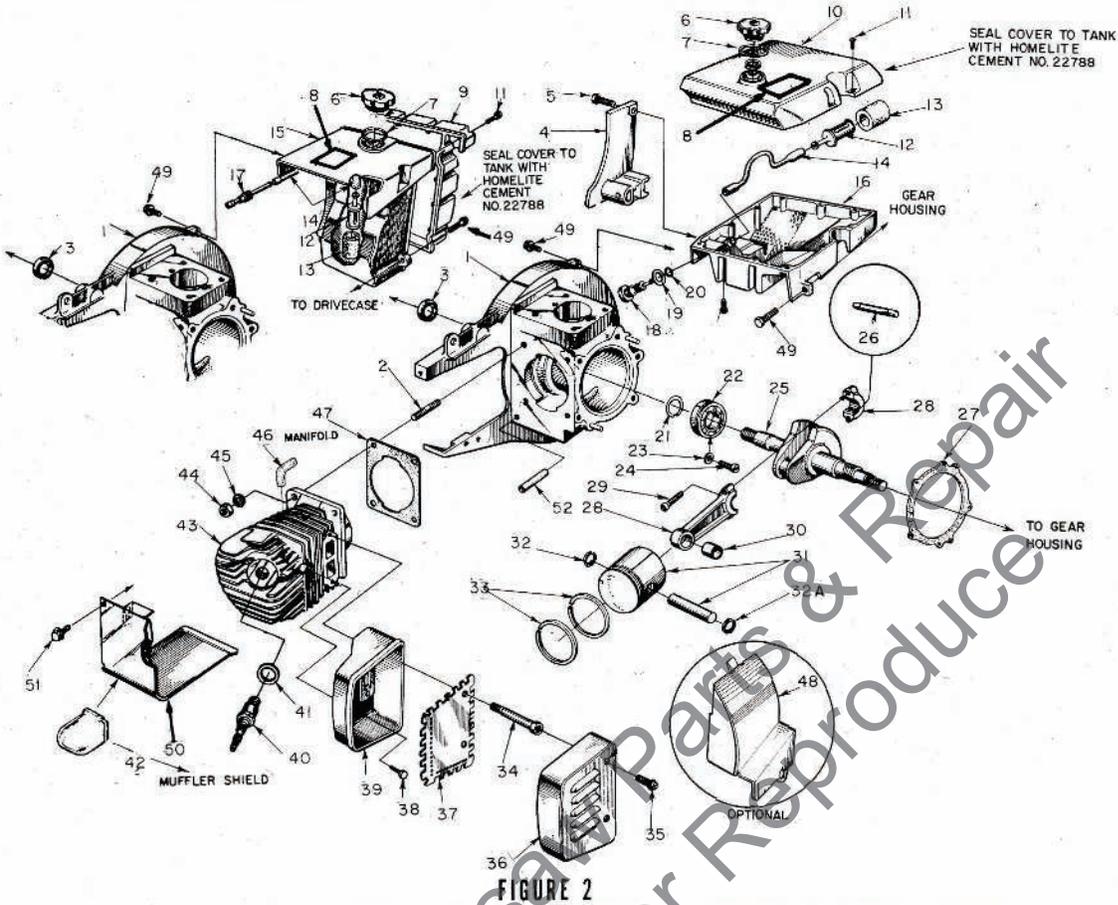


FIGURE 2

No.	Description	Part No.	Qty.	SUPER XP			No.	Description	Part No.	Qty.	SUPER XP		
				1020	1020 Auto	1130-1 Auto					1020	1020 Auto	1130-1 Auto
* 1	CRANKCASE-w/pins Includes: PIN-dowel (not shown)	A-64532 74332	1 2	x	x	x	27	GASKET-crankcase	63356	1	x	x	x
2	STUD	72787-1	4	x	x	x	28	ROD-connecting	A-59945	1	x	x	x
3	SEAL	58308-A	1	x	x	x	29	Includes: SCREW	80345	2	x	x	x
4	BRACKET-handle bar	59635-2	1	x	x	x	30	BEARING-needle	50606	1	x	x	x
5	SCREW-hex, 12-24 x 7/8	80891	1	x	x	x	* 31	PISTON & PIN	A-63071-C	1	x	x	x
6	CAP-tank	A-64149-1	1	x	x	x	32	Includes: RING-retaining	56290	1	x	x	x
7	Includes: GASKET VALVE-vent (not shown)	65358 63713	1 1	x	x	x	32A	RING-retaining	64743	1	x	x	x
8	DECAL-caution	64144	1	x	x	x	33	PISTON RING	56291	2	x	x	x
9	COVER-tank ①	59920-2	1	x	x	x	34	STUD-muffler	- 59982-A	2	x	x	x
10	COVER-tank ①	59987-2	1	x	x	x	35	SCREW-hex, 12-24 x 3/8	80837	2	x	x	x
11	SCREW-rd. hd., 6 x 1/2	80513	15	x	x	x	+ 36	CAP-muffler	A-64464	1	x	x	x
12	FILTER ASSEMBLY	A-59251	1	x	x	x	* 37	RAFFLE-muffler	59978-1	1	x	x	x
13	Includes: FILTER	59253-1	1	x	x	x	38	SCREW-hex, 1/4-20 x 5/8	+ 80402	1	x	x	x
14	LINE-flexible	55805	1	x	x	x	39	BODY-muffler	-A-59927-B	1	x	x	x
15	TANK-fuel	58172-A1	1	x	x	x	40	SPARK PLUG	63547-S	1	x	x	x
16	TANK-fuel w/screen	A-63399	1	x	x	x	41	Includes: GASKET	25038	1	x	x	x
17	FITTING-fuel outlet	58364	1	x	x	x	42	CAP-spark plug	63735	1	x	x	x
18	FITTING-fuel	63132	1	x	x	x	* 43	CYLINDER-2 3/16" bore ("W" Units) ②	58175-3	1	x	x	x
19	GASKET	63175-1	1	x	x	x	* 44	CYLINDER-2 3/16" bore ②	A-65571	1	x	x	x
20	"O" RING	90254	1	x	x	x	45	NUT-hex, 5/16-24	25412	4	x	x	x
21	RING-retaining	58319-A	1	x	x	x	46	WASHER-lock, 5/16	83002	3	x	x	x
22	BEARING-ball	58190-8	1	x	x	x	47	WASHER-lock, 5/16 ("W" Units only)	83002	4	x	x	x
23	WASHER-lock	83061	2	x	x	x	48	WASHER-tab lock	65367-1	1	x	x	x
24	SCREW-bearing retaining	19238-3	2	x	x	x	49	LINE-fuel (idle)	63666	1	x	x	x
25	CRANKSHAFT	A-64068	1	x	x	x	* 47	GASKET-cylinder	64463	1	x	x	x
	CRANKSHAFT	A-64350	1	x	x	x	48	EXCHANGER-heat (optional)	63103-1	1	f	f	f
	CRANKSHAFT	A-64351	1	x	x	x	49	SCREW-hex, 12-24 x 3/4	80867	4	x	x	x
26	ROLLERS-needle (set of 31)	A-64878	1	x	x	x	50	SCREW-hex, 12-24 x 3/4	80867	3	x	x	x
							51	SHIELD-cylinder	A-63736-1	1	x	x	x
							52	SCREW-hex, 10-24 x 3/8	30869-1	2	x	x	x
								SLEEVE	55290	1	x	x	x

\*Denotes new part

f Optional

① Gaskets are available for Fuel Tanks.  
Super XP 1020 units uses #58367 Gasket  
Super XP 1130 units uses #64755 Gasket

② When using 3 port idle system you must use  
A-65571 Cylinder, other units use 58175-3  
Cylinder.

### ACCESSORY

A-64411 Muffler & Shield Assembly

Includes: 64408 CAP-muffler (1)  
63855-A SCREW-shoulder (3)  
64409-2 SHIELD-muffler (1)

-Includes with A-64411 Muffler and Shield Assembly

A-63518 SPARK ARRESTER - requires #63548 SHIM,  
one under each muffler stud

A-64004 KIT - fuel tank spacer  
83056 Includes: WASHER #83056 (1)

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

**SUPER  
XP-1020**

**SUPER  
XP-1020 Auto**

**SUPER  
XP-1130-1 Auto**

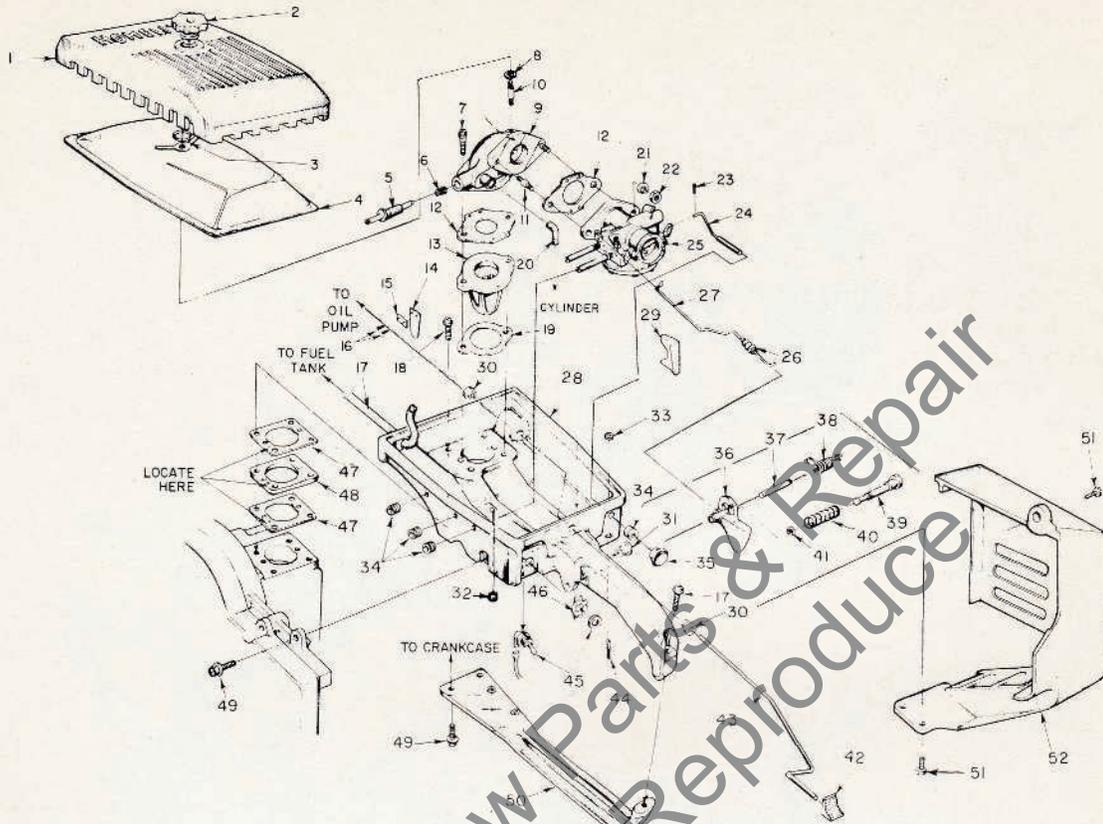


FIGURE 3

No.	Description	Part No.	Qty.	SUPER XP			No.	Description	Part No.	Qty.	SUPER XP		
				1020	1020 Auto	1130-1 Auto					1020	1020 Auto	1130-1 Auto
1	COVER-air filter	59230	1	x	x	x	28	HANDLE-throttle	A-63665	1	x	x	x
2	NUT-cover	A-59225	1	x	x	x	29	Includes: STOP-rod	58930	1	x	x	x
3	RING-retaining	58314-A	1	x	x	x	30	BUSHING-rod	58929	2	x	x	x
4	ELEMENT-air filter	63728	1	x	x	x	31	BUSHING-lock pin	59064	1	x	x	x
5	SCREW-idle adjusting (not in "W")	63657	1	x	x	x		PLUG-button (not shown)	64607	1	x	x	x
6	SPRING-adjusting screw (not in "W")	63664	1	x	x	x	32	PLUG-button	A-64744	1	x	x	x
7	SCREW-hex, 1/4-20 x 1/2	80582	2	x	x	x		Includes: "O"RING(not shown)	59765	1	x	x	x
8	GASKET-stud	58392	1	x	x	x	33	FELT	63290	1	x	x	x
*9	MANIFOLD-intake ("W" Units only)	58183-2	1	x	x	x	34	GROMMET	58362	4	x	x	x
	MANIFOLD-intake	A-68923	1	x	x	x		GROMMET ("W" Units only)	58362	3	x	x	x
10	STUD-cover	58361	1	x	x	x	35	BUTTON-rod	57289-1	1	x	x	x
11	STUD-carburetor	27461	2	x	x	x	36	TRIGGER-throttle	58181-A	1	x	x	x
12	GASKET-carburetor	58655	2	x	x	x	37	SHAFT-trigger	58353	1	x	x	x
13	SEAT-reed valve	59627-1	1	x	x	x	38	SPRING-throttle	58352-A	1	x	x	x
14	REED	59628	4	x	x	x	39	PIN-throttle lock	58404	1	x	x	x
15	CLAMP-reed	59629	4	x	x	x	40	SPRING-lock	58405	1	x	x	x
16	SCREW-pan, 4-40 x 3/16	80658	8	x	x	x	41	RING-retaining	58409	1	x	x	x
17	LINE-fuel	55680	1	x	x	x	42	BUTTON-oil rod	58357	1	x	x	x
18	SCREW-hex, 12-24 x 1	80864	5	x	x	x	43	ROD-oil pump	58356-B	1	x	x	
19	GASKET-spacer	55946	1	x	x	x		ROD-oil pump	63127-A	1	x	x	x
20	LINE-fuel idle (not in "W" Units)	63656	1	x	x		44	PIN-cotter, 1/16 x 1/2	86301	1	x	x	x
21	WASHER-lock, 1/4	83009	2	x	x	x	45	SWITCH-toggle w/nut	A-57650-3	1	x	x	x
22	NUT-hex, 1/4-20	81013-1	2	x	x	x	46	PLATE-"On-Off"	72085-A	1	x	x	x
23	PIN-cotter, 1/32 x 1/2	86324	1	x	x	x	47	GASKET-spacer	58343	2	x	x	x
24	ROD-choke	A-58354	1	x	x	x	48	SPACER-throttle handle	58391	1	x	x	x
25	CARBURETOR	A-63585	1	x	x	x	49	SCREW-hex, 12-24 x 3/4	80867	3	x	x	x
	CARBURETOR ("W" Units only)	A-65717	1	x	x	x	50	BRACE-throttle handle	58185-A1	1	x	x	x
26	BOOT-rod	58348	1	x	x	x	51	SCREW-hex, 12-24 x 5/8	80676	3	x	x	x
27	ROD-throttle	59338	1	x	x	x	52	SHIELD-muffler	63733-2	1	x	x	x

\*Denotes new part

# SUPER XP-1020 Auto

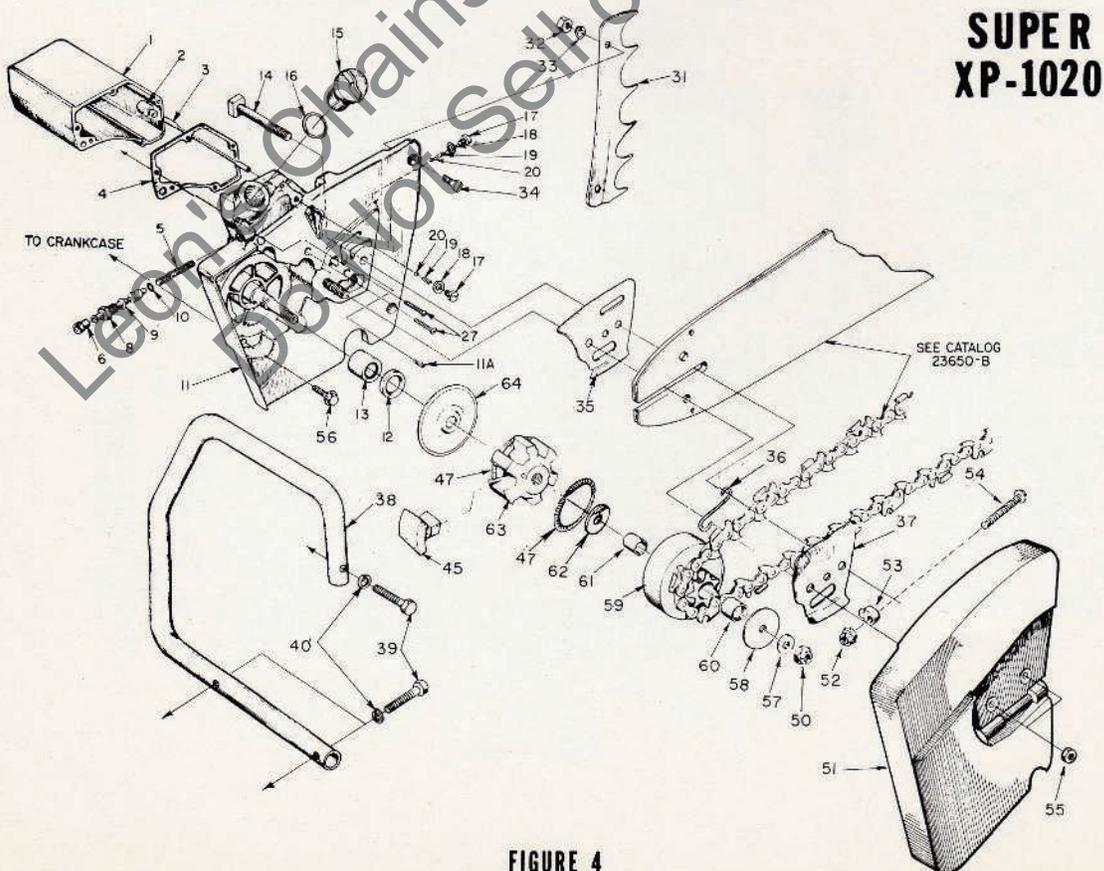
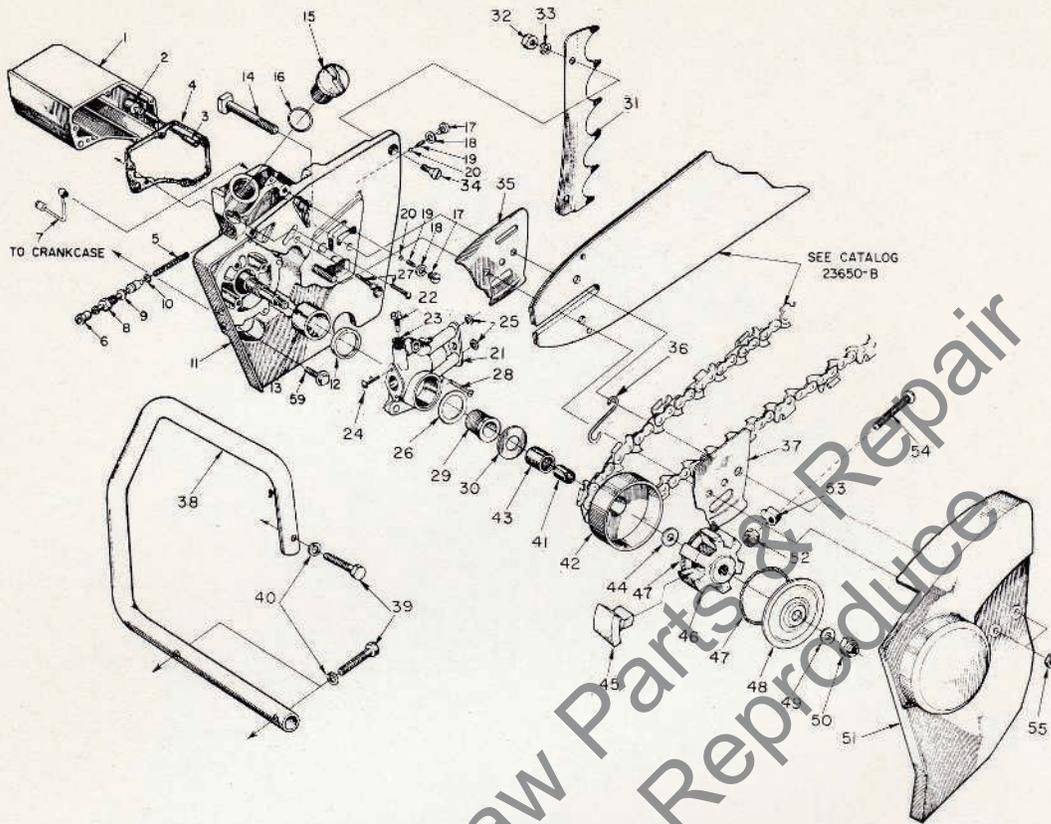


FIGURE 4

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# SUPER XP-1020

# SUPER XP-1020 Auto

				SUPER XP						SUPER XP	
No.	Description	Part No.	Qty.	1020	1020 Auto	No.	Description	Part No.	Qty.	1020	1020 Auto
1	RESERVOIR-oil Includes: PIN-cotter (not shown)	A-58341 86301	1	x	x	39	SCREW-hex, 5/16-18 x 1 1/2	80087	3	x	x
2	FILTER-oil	A-64293	1	x	x	40	WASHER-lock, 5/16	83003	3	x	x
3	LINE-oil pickup LINE-oil pickup	59674 58340-B	1	x		41	RACE-inner	56231	1		x
4	GASKET-reservoir	58342	1	x	x	42	SPROCKET & DRUM Open Type-.404 pitch, 8 tooth	A-57341	1		x
5	SPRING-plunger	59293	1	x	x		7/16" pitch, 7 tooth	A-56299	1		✓
6	CONNECTOR-pump	58337-A	1	x	x		1/2" pitch, 7 tooth	A-56615	1		✓
7	LINE ASSY-oil pickup	A-64010	1		x	43	Includes: BEARING-needle SPROCKET & DRUM-splined (not shown)	56230	1		x
8	PLUNGER-oil pickup	A-57834-10	1	x	x		1/2" pitch, 6 tooth	A-65548	1		✓
9	Includes: "O" RING-shaft	59074	1	x	x		Includes: SPROCKET	67017	1		✓
10	"O" RING-plunger	74388	1	x	x		RACE-inner	65348	1		✓
11	DRIVECASE DRIVECASE	A-64264 A-59493-A1	1		x		BEARING-needle (unit cage)	65393	1		✓
	Includes: TUBE-oil line (not shown)	59023	1	x	x	44	WASHER-thrust	56132	1		x
11A	PLUG ②	59621	1	x	x	45	SHOE-clutch	55076-3	6	x	x
12	SEAL	56256-A	1	x	x	46	SPIDER-clutch	58546-2	1		x
13	BEARING-needle	63043	1	x	x	47	SPRING-clutch	55123-C	2	x	x
14	BOLT-guide bar	58334	2	x	x	48	COVER-clutch	56238-A	1		x
*15	CAP-oil Includes: VALVE-vent (not shown)	A-63717-A 63718	1	x	x	49	WASHER-flat	64027	1		x
16	GASKET	56607	1	x	x	50	NUT-hex, 3/8-24	81192	1	x	x
17	CAP-check valve	58339	2	x	x	51	COVER-drivecase COVER-drivecase	A-64074 A-58683-1	1		x
18	GASKET	58338	2	x	x	52	Includes: NUT-5/16-18	81123	1	x	x
19	SPRING-check	59022	2	x	x	53	PIN-adjusting	55613-1	1	x	x
20	BALL-check	25527	2	x	x	54	SCREW-rod, 5/16-18 x 2	80617	1	x	x
21	PUMP-automatic oiler	A-64073-A	1		x	55	NUT-hex, 3/8-16	81089-2	2	x	x
22	Includes: SCREW-cam	59737	1		x	56	SCREW-hex, 12-24 x 3/4	80867	5	x	x
23	GASKET	59736	1		x	57	WASHER-flat	84010-1	1		x
24	SCREW	80919	2		x	58	WASHER-thrust	55163-1	1		x
25	"O" RING	90872	2		x	59	SPROCKET & DRUM Open Type-.404 pitch, 7 tooth	A-57344	1		x
26	SEAL-felt	59926	1		x		7/16" pitch, 7 tooth	A-56377	1		✓
27	SCREW-rod, 6 x 3/4	80790	5	x	x		1/2" pitch, 6 tooth	A-56019	1		✓
28	SCREW-hex, 8-32 x 1/2	80560	3	x	x	60	Includes: BEARING-needle "Splined" Type-not shown	55664	1		x
29	WORM-gear	63893	1		x		DRUM & HUB ④	OM10616	1		✓
30	WASHER-thrust	56236	1		x		Includes: BEARING-needle	55664	1		✓
31	KIT-spiked bumper (Optional for "W") KIT-spiked bumper ("W" Units only- Optional for standard units) ③	A-58543 A-63089	1		x		SPROCKET-splined				
32	Includes: NUT-hex, 1/4-20	81053	2		x		Rim Type-.404 pitch, 7 tooth	OM10513	1		✓
33	WASHER-lock, 1/4	80009	2		x		7/16" pitch, 7 tooth	OM10514	1		✓
34	SCREW-flat, 1/4-30 x 3/4	80053	2		x		1/2" pitch, 7 tooth	OM10512	1		✓
35	PLATE-guide bar (inner)	56871-A	1		x	61	RACE-inner	55661	1		x
36	SPRING-guide bar	64448	1		x	62	WASHER-thrust	55660-1	1		x
37	PLATE-guide bar (outer)	56872-B	1		x	63	SPIDER-clutch	58546-1	1		x
*38	HANDLE BAR-flush cut HANDLE BAR-wrap around ("W" Units) ③	A-65848-1 A-59922	1		x	64	COVER-clutch	56101-A	1		x
	HANDLE BAR-wrap around (optional)	A-58398	1		✓		Not Shown: ("W" Units only)				
	Includes: SCREW-socket, 5/16-18 x 1	80308-2	1		x		PLATE-guard ②	63389-1	1		x
	HANDLE BAR-(reversible bow only- optional) ①	A-64727	1		✓		PLATE-guard ②	64029-1	1		x

\*Denotes new part

✓ Optional

- ① 30886-Screw (5/16-18 x 7/8 flat) (1) must be used with A-64727 Handle Bar.
- ② #59621 Plug, in Drivecase channel, must be removed before Automatic Oiler Kit (accessory) can be installed.
- ③ #A59922 Handle Bar requires # A-63089 Bumper Kit and either 63389-1 Plate, Guard, or 64029-1 Plate, Guard.
- ④ "Splined" Drum & Hub requires one of "Splined" sprockets listed.

#### ACCESSORIES

A-59671	AUTOMATIC OILER KIT - .404 pitch, 7 tooth
A-59682	AUTOMATIC OILER KIT - 7/16" pitch, 7 tooth
A-63241	AUTOMATIC OILER KIT - 1/2" pitch, 6 tooth

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# SUPER XP-1130-1 Auto

# SUPER XP-1130-2 Auto

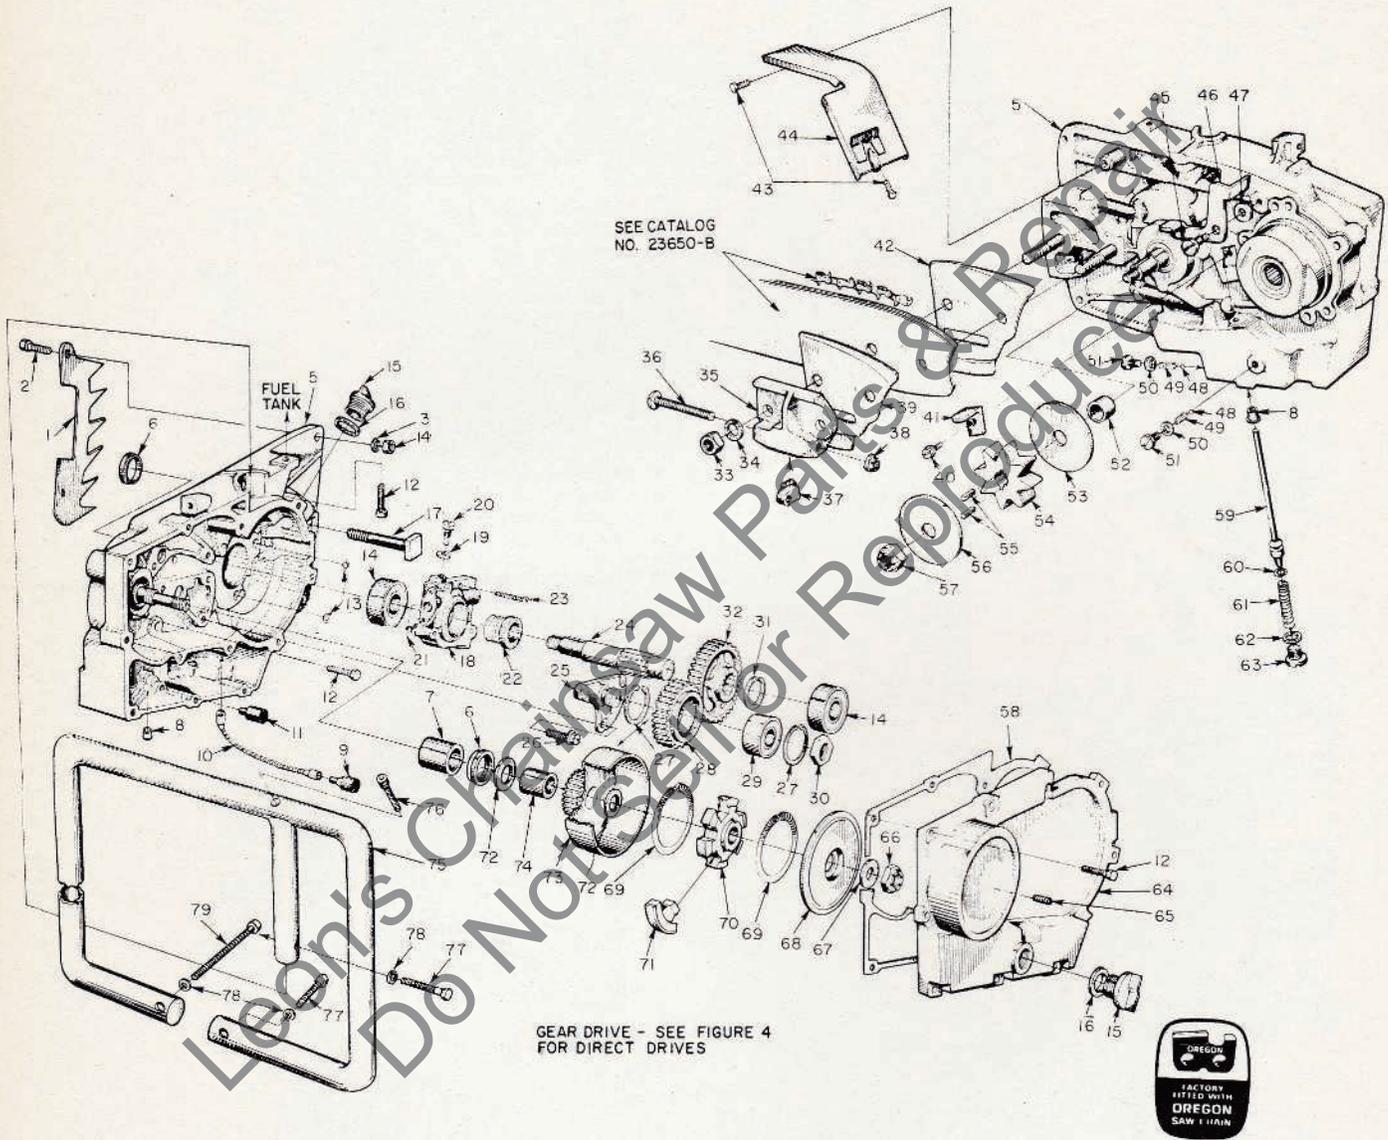


FIGURE 5

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# SUPER XP-1130-1 Auto

# SUPER XP-1130-2 Auto

SUPER XP XP-1 Auto				SUPER XP XP-2 Auto			
No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
* 1	KIT-spiked bumper	A-63138	1 x x	41	BRACKET-rod	63110	1 x x
* 2	KIT-spiked bumper ("W" Units only)	A-63413	1 x	42	PLATE-guide bar (inner)	56956	1 x x
2	Includes: SCREW-hex, 1/4-20 x 3/4	80218-1	2 x x	43	SCREW-hex, 12-24 x 3/8	80837	3 x x
	SCREW-hex, 1/4-20 x 7/8			44	GUARD-chain	A-63776	1 x x
	("W" Units only)	80181-3	2 x	*	Includes: DEFLECTOR-sawdust (not shown)	63715	1 x x
3	WASHER-lock, 1/4	83009	2 x x		RIVET-(not shown)	85125	3 x x
4	NUT-1/4-20	81053	2 x x	45	SCREW-pivot	59591	1 x x
5	HOUSING-gear	A-63398-C	1 x x	46	BELLCRANK	59592	1 x x
6	Includes: SEAL	56256-A	2 x x	47	WASHER-thrust	63109	1 x x
7	BEARING-needle	76167-S	1 x x	48	BALL-check	25527	2 x x
8	BUSHING-rod	59064	1 x x	49	SPRING-check valve	59022	2 x x
	ELBOW-(not shown)	59532	1 x x	50	GASKET-check valve cap	88338	2 x x
9	FILTER-oil (auto.)	A-64293	1 x x	51	CAP-check valve	58339	2 x x
10	LINE-oil	59674	1 x x	52	SPACER-sprocket	59497	1 x x
11	FILTER-oil (manual)	A-63116	1 x x	53	WASHER-sprocket (inner)	56074	1 x x
12	SCREW-hex, 12-24 x 3/4	80887	17 x x	54	SPROCKET-8 tooth, 1/2" pitch	55593-3	1 x x
13	"O" RING	90872	2 x x		7 tooth, 9/16" pitch	74481-1	1 x x
14	BEARING-ball	63107-S	2 x x	55	KEY-sprocket	56076-1A	2 x x
* 15	CAP-filler (vented)	A-63717-A	2 x x	56	WASHER-sprocket (outer)	56077	1 x x
16	Includes: GASKET	56607	2 x x	57	NUT-1/2-20	81101	1 x x
	VALVE-vent (not shown)	63718	2 x x	58	GASKET-gear housing cover	63124	1 x x
17	BOLT-guide bar	58334	2 x x	59	PUNCE-oil pump	A-63112	1 x x
* 18	PUMP-automatic oiler	A-63092	1 x x	60	Includes: "O" RING	74388	1 x x
19	Includes: GASKET	59736	1 x x	61	SPRING	59293	1 x x
20	SCREW-cam	59737	1 x x	62	WASHER	58138	1 x x
21	SCREW-pan, 4-40 x 1/4	80919	2 x x	63	CAP	63115	1 x x
22	WORM-gear	63084-A	1 x x	64	COVER-gear housing	59631-2	1 x x
23	SCREW-hex, 8-32 x 7/8	80568	3 x x	65	PLUG-pipe	28097	1 x x
24	SHAFT-sprocket	59277-A	1 x x	66	NUT-3/8-24	81192	1 x x
25	POST-idler gear	59259-1A	1 x x	67	WASHER-cover retaining	55036	1 x x
26	SCREW-shoulder, 1/4-20 ②	63407	3 x x	68	COVER-clutch	58023	1 x x
27	RING-retaining	28922	2 x x	69	SPRING-clutch	55123-C	2 x x
28	GEAR-idler	59250	1 x x	70	SPIDER-clutch	58547-1	1 x x
29	BEARING-ball	72328-S	1 x x	71	SHOE-clutch	A-58028	6 x x
30	NUT-idler gear	57765-A	1 x x	72	WASHER-thrust	56132	2 x x
31	RING-retaining	63108	1 x x	73	DRUM-clutch w/gear	A-63123	1 x x
32	GEAR-driven, 2:1 ratio, 42 teeth ("W" only)	59298-1	1 x x	74	BEARING-sleeve	56603	1 x x
	3:1 ratio, 64 teeth ①	59276-1	1 x x	* 75	HANDLE BAR-wrap around	A-63827-1	1 x x
33	NUT-3/8-16	81089-2	2 x x		HANDLE BAR-wrap around (over sized)	A-64468-1	1 x x
34	WASHER-lock, 3/8	83018	2 x x	76	Includes: SCREW-socket, 5/16-18 x 1"	80308-2	1 x x
	PLATE-adjusting	A-55591	1 x x	77	SCREW-hex, 5/16-18 x 1 1/2	80087	2 x x
35	Includes: PLATE	55551-2	1 x x	78	WASHER-lock, 5/16	83003	3 x x
36	SCREW-rd. 5/16-18 x 2	80617	1 x x	79	SCREW-hex, 5/16-18 x 3 1/4	80698	1 x x
37	PIN	55552-1	1 x x				
38	NUT-hex lock	81123	1 x x				
39	PLATE-guide bar (outer)	56957-A	1 x x				
40	SCREW-hex, 10-24 x 3/8	80869-1	1 x x				

\*Denotes new part

^ Optional

- ① Check number of teeth on driven gear before ordering. Position of idler post shown for 2:1 gear ratio, mount on other pad for 3:1 gear ratio.  
 ② Units with idle post mounting screw holes drilled through gear housing use #63407 Shoulder Screw, all others use #63407-1 Shoulder Screw.

## SPECIAL TOOLS available on order

A-23937-B	WRENCH - combination
23874	PLUG - needle bearing (conn. rod)
23528	WRENCH - socket screw (conn. rod)
22828	PLIERS - snap ring (piston)
23136	BODY - assembly
22820-2	ADAPTER - main bearing
A-23672	JACKSCREW
23670	PLATE - shaft aligning
23233-1	PLUG - seal assembly
23671	PLUG - drivecase seal

23693	SLEEVE - shaft (drivecase)
A-23696	REMOVER - spider
A-23950	TOOL - piston pin remover
A-24028	REMOVER
23876	TOOL - drivecase bearing (1020 series)
23139	TOOL - clutch drum bearing (1020 series)
23913	PLUG - ball bearing and seal (1130 series)
22750	TOOL - sprocket locking (1130 series)
23391-3	PLUG - needle bearing (1130 series)
23228	PLUG - sprocket shaft bearing (1130 series)
23420	PLUG - clutch drum bearing

### DECAL

REPLACEMENT DECAL #23742 composed of "DIRECT DRIVE", "GEAR DRIVE", "STARTING INSTRUCTIONS", and two "HOMELITE" (letters 1/2" and 1/4" high).

### PAINT

22771 SPRAY CAN - red  
 23343 SPRAY CAN - green