

**HOMELITE
JACOBSEN**

PART NO. 17424-A

Printed in U.S.A.

Supplied FREE with Purchase of Chain Saw.

Extra Copies \$1.00

HOMELITE® **410** Chain Saw

OWNERS Operation and Maintenance **MANUAL**

**READ
THIS MANUAL**

**Save This
Manual For
Reference**

**HOMELITE
410**

WARNING:
CHAIN SAWS CAN BE
DANGEROUS. TO REDUCE DANGER FOLLOW
ALL SAFETY PRECAUTIONS IN THIS OWNER'S MANUAL.

IMPORTANT: UNDERSTAND THE DANGERS OF KICKBACK FULLY BEFORE OPERATING.

(See page 3.)

SAFETY PRECAUTIONS FOR CHAIN SAW USERS

When you are going to cut wood—DO IT RIGHT!

BASIC PRECAUTIONS

FOR PERSONAL SAFETY

- Use safety footwear, snug-fitting clothing, and eye, hearing and head protection.
- Wear non-slip gloves to improve your grip. Do not wear scarfs, jewelry, or neckties which could be drawn into the engine or catch on the chain or underbrush.
- Always hold the chain saw with both hands when the engine is running. Use a firm grip with thumbs and fingers encircling the chain saw handles.
- **GUARD AGAINST KICKBACK:**
 - a) Hold the chain saw firmly with both hands. Don't overreach. You cannot maintain good control of the saw if you cut above shoulder height.
 - b) Don't let the nose of the guide bar contact a log, branch, the ground or any other obstruction. Keep the **SAFE•T•TIP®** anti-kickback device* properly mounted on the guide bar.
 - c) Throttle up before letting the chain contact the wood. Do all cutting at full throttle.
 - d) Keep the chain sharp. Don't operate with a loose chain. Maintain the correct tension of the chain as prescribed in this Owner's Manual.
- Guard against the effects of a long or continuous exposure to noise, such as involved in the operation of a chain saw. Hearing protection devices are available from your local Home Depot dealer.
- Never operate a chain saw when you are fatigued.
- Keep all parts of your body away from the saw chain when the engine is running.

BASIC PRECAUTIONS

WITH CHAIN SAWS

- Always carry the chain saw with the engine stopped, the guide bar and saw chain to the rear, and the muffler away from your body. When transporting your chain saw, use the appropriate guide bar scabbard.
- Always use caution when handling fuel. Move the chain saw at least 10 feet (3 m) from the fueling point before starting the engine.

- Keep the handles dry, clean and free of oil or fuel mixture.
- Before you start the engine, make sure the saw chain is not contacting anything.
- Shut off the engine before setting down the saw. Do not leave the engine running unattended.
- Operate the chain saw only in well ventilated areas.
- Be sure that the chain stops moving when the throttle control is released.

BASIC PRECAUTIONS

ABOUT MAINTENANCE

- Never operate a chain saw that is damaged, improperly adjusted, or is not completely and securely assembled. Be sure that the saw chain stops moving when the throttle control trigger is released.
- All chain saw service, other than items in the Owner's Manual maintenance instructions, should be performed by competent chain saw service personnel. (If improper tools are used to remove the flywheel or clutch, or if an improper tool is used to hold the flywheel in order to remove the clutch, structural damage to the flywheel could occur which could subsequently cause the flywheel to burst.)

BASIC PRECAUTIONS

IN CUTTING/WORK AREA

- Do not operate a chain saw in a tree unless you have been specifically trained to do so.
- Keep bystanders and animals out of the work area.
- Never start cutting until you have a clear work area, secure footing, and a planned retreat path from the falling tree.
- Use extreme caution when cutting small size brush and saplings, because slender material may catch the saw chain and be whipped toward you or pull you off balance.
- When cutting a limb that is under tension, be alert for springback so that you will not be struck when the tension in the wood fibers is released.

SAFETY PRECAUTIONS	2
INTRODUCTION	3
Kickback, Push and Pull	3
Facts about Model 410 Saws	7
Vibration Isolation	7
SAFE•T•TIP® Device	7
Hearing Protectors	7
Chain Brake	7
Muffler	7
Modification for Climate	7
Your Physical Condition	7
Protective Equipment and Supplies ..	8
SECTION 1 - PREPARATION	9
Installing SAFE•T•TIP® Device	9
Bar and Chain Assembly	10
Chain Tension	10
Daily Bar and Chain Care	11
Filling the Tanks	12
Starting and Stopping	13

CONTENTS

SECTION 2 - THE WORKING AREA ..	14
Work Area Precautions	14
Handling and Securing the Saw ...	15
Unusual Conditions	15
SECTION 3 - TECHNIQUES	16
Bucking, Limbing, Pruning	16
Variations	16
Spring Poles	17
Boring	17
Tree Felling Techniques	18
SECTION 4 - MAINTENANCE AND REPAIR	20
Homelite® RAKER III™ Saw Chain .	20
Filing Equipment	20
How to File Cutters	20
Corrective Filing	21

Raker (Depth Gauge) Clearance ...	22
Guide Bar Maintenance	22
Clutch and Sprocket	23
Chain Brake	23
Air Filter	23
Carburetor	24
Fuel System	25
Chain Oil Systems	25
Spark Plug	26
Cooling & Exhaust	26
Starter	27
Storage	28
SECTION 5 - KITS AND ATTACHMENTS	29
Bow Saw Attachments	29
Bow Saw Kickback	30
How to Maintain Control	30
Bow Maintenance	31

INTRODUCTION

KICKBACK, PUSH, AND PULL


and how these reaction forces are best controlled.

NOTICE

When properly installed on your saw, the SAFE•T•TIP® Anti-Kickback Device will prevent kickback. The Raker III™ saw chain on your saw is added protection, helping you to control the reaction forces described below when the SAFE•T•TIP device must be removed. However, if you remove the SAFE•T•TIP device temporarily, even for just one cut, you must rely on the techniques described in this owner's manual as your first line of defense and control.


THE REACTION FORCES

In the operation of a chain saw, engine torque is transferred to the chain. This energy is then used to cut wood. But to every force (action) there is always a reaction force in the opposite direction. Thus if the chain contacts wood or any other obstruction where the chain is moving away from the operator, the operator will feel the saw being pushed toward him. And when the work contact is made on the underside of the bar where the chain is moving toward the operator, the person will feel the saw being pulled away from him.

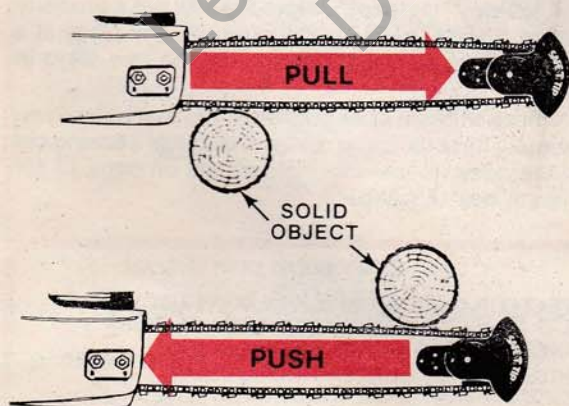

Push and Pull Reactions

THE SAFE•T•TIP DEVICE DOES NOT PREVENT OR REDUCE PUSH AND PULL REACTION.

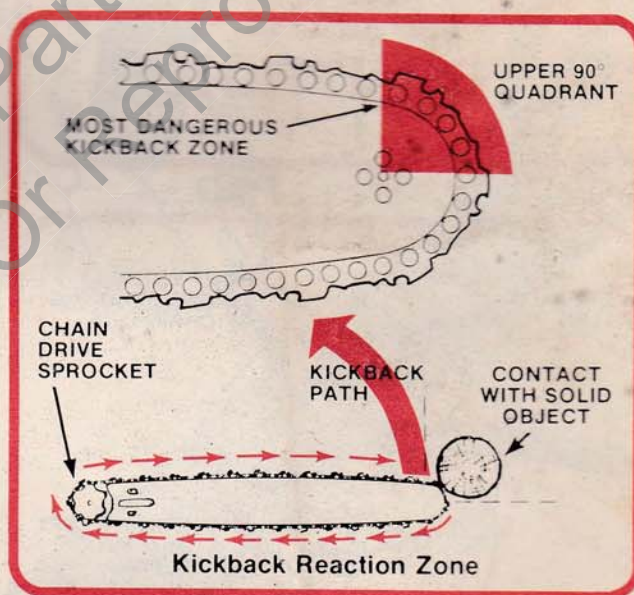

KICKBACK is another reaction, the most dangerous of these reactive forces. It occurs only when solid contact with the moving chain is made at the upper quadrant of the bar nose. A violent kickback will occur any time the chain hits a solid object (or takes too large a cut) while rounding this top quadrant of the bar nose. For the instant that the chain is stopped cold, the engine drives the guide bar to rotate inside the chain loop. This results in a pinwheeling rotation of the chain, the saw, and the bar during which the bar nose kicks back in an arc towards the operator. This is **KICKBACK** the most dangerous of the reactions which can cause loss of control. When properly installed on a saw, a SAFE•T•TIP anti-kickback device prevents kickback. But it is not a general insurance against "accidents" with a chain saw.

OPERATOR IS
DIRECTLY IN LINE
WITH THE CHAIN



HOW TO MAINTAIN CONTROL

1. First of all, you must keep the front handlebar diameter in the webbing between the thumb and index finger of your left hand. This grip helps maintain control of the saw and limits the possibility that your hand will come in contact with the chain. See the illustrations of the correct and incorrect grips.



Do not use a "Monkey Grip" because your hand can slip.

Don't forget to wear your gloves.


2. Hold the front handlebar close to the balance point of the saw (or where you can best oppose and absorb the push, pull and kickback forces of the saw without having it twist out of your grip). Do not reverse right and left hand positions on the saw handles.
3. Get a good grip on the rear handle.
4. Maintain your balance on both feet, and do not reach above chest height with the saw engine, or reach so far forward that you could be drawn off balance by the saw's reactions.
5. Stand a bit to one side so that no point of your body is behind the chain line (in the line the saw will take if it kicks back).

HOW TO REDUCE THE CHANCE OF KICKBACK


1. Avoid letting the nose section of the saw contact any object. Note: A SAFE•T•TIP® device, when properly installed on the bar nose, will prevent kickback.
2. Avoid use of the nose section of the saw for cutting. Cut well back on the straight section of the bar.
3. Be sure to keep your chain sharp and properly tensioned on the saw, because a loose or dull chain is apt to increase the chance of kickback.
4. Use extreme caution when cutting brush, hedges and other "whippy" material. Unless the saw has a properly installed SAFE•T•TIP device, cut only one piece at a time and make sure that the nose of the saw stays in the clear.
5. Never bore with the nose section of the saw unless you absolutely have to. If you really *must* make a boring cut with the nose, follow our instructions on page 17 for minimum risk of kickback.




SAFE•T•TIP DEVICE PREVENTS CONTACT WITH
SOLID OBJECTS, PREVENTS KICKBACK WHEN
PROPERLY INSTALLED

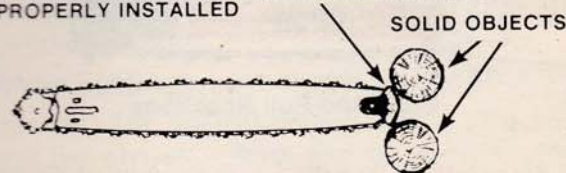

Without the anti-kickback device on your saw you would have to beware of these situations.

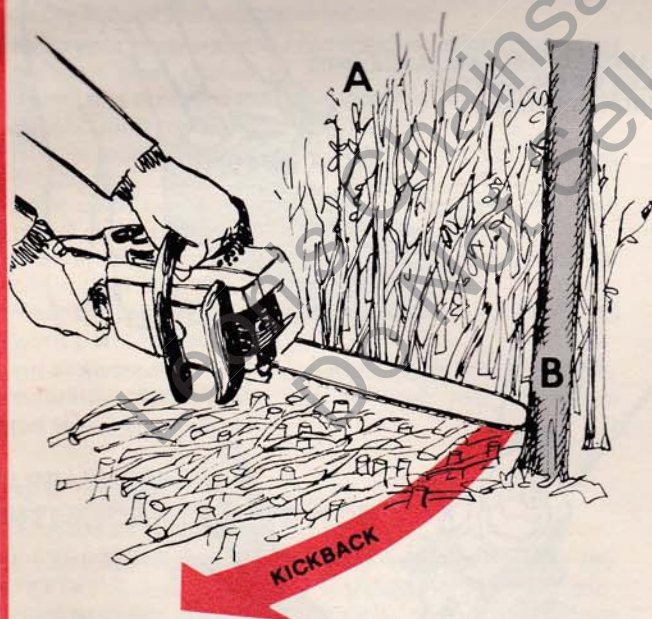

CUTTING MORE THAN ONE PIECE OF WOOD AT A TIME (NOTE THAT CUTTING BRUSH (A) CAN PULL THE SAW SO THAT THE BAR NOSE COULD CONTACT AN OBJECT SUCH AS TREE (B) RESULTING IN A SECONDARY REACTION — KICKBACK.

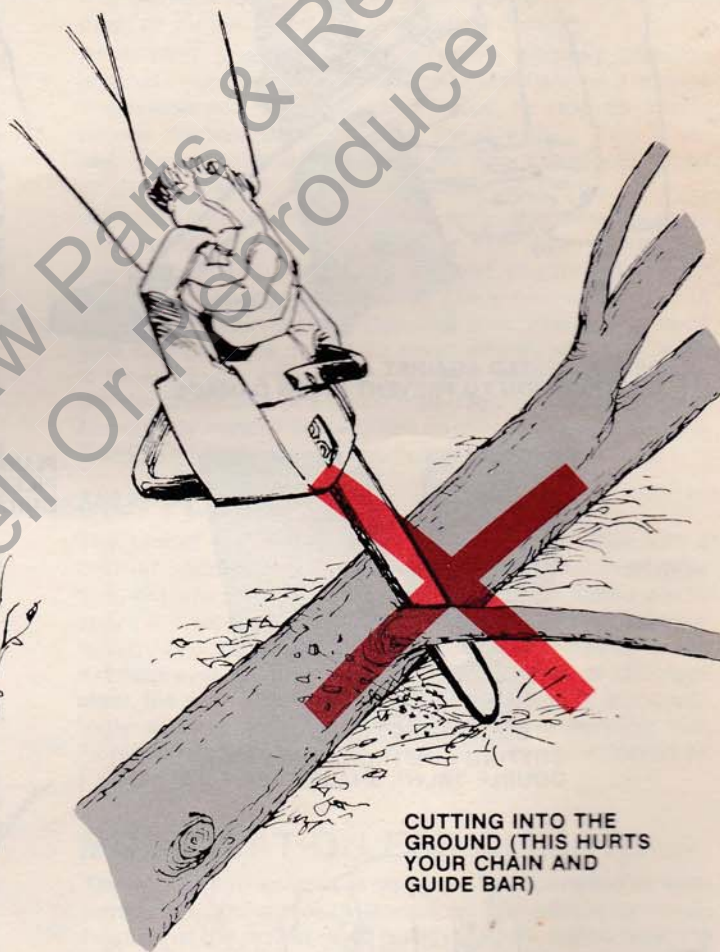

HERE ARE SOME SITUATIONS WHERE THE SAFE•T•TIP® ANTI-KICKBACK DEVICE ACTUALLY MAKES CUTTING FASTER AND EASIER AS WELL AS SAFER.



DEVICE RESTED AGAINST AN OBSTRUCTION TO PREVENT CHAIN DAMAGE



CUTTING IN CLOSE QUARTERS SUCH AS NEAR MASONRY WALL WITHOUT HAZARD OF KICKBACK.




CUTTING ONE TRUNK ONLY OF A DOUBLE-TRUNK SHADE TREE

PLUNGING THE SAW BLADE INTO PILES OF BRUSH FOR QUICK CLEAN-UP.



USE A SCYTHING TECHNIQUE TO CLEAR LIGHT BRUSH

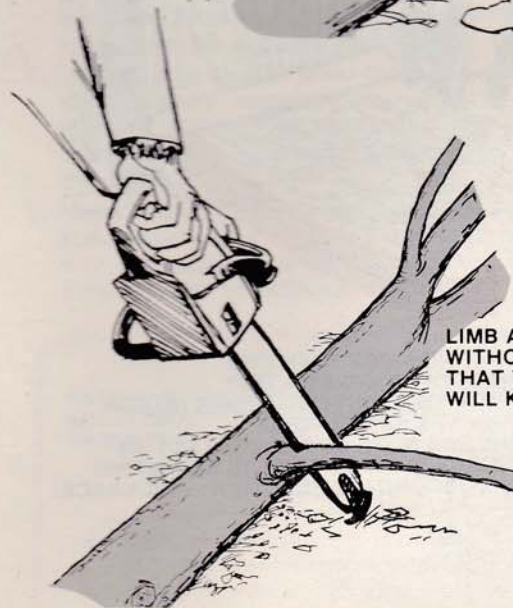

LIMB AND BUCK WITHOUT FEAR THAT THE SAW WILL KICK BACK

FACTS ABOUT YOUR MODEL 410 CHAIN SAW

This Owners Manual covers preparation, safe operation and maintenance of your Model 410 Chain Saw. Be sure to read the Owners Manual before preparing and using your saw.

The Model 410 has a 4.10 cubic inch (67 cc) 2-cycle gasoline engine which is vibration-isolated from the operator control handles by six isolators (three per side). The direct drive saw features both automatic and manual oil pumps, solid state ignition and pyramid reed valve fuel intake. The fuel is a mixture of 2-cycle type engine oil and either leaded or unleaded regular grade gasoline. The guide bar and chain can be lubricated with either a specially formulated bar and chain oil or any grade of clean motor oil. (See instructions for fuel and chain oil).

VIBRATION ISOLATION

It has been reported that vibrations from hand-held tools (chain saws, pneumatic hammers, grinders, sledge hammers, etc.) may contribute to a condition called Raynaud's Syndrome in certain individuals. Symptoms may include tingling, numbness and blanching of the fingers, usually apparent upon exposure to cold. Hereditary factors, exposure to cold and dampness, diet, smoking and work practices are all thought to contribute to the development of these symptoms. It is presently unknown what, if any, vibrations or extent of exposure may contribute to the condition.

This saw is classified in the "professional use" category by many current regulations that differentiate between "professional" and "occasional use" saws. These varied regulations place limits on the amount of vibration which saws can transmit to the operator.

There are measures that can be taken by the operator to possibly reduce the effects of vibration:

- Keep your body warm in cold weather. When operating the unit wear gloves to keep the hands and wrists warm. It is reported that cold weather is a major factor contributing to Raynaud's Syndrome.
- Refrain from smoking (another suspected contributing factor).
- After each period of operation, exercise to increase blood circulation.
- Take frequent work breaks. Limit the amount of exposure per day.
- Keep the tool well maintained, fasteners tightened and worn parts replaced.

If you experience any of the symptoms of this condition, immediately discontinue use and see your physician about these symptoms.

SAFE•T•TIP® ANTI-KICKBACK DEVICE

The Homelite® guide bar for your saw comes with the SAFE•T•TIP device properly installed on the bar nose. Be sure to check tightness of the mounting screw before each use (see page 9). When properly installed the SAFE•T•TIP device prevents chain saw kickback from happening.

YOUR PHYSICAL CONDITION

Work relaxed but stay alert and maintain control of your saw. Take a break from work whenever you begin to tire. Never operate when tired or under the influence of alcohol or any drugs which may affect your balance, alertness, or coordination or judgment. If you have any serious

HEARING PROTECTORS

Long or continuous exposure to high noise levels, such as involved in the operation of a chain saw, may cause permanent hearing impairment or other possible effects. Hearing protection devices are available from your Homelite dealer or can be ordered through him. When ordering, specify "Homelite Hearing Protectors #92810."

CHAIN BRAKE

Even if you purchased a chain brake-equipped model, Homelite has supplied a SAFE•T•TIP® anti-kickback device for it. This is because a chain brake does not prevent kickback any more than a seat belt prevents collisions. A chain brake can only stop chain rotation.

For your safety, rely on the SAFE•T•TIP device to prevent kickback. And depend on using the proper grip and stance, and the safe cutting techniques recommended in this owner's manual to control the forces which tend to push or pull you and the saw during cutting.

At its best, a chain brake offers only partial protection against injury from kickback. In some situations it may be impossible for the brake mechanism to stop the chain before the saw blade reaches the operator. This is especially true in situations where the operator is positioned in close proximity to the saw blade.

A chain brake is not like a fire extinguisher which can be certified to work for a certain time. Too many things like breakage or wear, dirt, dust, sawdust, chain oil, and temperature changes in the chain saw's environment, can lengthen a chain brake's stopping time. The best chance you can give the brake to react effectively is to keep it clean. Even with daily cleaning of the mechanism, the dependability of a chain brake to perform under field conditions cannot be certified or even gauged. Keep the SAFE•T•TIP device on your saw's guide bar.


MUFFLER

The Model 410 has a down-drafting type muffler with a built-in spark arrestor screen and with a stand-off type temperature shield at the front of the saw. In states where spark arrestors are required by law, the Owner/Operator is required to keep it in good condition (intact) in the exhaust system at all times. Although made of stainless steel, the spark arrestor screen is a fine mesh. It is accordingly subject to clogging, cracking, and burning out. Replacement spark arrestor screens may be ordered as Part No. 93344.

MODIFICATION FOR CLIMATE

The Model 410 as sold is designed for operation in temperate to hot climates. A De-icer kit is available for modification of the power head for icy, snowy, below freezing temperatures. With the De-icer Kit installed, the engine heat ducted into the air filter chamber will prevent icing of the filter, carburetor, and carburetor controls even in the coldest temperatures where wood may have to be cut. A damper type control in the modified system permits quick change-over for warm climate operation.

ailment such as a heart condition, check with your doctor before doing any strenuous lifting, reaching, pushing, chopping, shoveling, etc. Always do any lifting jobs with your leg muscles, not your back.

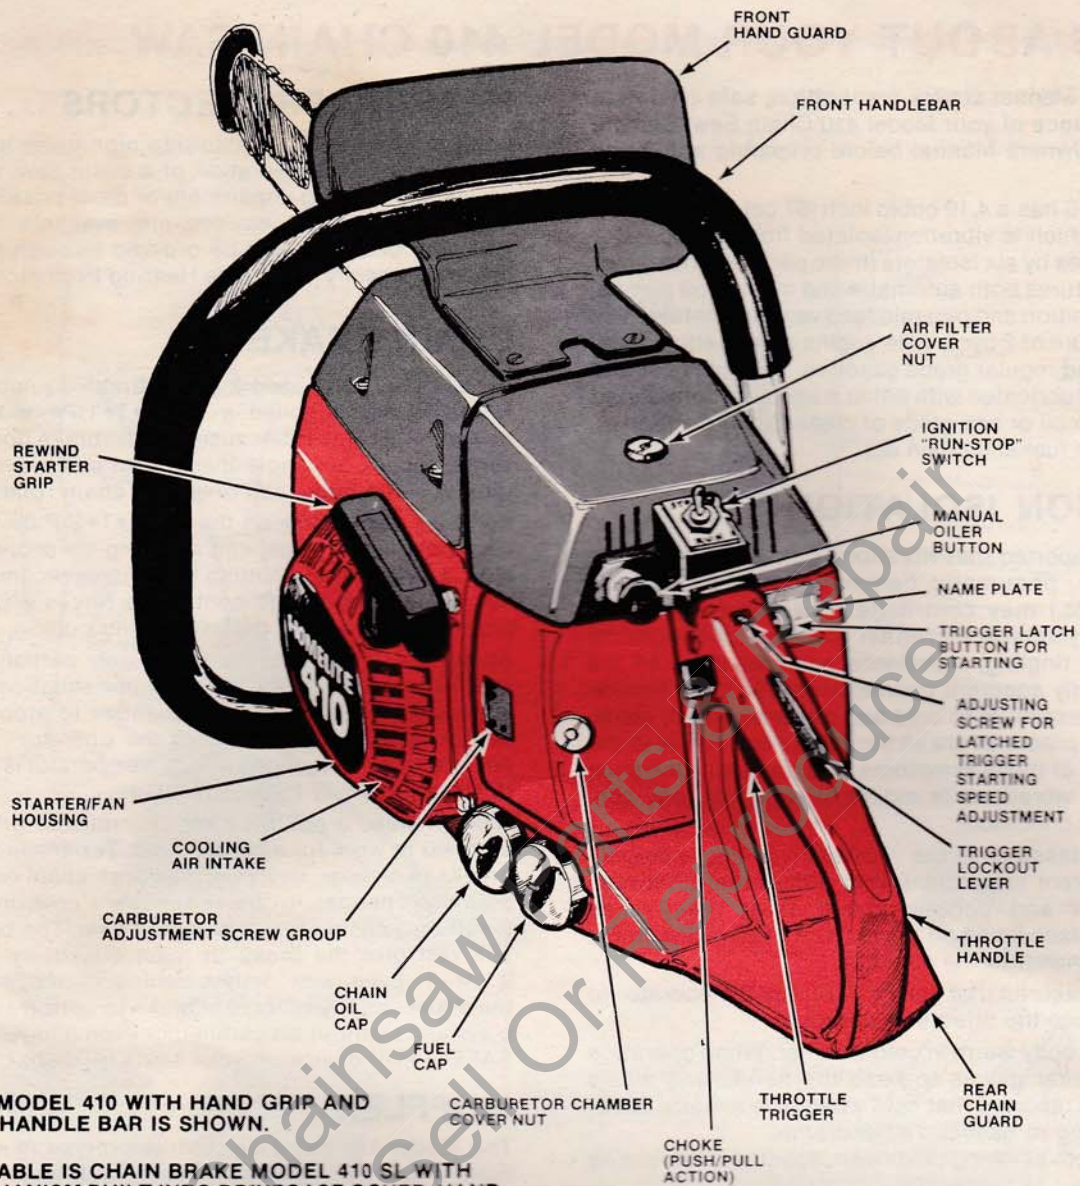

STANDARD MODEL 410 WITH HAND GRIP AND FLUSH CUT HANDLE BAR IS SHOWN.

ALSO AVAILABLE IS CHAIN BRAKE MODEL 410 SL WITH BRAKE MECHANISM BUILT INTO DRIVECASE COVER. HAND GUARD OF MODEL 410 SL IS INTEGRAL WITH CHAINBRAKE.

PROTECTIVE ARTICLES, EQUIPMENT & SUPPLIES



CUFFLESS TROUSERS, TRIM, PROTECTIVE CLOTHING



BAR AND CHAIN COVER FOR TRANSPORT



NON-SLIP SHOES AND GLOVES



FUEL IN CONTAINER



SAFE-T-TIP DEVICE



EYE PROTECTION (Goggles or Mask)




CHAIN OIL



HEAD PROTECTION (Hard Hat)



PLASTIC OR WOODEN WEDGES



SHARP AXE



HEARING PROTECTION



HAND TOOLS



SPARE FILTERS



FIRST-AID KIT



CHAIN FILING TOOLS



SPARE SPARK PLUG



FIRE EXTINGUISHER AND SHOVELS



SPARE STARTER ROPE




SPARE CHAIN

SECTION ONE - PREPARING FOR USE

CAUTION

Always wear gloves to protect your hands when working on the chain. And be sure the switch is in the "STOP" position whenever you do any work on the saw.

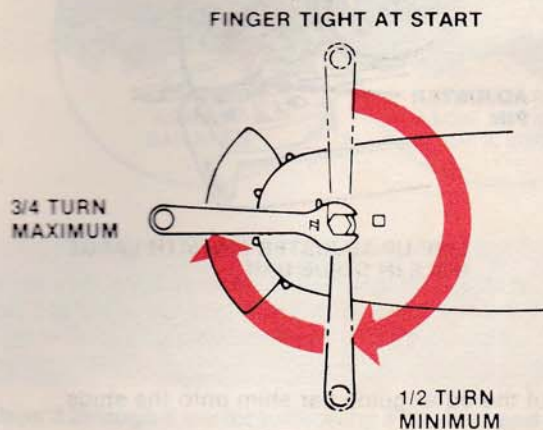

Tightening the SAFE•T•TIP® Device.


MOUNTING ANTI-KICKBACK DEVICE

IMPORTANT NOTICE

The Model 410 chain saws are designed for use with 3/8 pitch RAKER III,™ kickback-reducing, semi-chisel tooth type 38ME-50 saw chains, and guide bars of from 16-inch to 31-inch cutting length. Do not adapt any guide bar or bow guide, or any other attachment or device to the 410 power head unless such item is recommended specifically for use with the Model 410 chain saw by Homelite.

Before each period of operation, tighten the mounting screw of the SAFE•T•TIP® anti-kickback device as instructed below. This mounting screw is specially hardened. If it cannot be installed tightly, replace both the screw and the device before further use of the saw.

1. In addition to preventing chain contact with solid objects at the nose of the bar, the SAFE•T•TIP® device also helps keep the chain away from abrasive surfaces such as the ground. We recommend keeping the device on the righthand side of the bar, where it will be be-

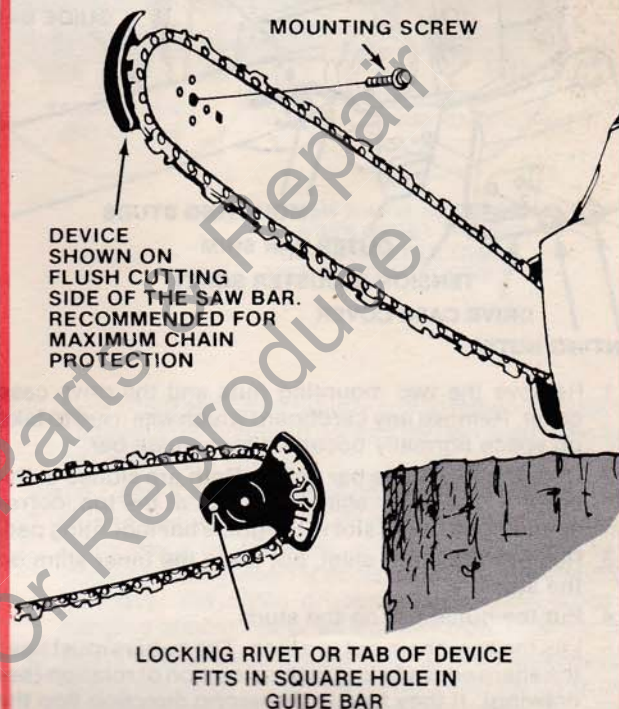


Mounting SAFE•T•TIP® Device.


tween the chain and the ground during FLUSH-WITH-THE-GROUND cutting.

2. The device has a 1/4-20 x 5/8" mounting screw. It requires a 3/8" wrench (or adjustable wrench) to achieve the recommended tightness of 70 to 100 inch-pounds (8-11 Nm). A tightness within this range can be achieved by the following method.
 - a) Mount the device on the bar nose (see illustration). Tighten the screw with your fingers.
 - b) From the finger-tight position, tighten the screw 1/2 turn to 3/4 turn more with a wrench.

BAR AND CHAIN ASSEMBLY

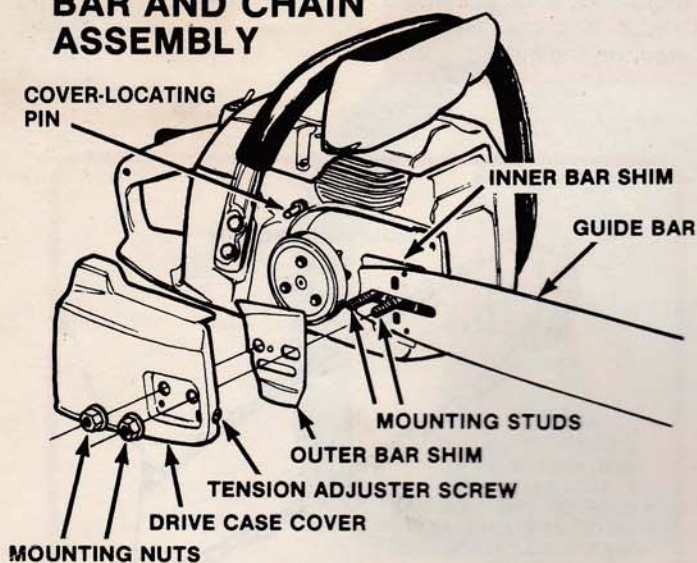


1. Remove the two mounting nuts and the drive case cover. Remove any cardboard which was used to take up space normally occupied by a guide bar.
2. Note the two guide bar shims. Both are slotted at the bottom. The inner shim has a slot at the top, corresponding to the oil slot in the guide bar mounting pad.
3. Remove the outer shim, but leave the inner shim on the studs.
4. Put the guide bar on the studs.
5. Lay the saw chain out in a loop. The cutters must have the sharp edges falling in the direction of rotation (see drawing). If they face in the wrong direction flop the loop over and they will face correctly.
6. Pick up the loop and arrange one end over the clutch drum and around the chain drive sprocket.
7. Starting from the top of the sprocket, feed the chain drive links into the chain groove along the top of the guide bar. Keep doing this until the chain goes into the groove around the nose of the bar.
8. Slide the bar forward, away from the drive sprocket to take up the chain slack. See that the chain drive links are properly in the groove.

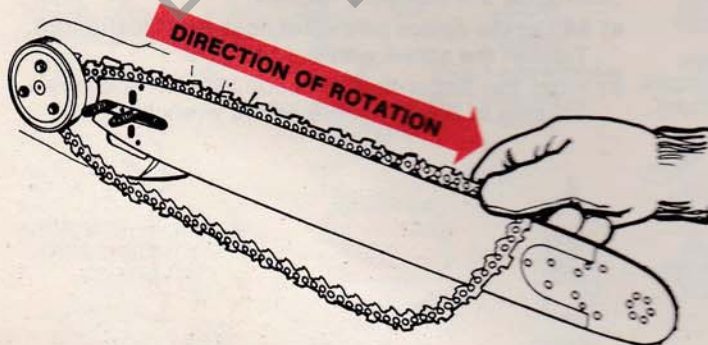

ARRANGE CHAIN AROUND SPROCKET AND FEED DRIVE TANGS INTO BAR GROOVE.

CAUTION
Always wear gloves to protect your hands when working on the chain. And be sure the switch is in the "STOP" position whenever you do any work on the saw.

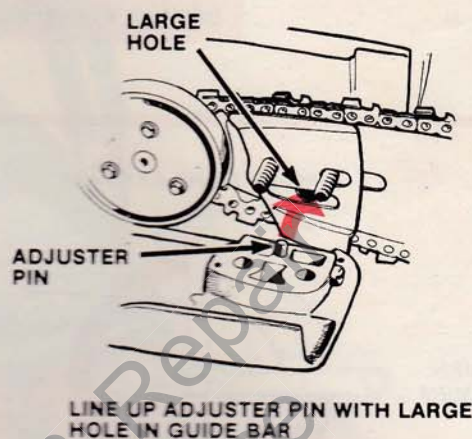

9. Put the outer guide bar shim onto the studs.

NOTE

The chain brake mechanism of the Model 410 SL is contained in the drive case cover. Before performing step 10, relax the brake band to fit onto the clutch drum by pulling the hand guard and lever to the rear.


10. Pick up the drive case cover, and place it into the studs. Note the tension adjuster pin in the drive case cover and the hole in the guide bar into which the pin must go. Turn the adjuster screw toward the pin as required for engagement of pin in hole.
11. When pin and hole are aligned for engagement, push the drive case cover into perfectly flush register with the drive case. DO NOT FORCE - If out of register, recheck the assembly for something out of place.

CHAIN TENSION

1. Mounting nuts should be finger-tight. Turn the adjuster screw clockwise to remove slack in the chain. Tighten until the chain tie-straps come up close to the bottom bar rails.
2. With your gloved hand "snap" the chain several times by pulling up and letting go of the chain. As this removes some of the stiffness, the chain may hang or droop from the bar.



MOUNTING NUTS SHOULD BE ONLY FINGER TIGHT DURING TENSION ADJUSTMENT, THEN TIGHTENED FULLY AFTER TENSION IS SET.

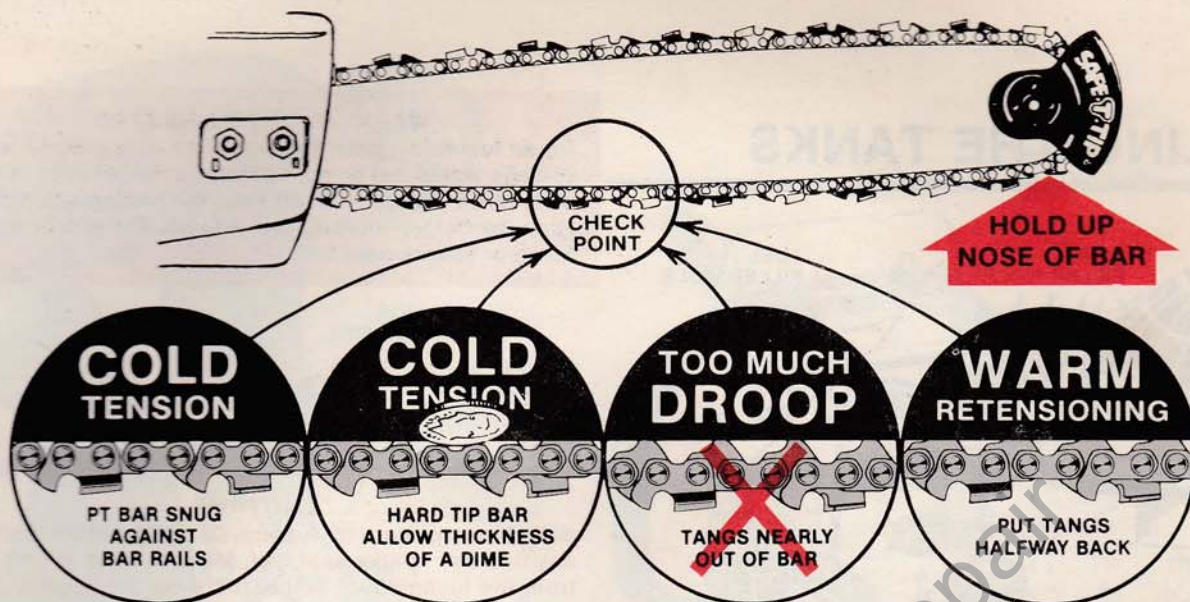

NOTE

From now on during the tensioning, hold up the nose of the bar until the mounting nuts have been tightened. This is to take up play between the bar slot and the mounting bolts.

Steps 3 through 6 are for tensioning a cold bar and chain.

3. The proper tension is according to the type of bar nose.
 - a) Sprocket nose (PT or SP) bar: Increase tension until there is no clearance (zero droop) between the chain and bar. Pull chain along bar as you increase the tension. If you feel any binding, that is too tight.
 - b) Hard nose (GW series) bar: Increase tension until the amount of clearance or "droop" between the bar rails and the chain tie-straps is no more than the thickness of a dime or penny.
4. While holding up the bar nose, tighten the nuts to lock the bar at proper tension.
5. Pull chain around bar by hand to check that assembly is correct. Start engine. Hold the saw free of obstructions and let the chain turn at slow speed for a few seconds. If droop develops, shut down the saw and reset the tension.
6. For the first few tankfuls of fuel make light cuts only. Watch the tension. When the chain tangs hang more than halfway out of the bar, shut down and retension.

New chain stretches rapidly due to the combination of limbering up, warming up, and friction wear of both the bar and chain surfaces.

Steps 7 and 8 are for retensioning a warm chain.

7. During operation, the chain will expand as it warms up. Once worn in, however, it will return almost to the original setting when it cools. Shut down immediately whenever the chain droops to where the tangs are hanging almost out or all the way out of the bar rails.
8. Warm chain should have the tension increased to where the tangs are drawn halfway into the bar groove. Hot chain cannot be tensioned accurately and should be allowed to cool.

CAUTION

After being tensioned while warm, chain may be too tight upon cooling. Check the "cold tension" before next use.


9. Tighten the mounting nuts when the tension has been set. Then you need not hold up the bar nose.

DAILY CARE OF BAR AND CHAIN


1. At the end of each day of operation remove the chain and guide bar. Clean the sawdust from the guide bar mounting pad, the clutch area and the drive case cover. Clean out the oil discharge hole in the guide bar mounting pad. Clean out the oil entry holes and the chain groove in the guide bar.
2. Sprocket nose guide bars must be lubricated while still warm from use, at the end of each day of cutting. Using needle nose of Lube Gun #24258-1 filled with HOMELITE® ALL-TEMP Multi-Purpose Grease, or our prepacked lube gun, pump grease into the sprocket nose bearing through the small grease hole in the side of the bar nose. Keep pumping until the dirty grease is forced out and fresh grease oozes out of the nose. This removes sawdust, dirt and moisture from the bearing. If bar is lubricated when cold, the old grease may not

come out. Sprocket nose bars in continuous use should be lubricated on-the-job every 1-1/2 to 2 hours. A sprocket nose bearing is good as long as it turns freely with no roughness or binding. However, it can be replaced with a new sprocket nose assembly whenever necessary.

BAR NOSE SHOULD STILL BE WARM WHEN NOSE IS LUBRICATED

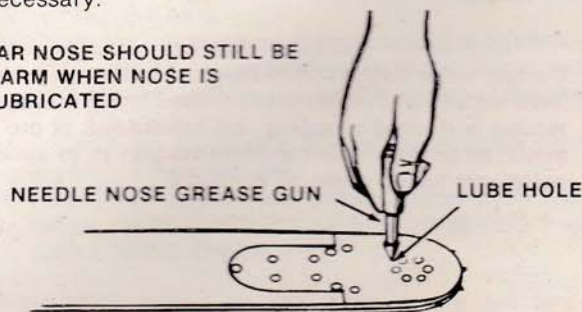

FILLING THE TANKS

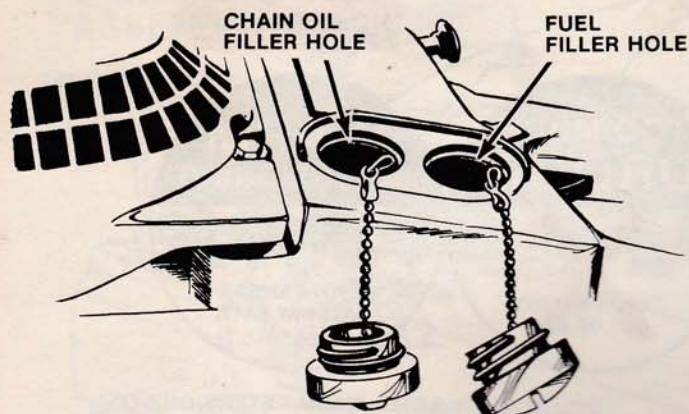

1. Turn saw to the side so that the filler caps are on top (as illustrated).

CAUTION

Always loosen caps very slowly and wait for any pressure in the tanks to be relieved before you remove the caps.

2. Always fill the chain oil tank every time you add any fuel to the fuel tank. This will assure you that there is oil for the chain whenever you start and run the saw.
3. After filling the tanks, screw the caps back on tightly, and wipe up any spilled fluid.

CHAIN OIL

1. Our recommendation is to use Homelite® Bar and Chain Oil because it is designed expressly for bar and chain use without dilution throughout summer/winter climate conditions. Bar and Chain Oil is formulated with ingredients intended to minimize the problem of throw-off. Fill the oil tank right from the container. No mixing, no dilution necessary.
2. Any clean engine oil, including reprocessed oils, can be used as a chain oil. For warm climate conditions use an SAE 30 weight oil. In weather near or below freezing (0°C) where SAE-30 oil will thicken, either dilute it with enough kerosene (up to 25% as required) to restore its free-flowing property, or switch to a lighter oil such as SAE-20 or SAE-10.

DISAPPROVED

Certain water-based synthetic chain lubricants which we have tested have resulted in minimal chain and bar protection and rapid clogging and breakdown of our automatic oil pumps. Our recommendation is to stick with petroleum based chain oil products.

WARNING OF FIRE HAZARD

Do all fuel mixing and pouring over bare ground, where spillage would not be apt to cause a fire. Always move at least three meters (10 feet) from the fueling site and fuel supplies before starting the engine. Do not bring any flame or sparks near fuel.

FUEL

WARNING

This fuel tank may be under pressure. Remove cap slowly.

CAUTION

Select bare ground for fueling. DO NOT SMOKE or bring any flame or sparks near fuel. Move at least 10 feet (3 m) from the fueling spot before cranking the engine.

1. Recommended Fuel Ingredients:

- a) Unleaded gasoline is preferable as leaded gasoline will result in spark plug fouling at a faster rate.
- b) Your 2-cycle engine is lubricated by oil mixed with gasoline. We recommend the exclusive use of a Homelite® high quality 2-cycle engine oil. Any Homelite 2-cycle engine oil, when mixed with gasoline according to the instructions on the oil package, will provide complete lubrication protection for your new saw.
- c) All Homelite 2-cycle engine oils contain an anti-oxidant fuel stabilizer. Under average conditions, fuel mixed with Homelite oils will stay fresh up to 12 months.
- d) If Homelite oils are not used, we recommend stabilization of fuel with an anti-oxidant fuel stabilizer such as Sta-bil, a product of Knox Laboratories, Chicago, Ill. 60616. Unstabilized fuel will stay fresh for only up to three months and should not be used after that time.
- e) If other than Homelite oils are used, mix in the ratio of 16 parts gasoline to 1 part 2-cycle oil (1 gallon: 8 oz.) regardless of the ratio given by the manufacturer of the oil.

WARNING


Never mix fuel directly in the saw tank. Always use clean fuel cans for both mixing and storage of fuel. Do not use glass bottles (which can shatter or explode) or plastic jugs (which were not intended for gasoline storage and might contaminate the fuel).

2. How to Mix Fuel Thoroughly:

- a) Measure out the quantities of gasoline and oil to be mixed.
- b) Put some of the gasoline into the mixing can.
- c) Pour in all of the oil and agitate contents by stirring or by shaking the can.
- d) Pour in all of the gasoline. Again stir or agitate — this time for at least one minute.

3. Disapproved Fuel Ingredients:

- a) GASOHOL. Alcohol draws moisture. Then "peroxides" and acids form in the fuel and the engine parts.
- b) MULTI-GRADE OILS or any other oils not expressly labelled for 2-cycle engine use. Products formulated for 4-cycle engines usually contain additives which are either harmful or of no value in 2-cycle engine service.

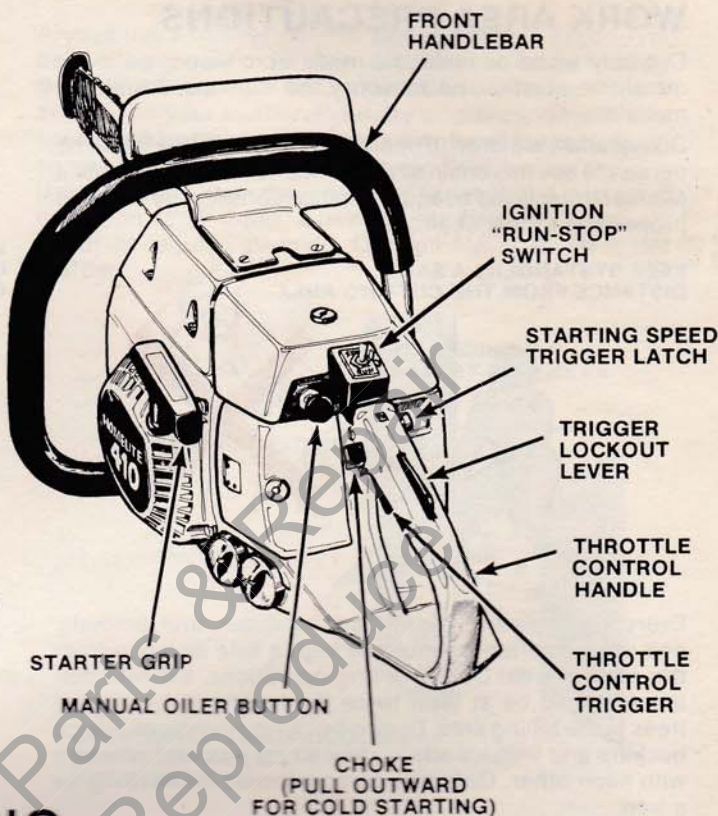

STARTING AND STOPPING

1. Set saw down on a clear, level spot where the saw chain will not be obstructed. Pre-lubricate the chain whenever chain is first mounted on the saw or re-mounted.
2. Pull the chain along the bar by hand and stroke the **manual chain oiler** until you can see oil coming onto the chain.
3. Flick the **switch** to "RUN."
4. Pull the **choke lever** outward.
5. Grasp **throttle handle** to depress **throttle lockout lever** and squeeze the **trigger**. (Note that trigger cannot be moved unless the throttle lockout lever is depressed.)
6. While squeezing the trigger, push and hold in the **throttle latch button**. And let go of trigger first. This latches the trigger for starting.
7. Keep your body to the left of the saw. Hold the saw down with the left hand on top of the front handle bar. (Note: You can also place the toe of your footwear in the throttle handle platform to hold down the rear.)
8. Grasp the **starter grip** with your right hand. Pull the starter grip straight up to spin the engine rapidly. Use the following sequence for starting:
 - a) Crank repeatedly with **full choke** (choke out). It may take a few cranks to prime the fuel system.
 - b) As soon as the engine coughs or fires a few times, go to **halfchoke** and crank to start.
 - c) When engine runs, smoothly push in the choke (to open position). If you push too fast the engine may die. If you wait too long it will also die from lack of air.
9. Squeeze the trigger, this unlatches the throttle latch and gives you control of the throttle for cutting.
10. To stop, flick the switch (to "STOP" position) with your thumb.
11. While the engine is still warm from recent operation, it can be started without the choke and without latching the throttle latch. When it has begun to cool, however, try starting at half-choke position with the trigger latched. If this does not work, crank to start at full choke.
12. **Overcranking Remedy:** The fuel system can flood and the spark plug can become "wet-fouled" if the unit was bumped and jostled during transport or if the saw was cranked a lot with the choke wrongly set. If you suspect this condition, do as follows:
 - a) Take out the two housing screws and remove the cylinder cover to expose the spark plug.
 - b) Disconnect the spark plug boot from the plug and remove the plug.
 - c) Crank the engine three or four pulls at open choke and open throttle (by holding the trigger depressed with one hand). This purges the engine of excess fuel.
 - d) Install a dry spark plug (or use the old plug after wiping it clean and dry).
 - e) Reconnect ignition wire, install cylinder cover and follow starting instructions from paragraph 1 to start a (Cold) Engine.

TROUBLE-SHOOTING NOTE: Whenever the engine cannot be started you should refer to the detailed instructions in the Maintenance Section for filter cleaning, ignition spark testing, fuel system testing and carburetor adjustment.

SECTION TWO — THE WORKING AREA

WORK AREA PRECAUTIONS


Cut only wood or materials made from wood; no sheet metal, no plastics, no masonry, no non-wood building materials.

Do not allow children to operate your saw, EVER. Allow no person to use this chain saw *who has not read this Owner's Manual* or received adequate instructions for the safe and proper use of this chain saw.

KEEP BYSTANDERS A SAFE DISTANCE FROM THE CUTTING AREA



Everyone—helpers, bystanders, children and animals, and other operators—must be kept a safe distance from the cutting area. During felling operations, the safe distance should be at least twice the height of the largest trees in the felling area. During bucking operations, space buckers and limbers adequately so they cannot interfere with each other. Only one person should be working on a tree.

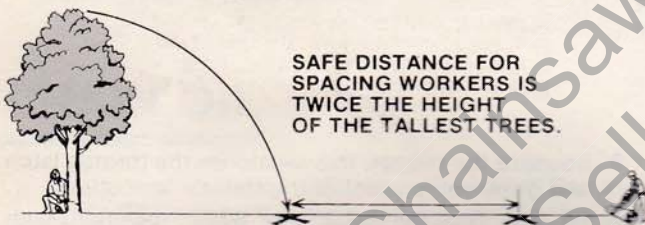

SAFE DISTANCE FOR SPACING WORKERS IS TWICE THE HEIGHT OF THE TALLEST TREES.



WEDGE IS USED TO HOLD CUT OPEN

STAND ON UPHILL SIDE WHEN CUTTING BECAUSE LOG MAY ROLL.

During bucking operations always cut from the uphill side so that the cut-off section of the log will not roll over you. You can be pulled off balance if you have your weight all on one leg, so be sure to stand with both feet on solid ground. Make sure that cut-off wood will not fall on your toes or on your head. Do not cut straight overhead for this



OPERATOR HAS POOR CONTROL OF SAW IF HE OVERREACHES OR CUTS ABOVE CHEST HEIGHT.

WHEN LIMBING, STANDING WITH THE LOG BETWEEN YOU AND THE WORK OFFERS MAXIMUM SAFETY.



LEAVE SOME SUPPORTING BRANCHES UNCUT. AFTER YOU HAVE BUCKED UP THE LOG SECTIONS YOU CAN CUT OFF THESE LAST FEW LIMBS

In areas near roadways or power lines, do not operate until you have permission from the authorities. When working near roads, you must post flagmen to control traffic. If you accidentally knock down a power line or discover one that is down, DO NOT GO NEAR IT, but notify the power company as soon as you are able. A downed power line is a good illustration of why woodsmen should pair up and always keep within calling distance of one another. In the event of trouble such as this, one man can stand guard while the other summons help.



DON'T GO NEAR DOWNED POWER LINES. SEND SOMEONE TO NOTIFY THE POWER COMPANY. STAND BY TO WARN OTHERS TO KEEP CLEAR.



CUTTING ALOFT OR FROM LADDERS IS EXTREMELY DANGEROUS.



KEEP WITHIN CALLING DISTANCE OF OTHERS IN CASE HELP IS NEEDED.

When the diameter of the wood is large enough for a wedge to be inserted in the cut behind the saw chain, use a wedge to hold the cut open when there is a danger of pinching the saw blade. When felling large trees, wedges should also be used to control the fall. Never use hard metal wedges which could damage the saw chain.

Clear your working area of all materials likely to trip you, snag the saw, catch fire from the hot exhaust, or block your safe retreat from a falling tree.

Before cutting limbs or felling trees, inspect the area to be sure the wood will not strike buried pipelines or damage property.

HANDLING AND SECURING THE SAW

ALL EQUIPMENT MUST BE SECURED IN VEHICLES WITH STRAPPING OR TIE-DOWNS. PERSONNEL SHOULD NOT BE TRANSPORTED IN THE SAME COMPARTMENT AS EQUIPMENT AND FUEL SUPPLIES.




Inspect your saw every day before use. Keep the fuel cap, oil cap and air filter cover on tightly. Check condition of the fuel line, spark plug and spark plug wire. **DO NOT OPERATE IF THE ENGINE BACKFIRES OR THE SAW LEAKS FUEL.** Have your saw serviced by an authorized servicemen. Be sure to keep your saw chain in proper condition on the saw. Remember that a dull or loose chain snags more easily than a sharp, snug chain. Touch up the chain after two hours of steady cutting and sharpen it thoroughly after 8-10 hours of use. (See Chain and Bar Maintenance in Section 4.) If chain is damaged by abrasives or hits a stone or nail, put on a spare chain immediately and have the damaged chain repaired and sharpened.

If there is anything wrong with the saw have it fixed before further operation. The idle speed adjustment should be maintained so that the chain stops moving after the engine is brought back to idle. Adjust the idle speed whenever necessary (see Section 5).

NOTE

Do not disassemble the rotor (flywheel). Special techniques are required (on a dealer level) for safe removal and installation of the rotor. Never start up your engine unless the guide bar and chain are installed. Without the guide bar in place, the clutch can fly off or explode.

Always use a muffler on your saw and keep it in good repair. A faulty muffler (or open exhaust) can cause hearing damage and is also a fire hazard. Be sure to use a spark arrestor on your muffler under dry woods conditions, and always when required by the law or local authorities. In some states, a spark arrestor is required by law and it is the operator's legal responsibility to see that it is in good condition at all times. Check the muffler and spark arrestor at regular intervals. Careful! Never touch a hot muffler.

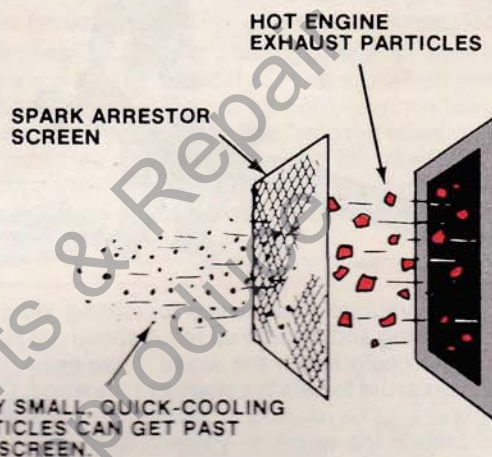

A SPARK ARRESTOR IS ONLY ABOUT 90% EFFICIENT IN PREVENTING FIRES. LOCAL AUTHORITIES MAY CLOSE THE FOREST DURING EXTREMELY DRY PERIODS.



UNUSUALLY HAZARDOUS CONDITIONS

Do not fell trees or go underneath them during periods of high wind or heavy precipitation. Take no chances during periods of extreme hazard. You can wait to do your cutting after the hazard has ended.

Do not use saws to cut down trees having an extreme lean or large trees that have rotten limbs, loose bark, or hollow trunks. Have these trees pushed or dragged down with power equipment. Then you can cut them up.


Work only when visibility and light are adequate for you to see perfectly what you are doing.

SECTION THREE - TECHNIQUES OF CUTTING

When you are going to cut wood — DO IT RIGHT!

BUCKING, LIMBING AND PRUNING TECHNIQUES


For your first cutting experience, set up a small log so that one end is off the ground. Practice your overbucking technique by cutting firewood length sections off the raised end. (See illustration.)

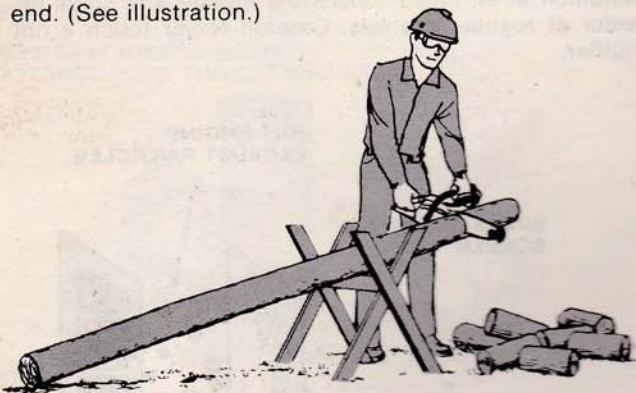

1. Position yourself and the saw for cutting. Hold the saw near the log and throttle up to full speed just before letting the chain touch the wood. Then exert moderate feed pressure to help the chain cut the wood. The chain must always be running at full throttle speed when it is contacting the wood, or you will burn out the clutch.
2. If desired you can pivot the saw blade back and forth during cutting. This often helps to speed up the cutting a bit.




3. You will notice a slight amount of *pull* reaction during cutting. So be ready for the moment the saw breaks through the wood and *pull* ceases. You must be ready to stop pushing down on the saw and hold the saw nose up. The moment the chain breaks clear, release the throttle trigger so the engine will not overspeed.

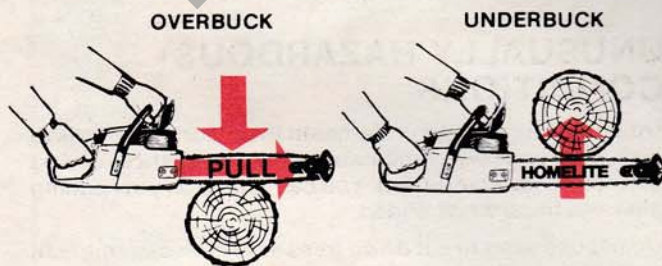




4. When you have mastered the overbucking technique, try underbucking to see what it feels like.

Place the saw blade under the log. Throttle up and exert upward pressure to cut clear through. Now you are ready to learn when to overbuck and when to underbuck in order to avoid pinching the chain in the wood.


CUTTING VARIATIONS ACCORDING TO THE STRESS FACTORS

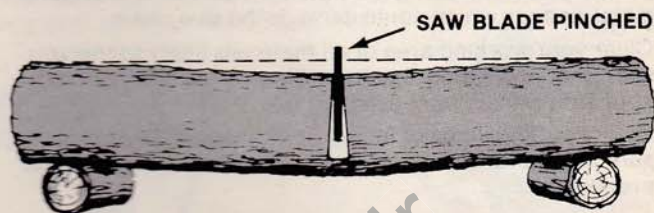


When the piece to be cut is supported on the ends, but not along the point where you want to cut, it will bend as you make your cut. If you are overbucking a log that will bend downward at the cut, your saw will be pinched if you cut more than $\frac{1}{3}$ the log diameter. So overbuck $\frac{1}{3}$, then remove the saw and finish with an underbucking cut from the bottom of the log. This $\frac{1}{3}$ - $\frac{2}{3}$ cutting technique helps to avoid pinching of the saw and splitting of wood that is under stress. With small diameter wood, you can make the whole cut by underbucking as long as you don't care if the wood splits. The reverse of the above is true when the log is such that the log will bend upward at the cut. In this case, underbuck $\frac{1}{3}$ through, and then overbuck so that the cut will open up instead of closing on the saw blade.

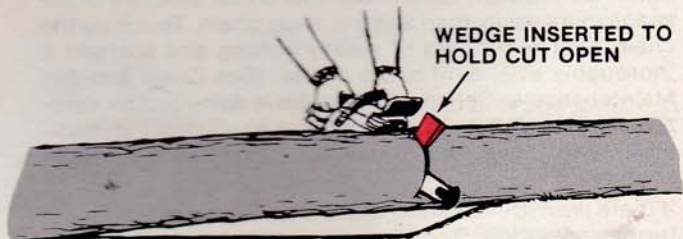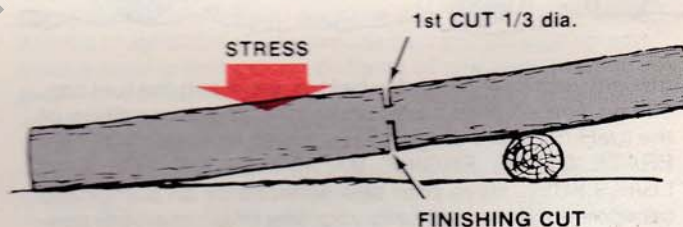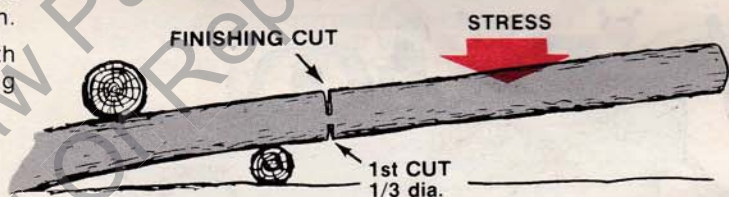

Sometimes it is impossible to avoid pinching (with just standard cutting techniques) or difficult to predict which way a log will bend when cut. You can do this to prevent pinching: If the wood diameter is large enough for you to insert a soft bucking wedge without touching the chain, you should use the wedge to hold the cut open. Sometimes a pocket in the ground will allow the cut section of log to settle, resulting in a pinch. The wedge is also useful here, but in this case you can cut on a slight angle (as illustrated) so that any settling of the log will result in increasing the gap between the cut log sections.

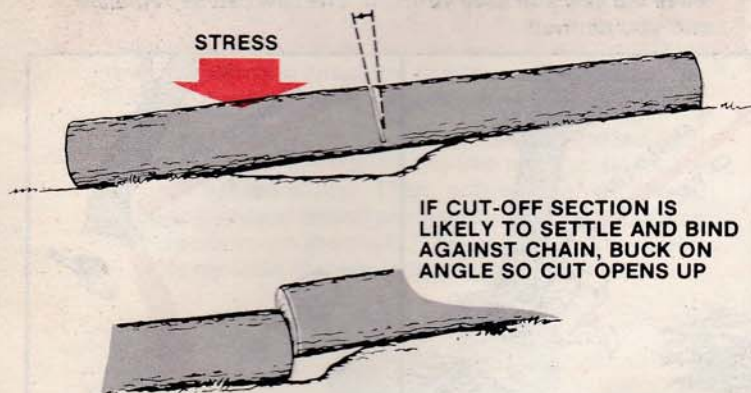


When pruning shade trees it is important not to make the flush cut next to the main limb or trunk until you have lopped off the limb further out to reduce the weight. This prevents stripping the bark from the main member. Unless the branch to be pruned is supported by another branch, the stress will be downward (see illustration). Underbuck the branch 1/3 through, then overbuck to drop the branch off. Now make your finishing cut smoothly and neatly against the main member so the bark will grow back to seal the wound.

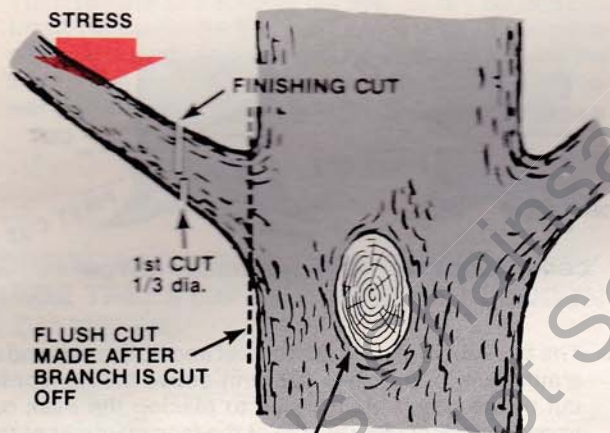

WHEN BRANCHES ARE TRIMMED NEATLY FLUSH WITH THE TRUNK, THE BARK CAN GROW BACK TO SEAL THE WOUND

SPRINGPOLES

A springpole is any log or branch or sapling which is bent under tension by other wood so that it will spring back if the wood holding it is cut or removed. Watch out for springpoles. They are potentially dangerous.

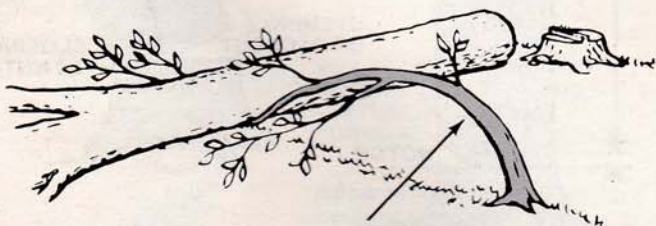

THIS IS A SPRINGPOLE BENT DOWN UNDER HIGH STRESS


BORING WITH THE NOSE SECTION

KICKBACK DANGER

There is a great possibility that the saw will kick back during the start of the boring cut.

Boring should be attempted only by experienced operators because it requires extreme care and attention to proper technique. Do not bore unless there is no other way to make a cut. Boring is usually resorted to in order to avoid an obstacle or when it is necessary to make blind holes such as cut-outs for log cabin windows. The SAFE•T•TIP® anti-kickback device must be removed for a boring cut. Boring increases the chance of kickback and also wears the chain and bar at an accelerated rate. Although it may not prevent kickback from happening, the Raker III™ chain on your saw may help you to keep control by reducing the force of a kickback reaction.


Study the panel illustrating a boring operation. As shown, the danger will be minimized if you can make first contact on the underside of the bar as far back from the bar nose as you can get. Then cut downward into the wood until the tip is buried in the cut. Gradually bring the saw level, then bore through the wood to full length of the blade. Now you can cut either upward or downward through the wood as shown in the panel.

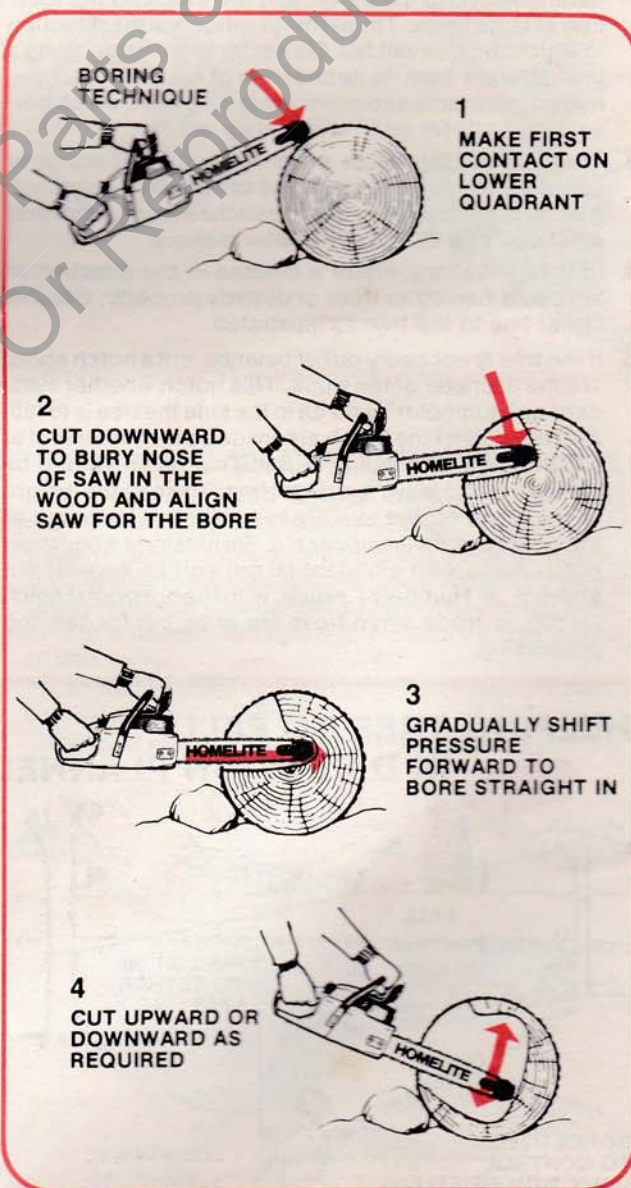



TREE FELLING TECHNIQUES

CAUTION

If the saw gets caught or hung up in a tree during felling, leave the saw and save yourself. The saw can be replaced and you cannot!

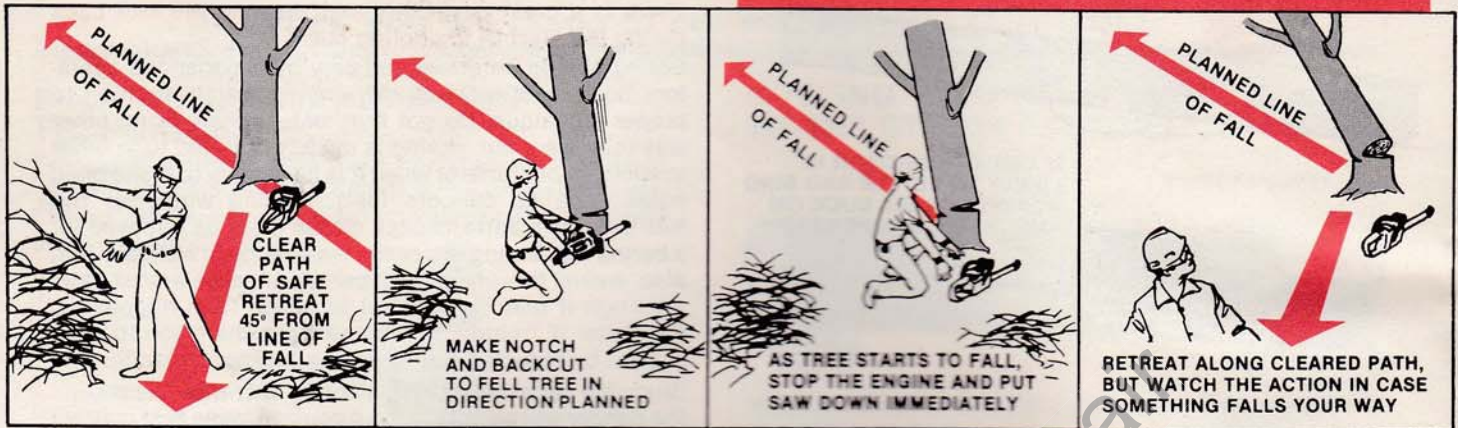

1. Pick your escape route (or routes in case the intended route is blocked). Clean the immediate area around the tree, and make sure there are no obstructions in your planned path of retreat.
2. Consider the factors of wind direction and velocity, the natural lean and the balance of the tree, and the location of large limbs. These things influence the direction in which the tree will fall. Do not try to fell a tree along a line different from its natural line of fall until you have had considerable experience in felling trees which present no problem as to where they will fall.
3. Take into consideration whether the trunk is sound or so rotted inside as to snap and crash while being cut. Also look for broken or dead branches (widow makers) AND don't go below any widow makers.
4. In tight situations where a mistake in the direction of fall could ruin other trees or destroy property, attach a tether line to the tree as illustrated.
5. If the tree is not badly out of balance, cut a notch about 1/3 the diameter of the trunk. This notch whether standard or "Humboldt" is made in the side the tree is to fall. And the cuts of the notch are made so they intersect at a right angle to the line of fall. This notch should be cleaned out to leave a straight line. To keep the weight of the wood off the saw always make the lower cut of the notch before the upper cut. We illustrate a common notch made with a horizontal cut and an angular cut above it. A "Humboldt" notch, with the horizontal notch on top, is made when trees are to be cut for saw log processing.

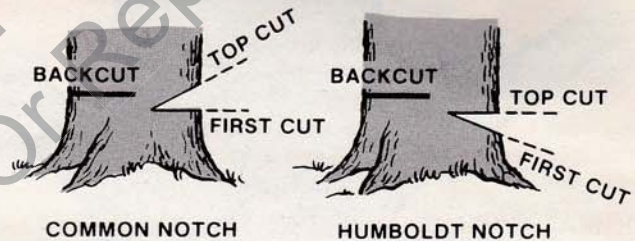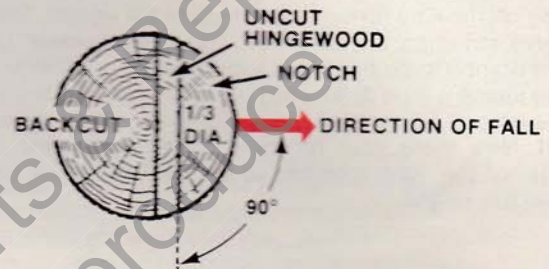


6. The backcut is always made level and horizontal and at a minimum of 2 inches (51 mm) above the horizontal cut of the notch. As a guide to placing the back cut above the notch, figure 10% of the face diameter as the proper height. Be very careful to make a level back cut, as a slanted back cut can cause the tree to split or "barber chair" (see illustration).
7. You must never cut through to the notch. Always leave

HELPING TREE TO FALL IN DIRECTION PLANNED




MAKE BACKCUT 2" OR MORE ABOVE HORIZONTAL CUT OF NOTCH

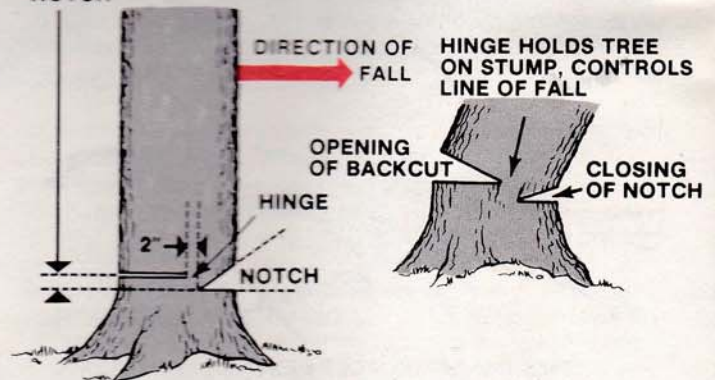

a band of wood uncut between the notch and back cut. This is called "hinge" or "hingewood." It controls the fall of the tree and prevents slipping or twisting or shoot-back of the tree off the stump. If the tree starts over in the wrong direction, or if the saw gets caught or hung up during the fall, leave the saw and save yourself!

8. On large diameter trees, it is proper to stop the back cut before it is deep enough for the tree to either fall or settle back on the stump. Then, soft wooden or plastic wedges (not hard metal) are inserted behind the saw so they do not touch the chain. The wedges can be driven in, little by little, to help jack the tree over.

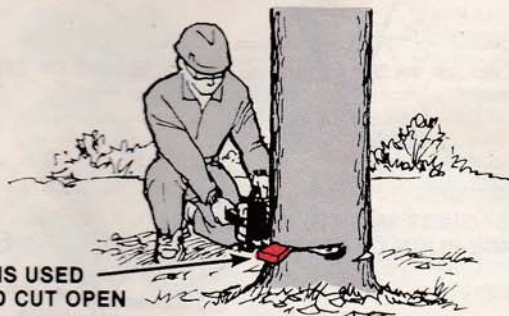


9. Trees larger than the saw can cut in one cut, can be both notched and back-cut in a series of cuts, as illustrated. Start the notching cuts from one side and draw the saw through to the other side of the notch. Start the back cut on one side of the tree, pivoting the saw through to form the desired hinge on that side.

Then remove and reverse the saw for the second cut. Insert the saw in the first cut, very carefully so as not to cause kickback, and cut back toward and around the back of the trunk. Complete the back cut by cutting towards the notch to complete the hinge section.

NOTE

Insert your felling wedges in the back cut. Remove the saw before tree is ready to fall and drive the wedges in to fell the tree.

NORMAL SEQUENCE USED TO FELL VERY LARGE TREES (UP TO TWICE BAR LENGTH IN DIAMETER)

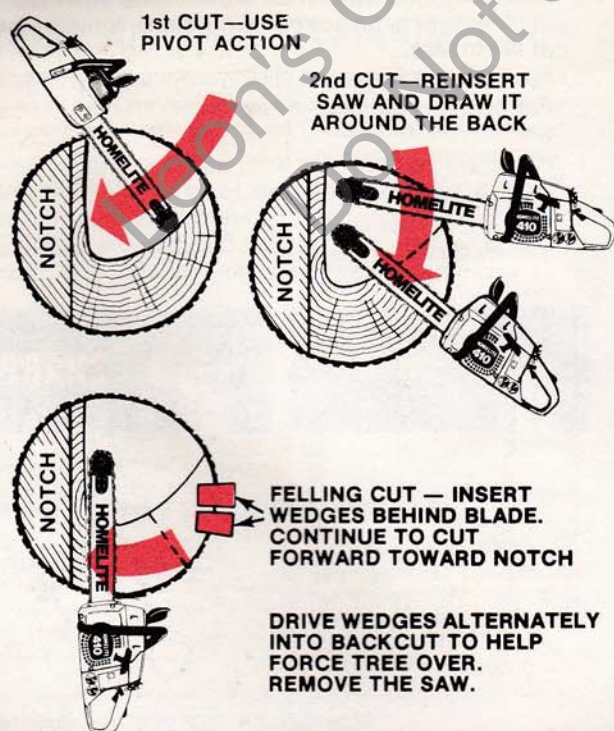


FELLING LEANERS

This variation is designed to prevent splitting and "barber chair" of leaners.

All standard felling techniques apply to leaning tree except as follows:


1. Make the directional control face notch shallower than usual.
2. Make shallow notches on both sides of the tree to cut through the outer layer (sapwood).
3. Now make your back cut to leave a parallel hinge.

WHEN CUTTING LEANERS, AVOID SPLITTING AND BARBER CHAIR BY MAKING THE FACE NOTCH (1) AS DEEP AS IS SAFE. THEN MAKE SIDE NOTCHES (2 AND 3) TO CUT THROUGH THE SAPWOOD BEFORE STARTING THE BACKCUT (4).

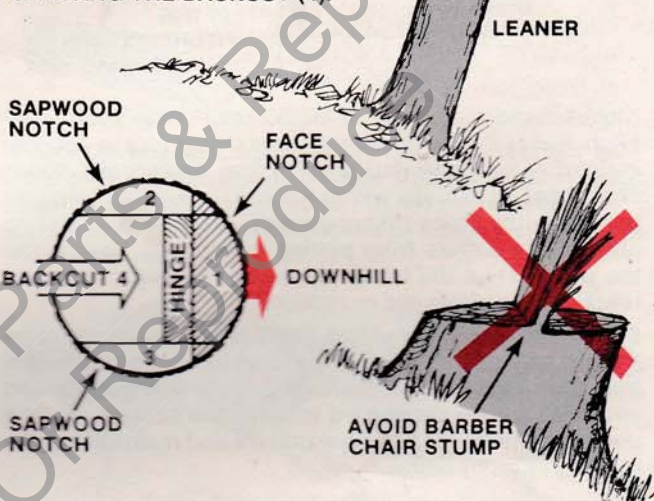

CHANGING THE DIRECTION OF FALL (from the natural line of fall)


1. Where you would leave a parallel hinge (hingewood of equal thickness on both sides) the hinge is left thicker on the side toward which you want the tree to swing (away from the natural line of fall). The thicker hinge on that side will hold up the fall so that the tree will fall to that side.
2. Place your wedges in the backcut between the back-center and the narrow side of the hinge. Drive in the wedges to force the tree over in the direction desired.

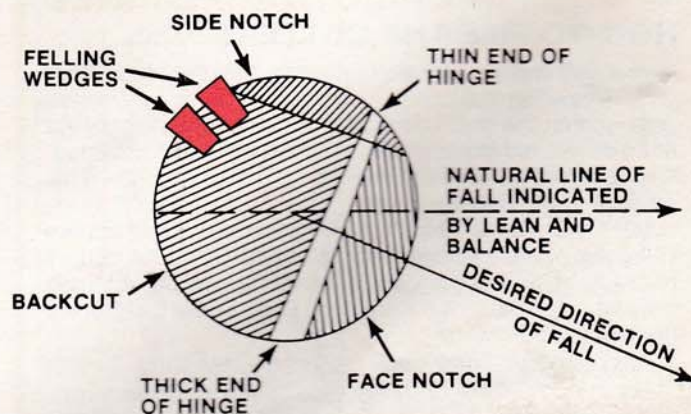

SECTION FOUR

MAINTENANCE AND REPAIR

HOMELITE® RAKER III™ SAW CHAIN

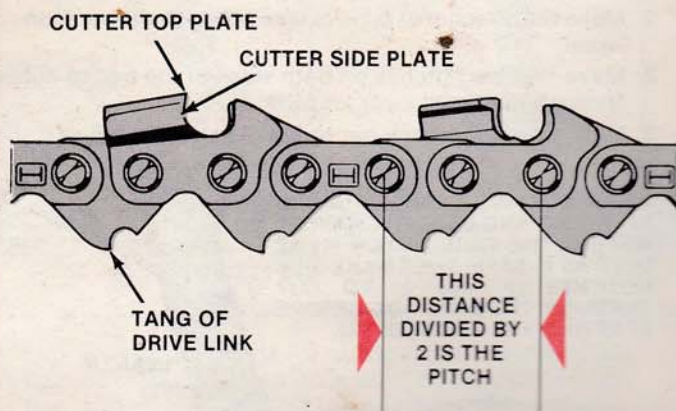

Kickback-reducing type 38 ME-50 semi-chisel tooth, 3/8" pitch, Raker III saw chain has three rakers (depth gauges) instead of just one gauge preceding each tooth. When chain contact is made within the kickback zone of a guide bar nose, the three rakers provide sufficient support to prevent the cutters from pulling themselves deeply into the wood. Thus the tendency toward a violent kickback reaction is suppressed or reduced.

For smooth and fast cutting, RAKER III chain needs to be maintained properly. Shut down the saw for filing whenever the sawdust turns from chips to a fine powder and you have to bear down hard to make the saw cut. Follow our instructions for filing the cutters and maintaining the rakers at proper depth.

TOOLS FOR SHARPENING RAKER III TYPE 38 ME-50 CHAIN

Our file holder (#DA-92615) comes with a 7/32" diameter (4 mm) round file. Late production models of this file holder have both 35° and 30° guide marks. The 30° marks should be used when filing RAKER III chain. If you have an earlier model #DA-92615 holder having only 35° marks, you can modify your technique, per our instructions, to obtain the required 30° top plate filing angles.


After repeated sharpenings, when the teeth are reduced to a bit less than half their original length, replace the 7/32" diameter file (in the same holder) with a 3/16" diameter (4.8 mm) file. The smaller diameter file is necessary because the teeth taper to a lower height towards the rear.

HOW TO FILE THE CUTTERS

If you do not have a chain filing vise, you can do a satisfactory job "on the bar" if you tighten the chain tension enough that the chain doesn't wobble. And, do all of your filing at the mid-point of the bar. Wear gloves for protection. Be sure to file all cutters to the same length. This must be done because of the taper of the teeth; if some cutters are shorter than others only the longer cutters will get a chance to cut. Also be careful to file all cutters to the specified angles, as fast cutting can be obtained only when all cutters are uniform. Each cutter then gets a chance to cut.

1. Any top plate filing angle from 30° to 35° will work well as long as every cutter is filed to the selected angle. However, the angle recommended for best results is 30°. We show two diagrams for achieving a 30° angle.

30° GUIDE MARK
ALIGNED WITH
CENTER LINE
OF CHAIN

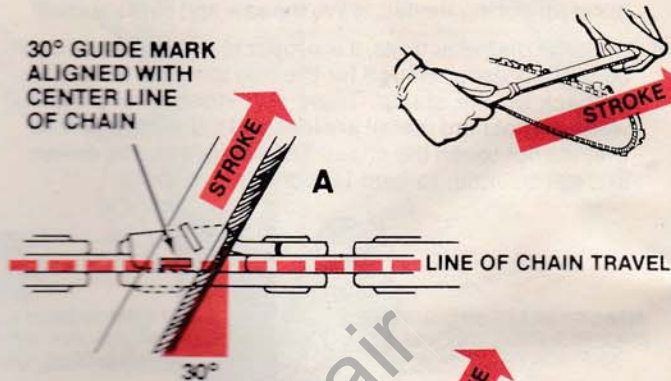

35° GUIDE MARK ALIGNED WITH
SIDE PLATE OF CUTTER

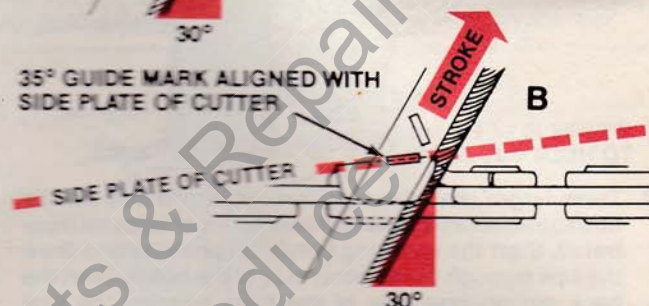



Diagram A shows a 30° guide mark aligned with the center line of the chain to produce a 30° angle.

Diagram B shows a 35° guide mark aligned with the side plate line of the cutter to produce a 30° angle.

2. Keep the file level with the top plate of the tooth. Do not let the file dip or rock.
3. Stroke only towards the front corner of the tooth. Lift file away from the steel on each return stroke.
4. Use light but firm pressure — mostly towards back of tooth and very little downward. With the correct angle and pressure maintained by you, the file holder will produce the desired edge.
5. Put a few firm strokes on every tooth. File all left hand cutters on one side. Then move to the other side and file the right hand cutters. Occasionally rotate the file in the holder.
6. Check your filing job in strong light. A sharp edge does not reflect light. Put a few more strokes on edges which reflect light.
7. If you are not satisfied with the performance of your chain after it has been filed, examine it for "skid-nose" and one or more of the common chain faults illustrated in this section. Also be sure to check the depth of the rakers frequently as instructed under "Raker Clearance."




2. Beveled under edge.

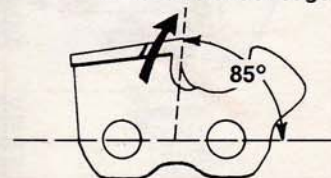

3. Side plate 85°-90° to line of chain travel.


REPAIR NOTE

Raker III chain construction is shown in exploded view form. Should replacement of damaged cutters be required we recommend using pre-set tie-straps in place of left-hand cutters and plain tie-straps in place of right-hand cutters. Because putting a few new cutters into an old chain loop can render the chain kickback-prone, we no longer include cutters in chain repair kits.

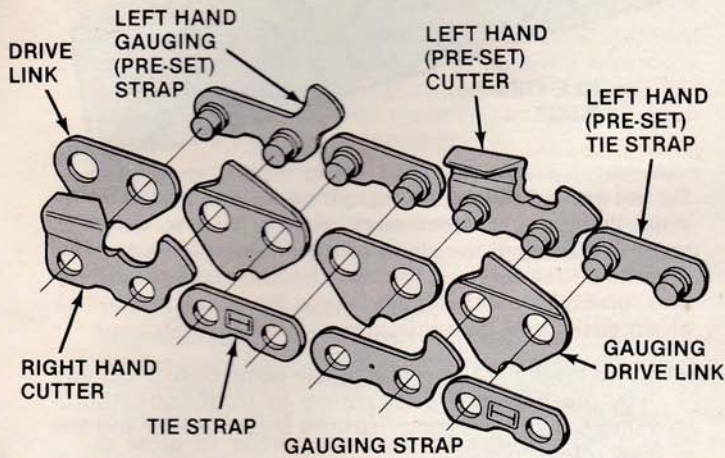


FILING OUT SKID-NOSE WEAR PATTERN

"SKID-NOSE" describes the edge area of teeth which have hit hard objects such as stones, nails, etc., or cut dirt, sand, etc. The "skid-nose" rides the wood surface, keeping the sharp edges out of the wood. The friction at the skid-nose area overheats the cutter steel, and the chain gets "soft." The only way to restore the chain to good condition is to file away all of the skid-nose steel. And, then to adjust all cutters to the same length. As this may be tedious to do by hand-filing, consider having it done by your servicing dealer on an electric grinder.

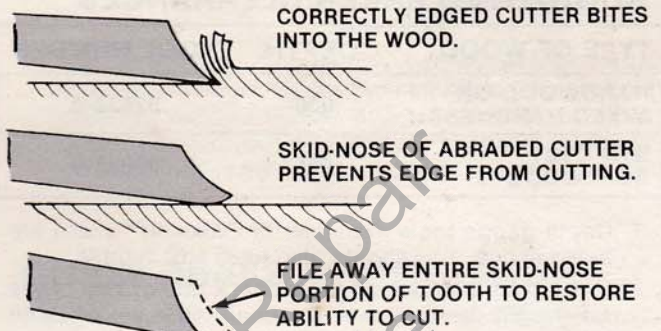


Chain drive tangs must have sharp points to clean sawdust from the bar groove, and bar groove must be deep enough for the tangs to clear bottom all the way around bar. (Every fourth or fifth tang resharpened will do the job as the chain wears.)

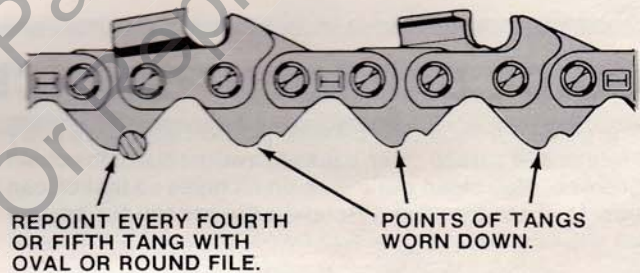

CORRECTIVE FILING

IF SOME CUTTERS ARE LONGER THAN OTHERS, FILE THEM BACK TO THE LENGTH OF THE SHORT CUTTERS.

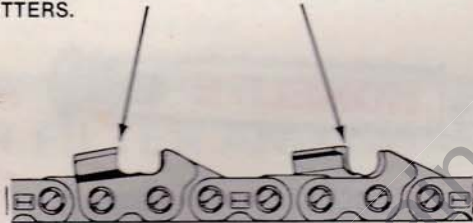


REFILE ANY TEETH HAVING ONE OR MORE OF THESE FAULTS




Forward Hook

Chain will grab and jerk, producing rough-cutting. Caused by excessive downward filing pressure, or tip of file held too low on tooth.

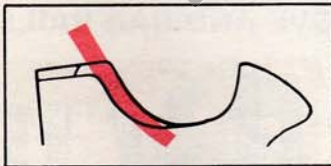


Back Slope

Chain resists entering wood. Scrapes instead of cutting. Causes excessive heat and wear to bar and chain. Caused by lowering handle end of file or holding file too high on tooth.

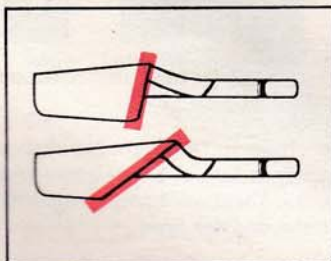


Improper Top Plate Angles

Blunt angle requires too much feed pressure to cut. Too sharp an angle causes binding. Produces a rough cut, robs power from saw, and increases bar wear. Caused by holding file at wrong angle or letting it drift or rock during the stroke.

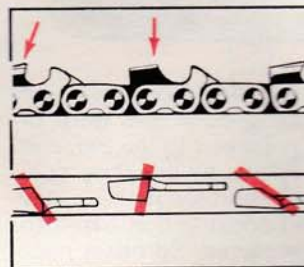


Cutters Filed at Non-Matching Angles or Lengths

Chain will not cut at its best. May cut off line or "run" to one side. Drag will slow down engine. Caused by letting filing angle or pressure vary from tooth to tooth, or filing one side of chain differently from the other.

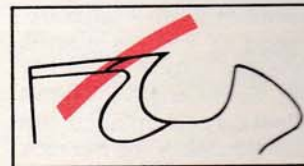

Thin Feathered Edges


When they almost immediately break off, you have a dull chain. Usually found on chain filed with a hook (see "Forward Hook"). Caused by pressing down too hard on file.

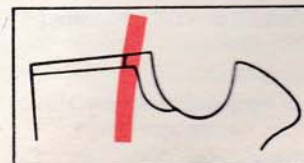

Blunt Cutting Edges

Although edge is durable, it won't cut properly. Scrapes wood, robs power, and produces dust instead of chips. Caused by holding file too high on face of tooth.


RAKER (DEPTH GAUGE) CLEARANCE

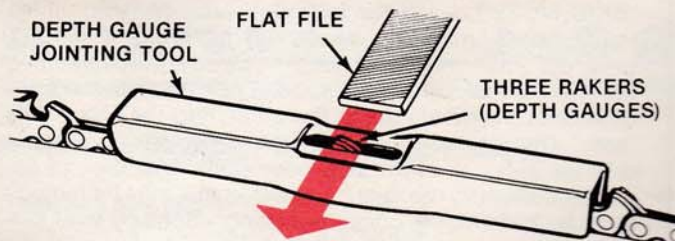

SUGGESTED RAKER CLEARANCES

TYPE OF WOOD	DEPTH	TOOL NUMBER
HARDWOOD OR MIXED HARDNESS	.030"	92632-B
STRICTLY SOFTWOOD	.035"	92633-B

1. Depth gauge tools available for Raker III™ chain are listed above. You should also have a 6" flat file.
2. Every time the chain is filed, check one or two of the rakers. Fit the tool over the chain so a set of three rakers projects up into the slot in the tool (see illustration) and the tool protects the tooth from the file. File flush across the slot. If you take off any metal from the rakers, file all the rakers on the chain.
3. If the rakers are too high, the chain teeth will get too shallow a bite; if too low, the chain will cut too deeply into the wood and the saw will grab and jerk.

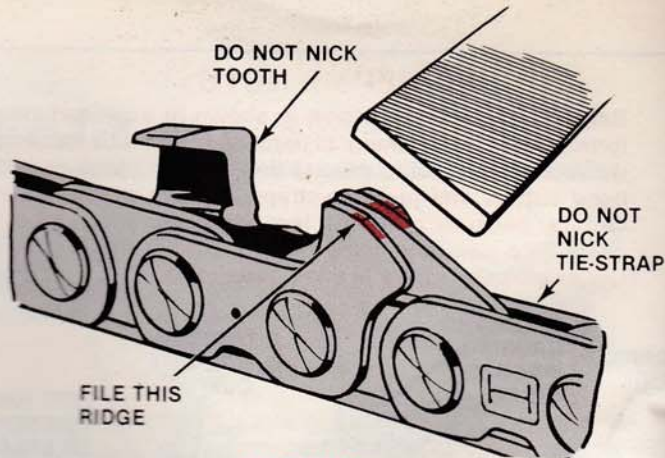

WARNING

Do not exceed the raker clearances recommended (left). With these raker clearances, Raker III saw chain is smooth-cutting. If the clearance is increased beyond the recommended settings, the chain becomes rough-cutting and "grabby," losing the advantage that it has over other chain designs in the reduction of kickback reactions.


If the rakers are not filed to the same clearance, you may get the same poor results as from non-uniform cutters. Non-uniformity causes slow cutting, and the saw often goes off line.

4. After the rakers have been filed, they should be contoured to their original pattern. When doing this with the flat file fit the depth gauge tool over the tooth on an angle to protect the cutting edge.

GUIDE BAR MAINTENANCE

The guide bar should be cleaned periodically. Use a putty knife or stiff wire to clean packed sawdust out of the chain grooves. Also clean out the chain oil holes so that oil can flow freely to the chain. Rotating the bar top-for-bottom on the saw every day or two helps to equalize the wear.

SAWDUST SHOULD BE CLEANED FROM GUIDE BAR GROOVE, AND THE OIL HOLES SHOULD ALSO BE CLEANED.

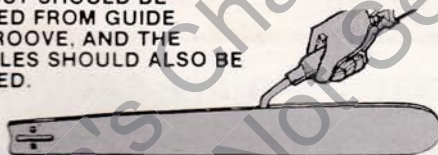


Hard nose bars ground from solid steel (GW Series) can very often be repaired by grinding down the worn or cracked bar rails, welding new rail metal to the bar, and re-grooving. All of this must be done by bar shop specialists. However, replacement of short length bars may be more economical. Laminated construction bars can not be welded. They *must be replaced*. Sprocket nose bars in both the PT and SP series can be fitted with replacement sprocket nose assemblies when necessary. The nose sprocket bearing is good as long as it turns smoothly and freely. Examine the bar rails. If burred or feathered, file the edges smooth. Small straight cracks in the rails probably have little effect on performance, but rails with hooked cracks will cause trouble. If the bar rails are burned blue it indicates either that the rails were pinched together or that the chain was run with too little oil or under too much pressure.

NOTE

Do not use any guide bar which is bent out of shape. Have bent bars straightened, if possible, or replace them.



WEAR PATTERNS IN GUIDE BAR GROOVE AND BAR RAILS

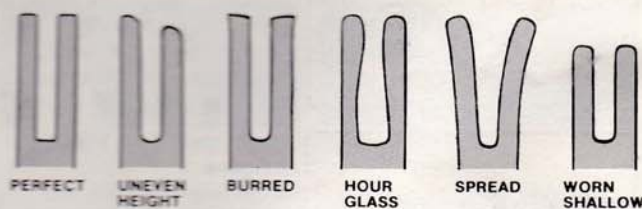


Most of these will cause the chain to flop over sideways and either not cut at all or cut in a curve. Sometimes the bar rail will be exposed to one side and will hang up against the side of the cut so the chain cannot feed.

CLUTCH AND SPROCKET

WARNING

Proper disassembly and repair of the clutch is so important to the life of the engine and the safety of the operator, that all clutch service should be done by an experienced repairman equipped with the required special tools. **DO NOT** disassemble the clutch unless you are a competent small engine mechanic and have the proper clutch service tools.

1. The owner should clean the clutch drum and sprocket and the surrounding area daily, at the same time as he is cleaning and remounting the bar and chain. At these times, a check should be made to see that the clutch drum turns freely and smoothly.
2. Whenever a new chain is to be installed, the drive sprocket should be replaced also, for full life expectancy of the chain. At these times, the clutch bearing should be checked and either replaced or repacked with grease (see below).
3. The clutch requires full inspection and service at 100 hour intervals. You are again reminded that this should be done by a competent serviceman. If any of the bearing needles are missing, have developed flat spots, or are burnt or bent; or if the bearing cage or inner race is worn or scored, change the entire bearing complement. If the bearing seems to be in good shape, repack it with a small amount of HOMELITE® All-Temp Multi-Purpose Grease #17193 or a lithium base grease.
4. Clutch trouble symptoms are: a) failure to disengage (chain rotates during idling and the idle cannot be adjusted low enough to stop chain rotation); b) slipping so much that the saw cannot cut; and c) chattering during a load.

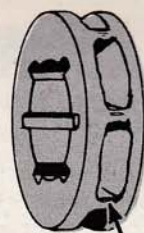

RIM TYPE
WEARS INSIDE



WEAR IS VISIBLE
ON SPUR TYPE

CHAIN WEAR PATTERN ON SPROCKET TEETH

5. Causes of clutch trouble may include: a) overheated, stretched springs; b) worn or cracked spider or clutch plate; c) worn or broken clutch shoes; d) oil, dirt or grease on the clutching surfaces; e) worn, bent, cracked or scored clutch drum; f) dry or worn bearing and g) worn sprocket.


CHAIN BRAKE MAINTENANCE

All surfaces of the chain brake assembly in the drive case cover, as well as the drive case and clutch area of the saw, should be cleaned before each day of cutting. Then the user should make a careful inspection for wear of the brake mechanism parts. If there is any detectable wear, the saw should be brought to your servicing dealer for inspection. The chain brake checkup should be included in any 50-hour service work performed by your dealer.

REMEMBER

There is no test available to assure effectiveness of the chain brake.

AIR FILTER AND CHAMBER

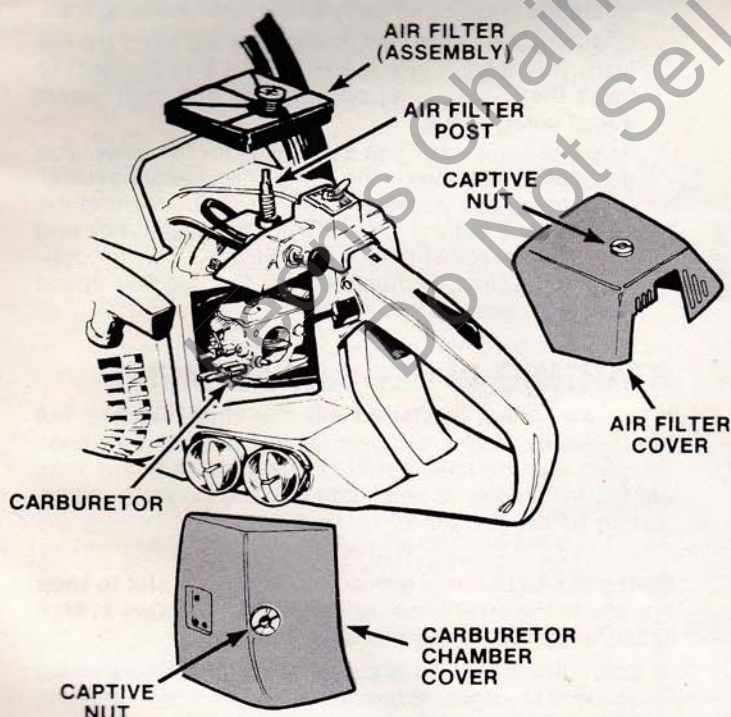


NOTE

The air filter chamber houses the air filter and is also the means of access to the manual oil pump and also the ignition switch and ground wire.

NOTE


Always clean the air filter before making any mixture adjustments of the carburetor.

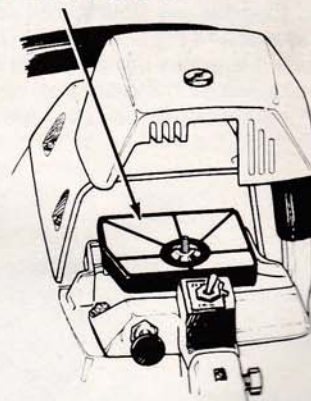

1. For access unscrew the captive nut and lift off the air filter cover.
2. Before removing the air filter assembly, blow or brush as much loose dirt and sawdust from the chamber as possible.
3. Unscrew the captive nut to remove the air filter assembly.
4. A light cleaning can be given the filter by tapping it against a smooth, flat surface to dislodge dirt particles.
5. For more thorough cleaning, rinse carefully in a detergent solution or a non-oily solvent. Allow filter to dry before use.
6. The filter should be replaced as soon as any tears, holes or catches appear in the fabric.

CARBURETOR AND TRIGGER LATCH ADJUSTMENT

The captive nut can be turned and the carburetor chamber cover lifted off for access to the carburetor or the fuel and pulse lines. However, the three carburetor adjustments protrude through a grommet in the chamber cover so that fine tuning can be done without disassembly. In addition to these adjustments, a screw type adjustment for setting the starting speed is located near the trigger latch button in the throttle handle.

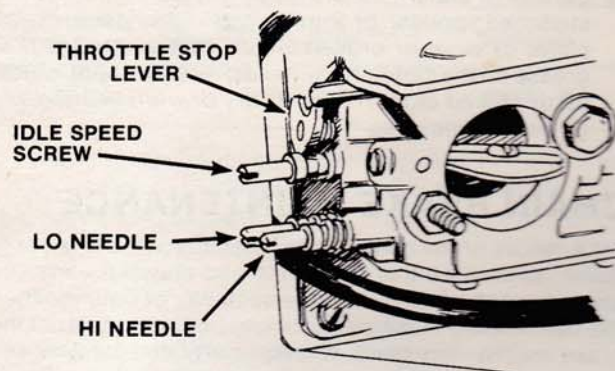


NOTE

Be sure the throttle trigger is unlatched or you will not be able to make the IDLE speed adjustment with the IDLE speed screw.

PRELIMINARY SETTING TO GET ENGINE STARTED

1. Remove the chamber cover so you can see the throttle stop lever and the cone-shaped section of the idle speed screw.
2. Back out the speed screw slowly until you can see a gap between the lever and the screw. Then turn screw back in slowly until it touches but does not move the lever. Now turn the screw in 1/2 to 3/4 turn more to move the lever (which will crack the throttle valve open just a bit).

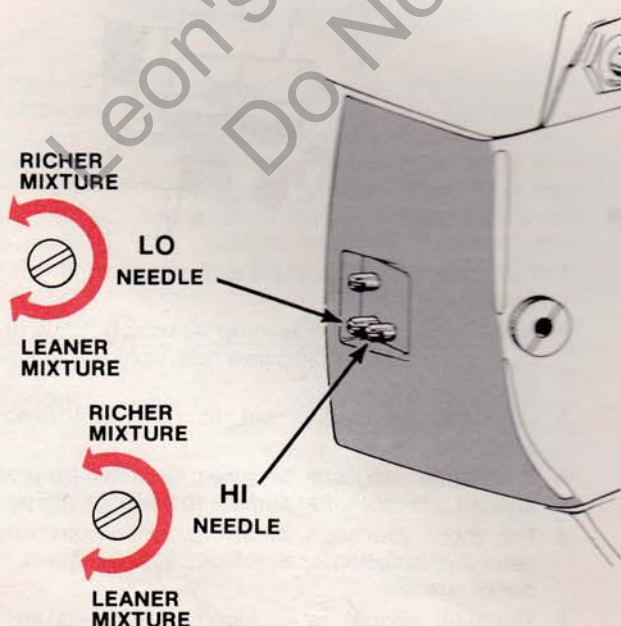

3. Put the cover back on the carburetor chamber.
4. Now close both the mixture adjustment needles very slowly to the right, until each gently bears against its seat.
5. The idle mixture adjustment to the left is called the LO NEEDLE. It meters the flow of fuel in the idle system. Open the LO NEEDLE 1 to 1 3/4 turn.
6. The main mixture adjustment is called the HI NEEDLE. It meters the fuel drawn through the main jet for full power operation. Open the HI NEEDLE 1 to 1 1/4 turn.

WARNING

When the above preliminary adjustments have been made, the chain will almost always rotate at high speed when the saw is started. Keep the chain in the clear and hold saw down properly.

FINAL ADJUSTMENTS

(If the saw will start, there is no need for the Preliminary Adjustments given above.)

1. **FOR IDLING:** Start and run the saw until it is at full operating temperature. Then turn the LO NEEDLE slowly to the left and then back to the right while noting the effect on the idle speed. At this point, DO NOT adjust the IDLE SPEED SCREW to change the speed, but set the LO NEEDLE at the highest speed obtainable. That setting provides the best mixture.

Now you can adjust for the proper idle speed with the IDLE SPEED SCREW. The proper speed is slightly below that which would cause clutch engagement and chain rotation, but fast enough that the engine idle will be stable at any attitude.

2. **FOR ACCELERATION AND FULL POWER:** This main adjustment is made with the HI NEEDLE. Start a cut in a log at full throttle and gradually apply so much pressure to cut that the clutch slips and the chain stalls momentarily. If the engine falters, release the trigger and open the HI NEEDLE 1/4 turn to the left (or to where the engine can carry a full clutch-slipping load. If, during the above trial, the engine did carry the full load, you have to turn the HI NEEDLE to the right to make the engine falter on purpose. And then repeat above paragraph 2.

After the adjustment has been made for full power you may notice a change in the idling or accelerating ability. If so, make any necessary slight readjustment of the LO NEEDLE setting to get a smooth acceleration and idle. Then readjust the IDLE SPEED SCREW for optimum idle speed. Adjustment of the starting speed latching mechanism may also be required.

STARTING SPEED ADJUSTMENT


If the saw cannot be started with the trigger latched, but starts readily when the trigger is held at full throttle position, the starting speed setting is too low. A sharp, thin-bladed screwdriver is needed to turn the slotted head adjusting screw in the throttle handle.

WARNING

During the adjustment procedure be very careful to keep the saw in the clear because the chain will rotate at high speed when the engine starts.

1. Latch the trigger for starting. Then turn the adjusting screw to the right 1/8 turn at a time. After each 1/8 turn, crank to start the engine.
2. When the engine starts, let it warm up fully. Then start and stop it repeatedly to be sure of consistent starts.
3. If the engine becomes hard to start after it has cooled down, a slight increase in the setting may be required.

FUEL SYSTEM MAINTENANCE AND TROUBLE CHECK POINTS

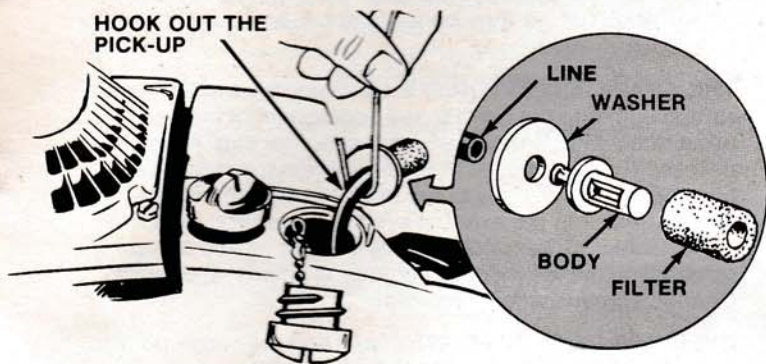

1. **FUEL FILTER:** Unless very dirty fuel is encountered, the felt filter will usually last at least a month before a new one is required. It can be examined by hooking the fuel line and pick-up assembly out through the tank-filler hole and pulling the felt sleeve off the metal body (see illustration). Roll and squeeze the felt in your fingers. If it feels hard and crusty, change it. If it feels soft, put it back onto the fuel line. If the pick-up was disassembled, be sure to slip the large plastic washer onto the pick-up body. Then push the fuel line all the way on so that the washer is snug against the metal body.
2. **FUEL LINE:** Deformation and cracking of the line, resulting in an air leak, will cause lean operation (excessive high speed but no power) which cannot be compensated for by carburetor adjustment. You can see all of the fuel line except the portion going through the chamber wall.
3. **PULSE LINE:** This is the first line you see on top of the carburetor. It comes from the engine and operates the fuel pump. If this line is either leaking or kinked, operation will be erratic. Replacement should be done by Homelite Service Outlets.
4. **FUEL TANK VENTING:** Venting is done by a duckbill type valve. The porous metal filter covering this valve can be seen when the air filter cover is removed. A clogged filter or inoperative valve will result in sequence where the engine will start and run at full power, then almost immediately run lean and quit. After such a sequence you can test by placing the fuel cap to the top and slowly loosening it until air is let into the tank. Then if the engine again starts willingly but runs out lean, have both the filter and the valve replaced.

WARNING: AUTOMATIC OILER PICK-UP MUST BE SLID BACK THROUGH SMALL SPACE IN TANK SO THAT IT LIES FORWARD AS SHOWN.



CHAIN OIL SYSTEMS

The automatic and manual systems both have positive displacement piston pumps. The manual has press-and-release pumping action. The automatic pump has rotary/centrifugal action timed to the RPM of the crankshaft. It delivers the highest output at the highest engine RPM and the least amount at idle RPM. Accordingly it is a good idea to stroke the manual oiler occasionally during heavy, long duration cutting where the engine is loaded down to just above clutch-slipping speeds.

TEST THAT SYSTEM HAS OIL

This is a good reason why manual pumps are put into professional quality automatic oiler saws. Stroking the manual oiler occasionally assures you, when pressure builds up against your thumb, that the saw contains oil. Also that the manual oiler works. However, it tells nothing about the automatic pump because this system has its own pick-up line. The automatic oil system delivery is easy to check by shutting off the saw occasionally and examining the chain links for oil. Nevertheless, if the output is in doubt, a measurement can be made by removing the chain and bar, running the saw over a collection pan and measuring the amount of oil discharged during a certain period of time.

WARNING

Do not run engine without a load for more than 15 seconds per burst of power. Run several tests, then total up the time and the volume.

TEST OF OIL PICK-UP

Turn saw over into the fill-up position and remove the oil cap. There are two pick-up lines in the oil tank. One, for the manual oiler and the other for the automatic system. Hook out each oil pick-up line and check the oil strainer. If clogged pick it clean with a needle or replace it. It can also be cleaned in solvent or blown clear with air.

NOTE

The pressure relief valve and filter in the oil tank are identical to that in the fuel tank and will affect the free flow of oil when clogged. This valve is internally located and must be serviced at a Homelite Servicing Dealer or Service Center when clogged.

If you suspect that the oil pump output is low, have the saw checked by a Homelite Servicing Dealer before further use.

IGNITION, COOLING AND EXHAUST SYSTEMS



CHAMPION DJ-6J



.025" FIRING GAP

THE SPARK PLUG can be left in the engine unless the engine becomes hard to start. Then do as follows:

1. First check that the tank is full of fresh and properly prepared fuel. Stale gasoline, water or dirt in the fuel may be the trouble rather than poor spark.
2. Unscrew and remove the cylinder cover to expose the cylinder and spark plug. Pull the spark plug boot off the spark plug and remove the plug.
3. To get going right away, install a new Champion DJ-6J Spark Plug (or its equivalent of the same heat range) having an .025" (0.63 mm) electrode gap.
4. Failed spark plugs can often be restored to dependable firing condition by careful regapping and cleaning.

WARNING


Spark plugs can be scraped clean by hand, or hydro-honed, but sand-blast or power-brushed plugs should not be used in this engine, no matter how thoroughly washed.

Restore the firing gap to .025", always be bending the side electrode towards the center. When cleaning the plug, scrape the deposits from the insulation, and clear the space up inside of any debris, carbon or bridging. Then file or scrape the electrodes down to bare metal, and square up their edges to induce the spark to jump.

should be cleaned, especially the small "swiss cheese" holes. Deteriorating parts should be replaced. Exhaust screws subject to wide changes in temperature should be replaced before they begin to show any more than a slight deterioration.

THE SPARK ARRESTOR is a stainless steel mesh type screen built into the muffler and accessible for inspection upon removal of one screw and the muffler cap. As this is necessarily a very fine screen, it is subject to cracking and burning out. Especially in areas where maintenance of a spark arrestor in the exhaust system is required by law, it is advisable to keep one or two spare spark arrestor screens on hand. Inspect screens regularly and often. Change screens when required.

CYLINDER COOLING FINS: These and the surrounding air space should be kept clean and open. Whenever you have the cylinder cover and muffler off the saw, give all exposed surfaces a thorough cleaning. Poke gently between the cooling fins with a stick or wire brush to clean right down to bare metal, or blow with air. But do not use a cleaning solvent because it may attack the insulation of the ignition components which are right below the cylinder.

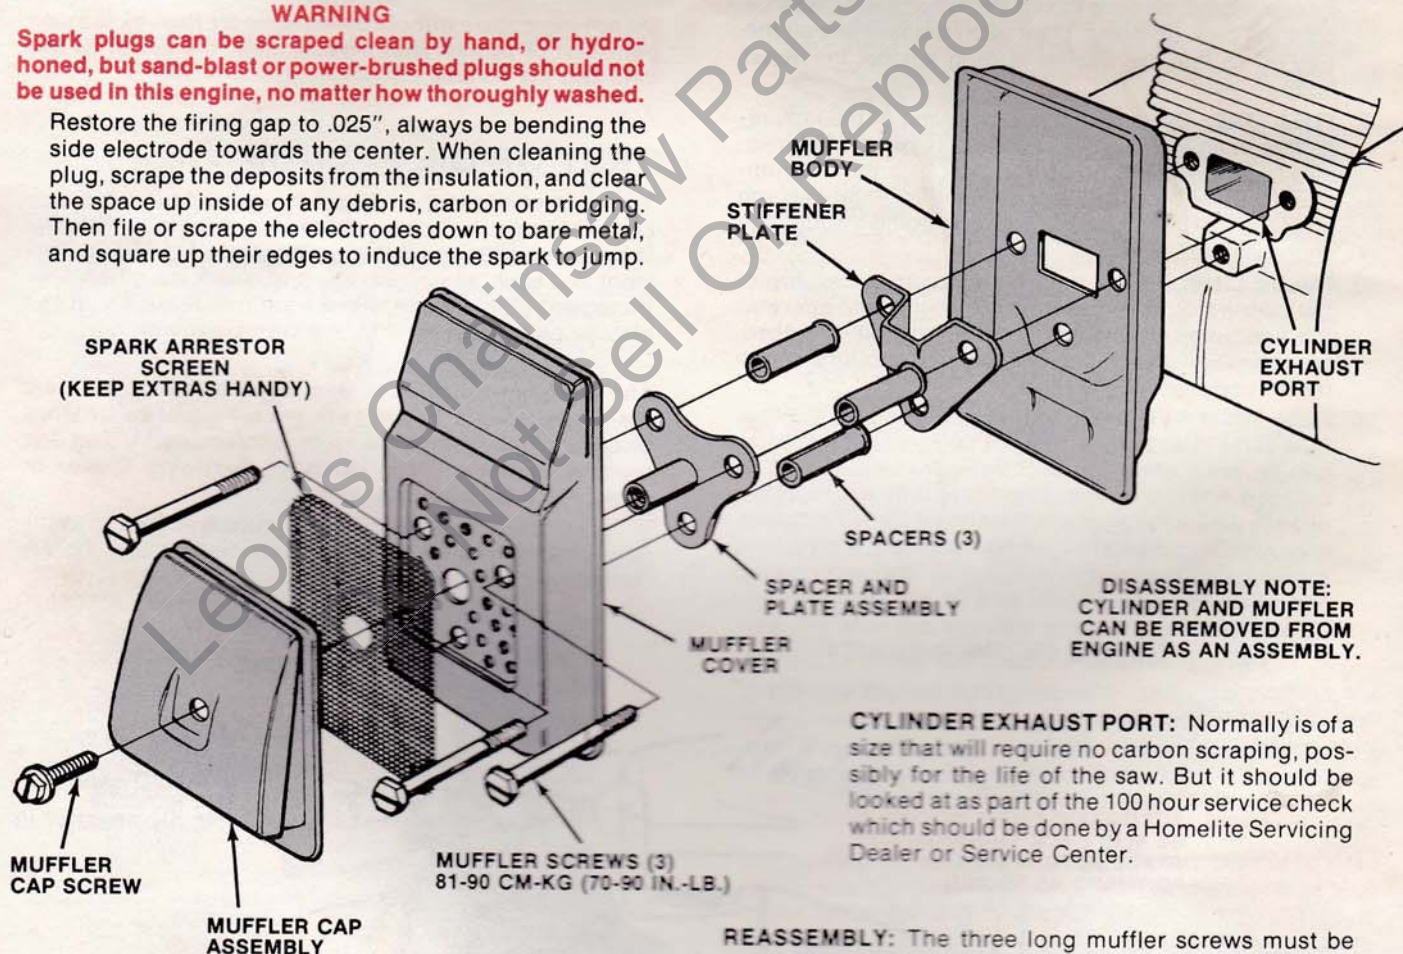

CYLINDER EXHAUST PORT: Normally is of a size that will require no carbon scraping, possibly for the life of the saw. But it should be looked at as part of the 100 hour service check which should be done by a Homelite Servicing Dealer or Service Center.

REASSEMBLY: The three long muffler screws must be put back quite tightly (81—90 cm-kg, or 70—90 in-lb). They should also be checked periodically to be sure they are still tight.

THE MUFFLER is a down-drafting type. After removal of the screw, muffler cap and spark arrestor, you can see the three screws which hold the remainder of the muffler to the engine. The remaining parts are: muffler cover (with swiss cheese holes), spacer and plate, three muffler spacers, stiffener plate and muffler body. These parts

STARTER/FAN HOUSING MAINTENANCE

Starter ropes are considered expendable, non-warranty items. Instructions are accordingly given for the owner to replace the starter rope as required.

No regular maintenance is required for this assembly beyond keeping the air intake openings open in the starter housing. However, it may become necessary to add a turn of starter spring tension if the rope fails to rewind all the way to the housing.

1. TO REMOVE THE COMPLETE STARTER/FAN HOUSING: Take out the four screws. Lift housing carefully off the engine.

WIND LOOP CLOCKWISE, LETTING PULLEY TURN ALSO. HOLD PULLEY FROM REWINDING. PULL OUT THE LOOP. THEN LET PULLEY REWIND.



2. TO INCREASE SPRING TENSION: Hold the housing. Pull the grip out about one foot (30 cm) and hold pulley from rewinding. Pull grip further or let pulley slip until notch in pulley rim is opposite the rope insert in the fan housing. Pull up a loop of rope between insert and notch. Engage rope in notch. Carefully wind both pulley and rope clockwise by holding and pulling the rope clockwise around the pulley — one turn only. Hold pulley from rewinding. Pull grip to remove the loop in the rope. Let grip rewind. If the grip does not rewind into position against the housing add more tension, one turn at a time, using the above procedure until the tension is correct. DO NOT add more turns than necessary.


3. TO INSTALL NEW ROPE:

- a) The length of the new rope is 45 inches (114 cm). About 1/2-inch (12.5 mm) of one end should be fused with heat or set by dipping in nail polish or quick drying cement. Set rope aside while you remove the pulley.
- b) If old rope did not break, hold pulley from turning. Cut rope, then let pulley turn until rewind tension is removed. Remove old rope.
- c) Lay housing down flat. Remove the starter post screw and flat washer. Jiggle the pulley free (from the spring) and lift it off the pulley post.

CAUTION

You will see the plastic spring retainer in the starter housing. The retainer is held in place by a small phillips head screw. If you plan to change the retainer and spring assembly put on gloves and safety goggles first. Be careful not to dislodge or pull up the spring coils, or the spring will fly out. If it does fly out, it can inflict injuries. DO NOT


USE ABOUT 6-INCHES OF ROPE TO FORM THE HITCH

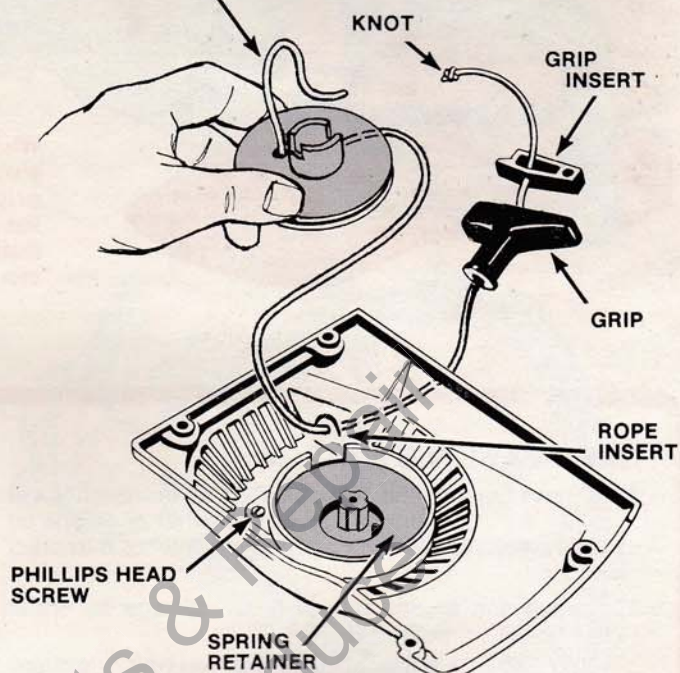

let springs lie about where they can be handled by the unwary. DO NOT REMOVE replacement spring from retainer. BEFORE DISCARDING OLD SPRING, REMOVE IT ONE COIL AT A TIME FROM THE RETAINER.

- d) Thread the untreated end of the rope through the rope hole in the pulley rim on the long hub side. Keep about 6-inches (15 cm) of rope outside the rope hole.

DETAIL OF ROPE HITCH AROUND PULLEY

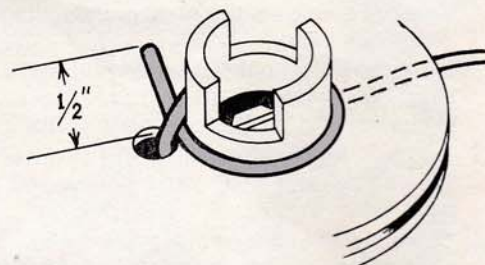

- e) Use a throat-seizing hitch to anchor the rope around the pulley hub. To do this: position and hold treated end of rope about 1/2" (12.5 mm) to the left of the rope hole. Make a loop of the remaining short length and slip it over the hub. Hold in position (with end under the loop) and pull the rope for a tight hitch. (See illustration).
- f) Hold pulley hub toward you and wind rope clockwise onto pulley. Put free end of rope through the eyelet in the housing and assemble the insert and starter grip to the rope. Knot this end of the rope tightly before pulling the insert into the grip.
- g) Put pulley onto the post. Slightly rock pulley back and forth to achieve engagement of the spring loop so that pulley drops into place inside the spring retainer. Now secure with the flatwasher and pulley post screw. This is a thread-forming "plastite" screw which should be only moderately tightened.
- h) Follow procedure in step 2 to add two "prewinds" of tension or enough turns that the grip stays in place against the housing. DO NOT add more turns of tension than that.



WARNING

When refitting the starter/fan housing to the engine, always press lightly into position. Then pull out the starter grip and let the starter slowly rewind until the pawls slide out of the way and the housing registers flush against the engine. Then the four housing screws can be put in and tightened without cracking the housing.

OFF-SEASON STORAGE

1. Remove bar and chain and clean them thoroughly. Let chain dry and store in a small container of engine oil to prevent rust. Oil the dried bar and wrap it in oiled paper.

2. Prepare the engine internally for storage by either method A or method B:

METHOD A: Fill the saw tank with fuel which contains an anti-oxidant stabilizer (See fuel mixing instructions). Run the saw on this mixture for ten seconds and use the choke instead of the switch to stop the engine. This will put a lot of stabilized fuel into the crankcase and cylinder. Refill the saw tank right to the top to keep air out.

METHOD B: Drain as much fuel from the saw tank as possible, then start and run the engine until it runs dry and quits. Remove the spark plug to pour in a teaspoonful of a rust inhibitor product or a detergent oil. Install the spark plug and crank the engine enough times to distribute the oil over the cylinder and piston walls as a vapor.

3. All local regulations for the safe storage of fuel supplies must be observed. Non-stabilized fuel supplies should be used up in other equipment or discarded.
4. Clean all foreign material from the outside surfaces of the engine. The finish can be preserved with a coat of auto wax.
5. Store the saw in a well-ventilated place where it is inaccessible to children and away from corrosive agents such as garden chemicals and de-icing salts.



WRAP BAR IN OILED PAPER



CHAIN CAN BE STORED IN OIL



SECTION FIVE

KITS & ATTACHMENTS

Do not use any attachment or adapt your Model 410 for any device or attachment not specifically recommended by Homelite for the Model 410.

BOW SAW ATTACHMENTS

NOTICE

Homelite does not recommend the use of bow saws. This bow saw information is provided for those who will insist on adapting their Model 410 chain saw to a bow guide



WARNING

Extreme caution must be taken to use a bow saw safely. When used carelessly, or when not used properly (as outlined in this manual) the bow saw could cause serious injury from KICKBACK. DO NOT operate a bow saw without reading and understanding ALL of the information pertaining to bow saws and KICKBACK given below and on pages 3 and 4 of the manual.

Any Bow Guide Kit you select for the Model 410 should contain detailed instructions for any adaptations or modifications of either the Model 410 chain saw or the attachment parts required for a proper fit.

IMPORTANT

Be sure the ignition switch is in the "STOP" position. And wear gloves for protection whenever you are working on or near the saw chain.

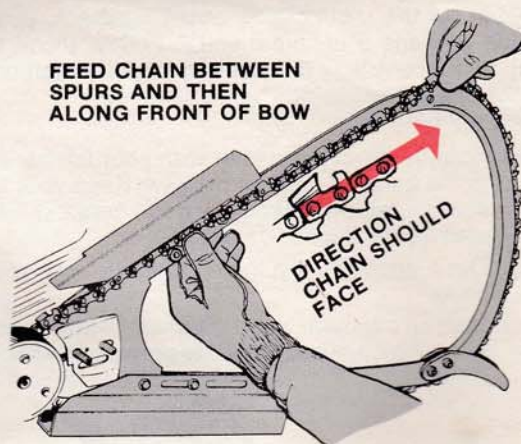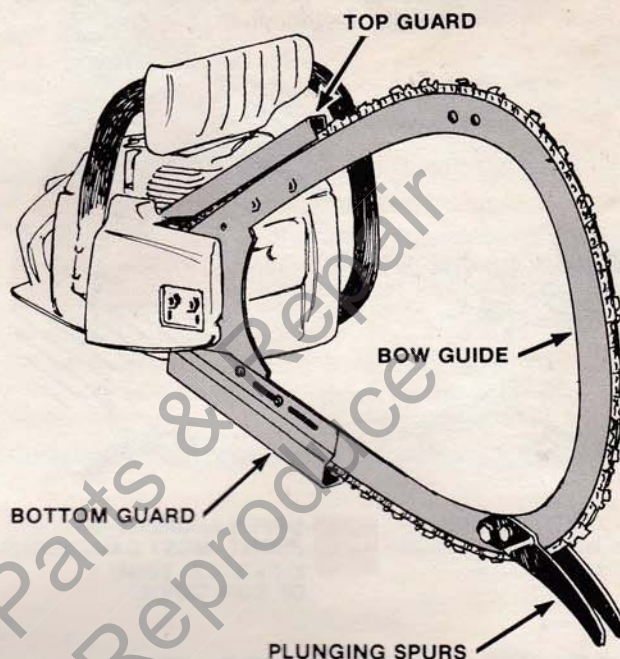


BOW SAW KICKBACK

Kickback from a Bow Saw is similar to kickback from any other chain saw. The only noticeable difference is that the **KICKBACK DANGER ZONE** of a Bow Saw is larger (see illustration).

NOTE

Maintenance of proper tension is important. Loose chain invites KICKBACK. Keep the chain tension as tight as possible without causing any binding.

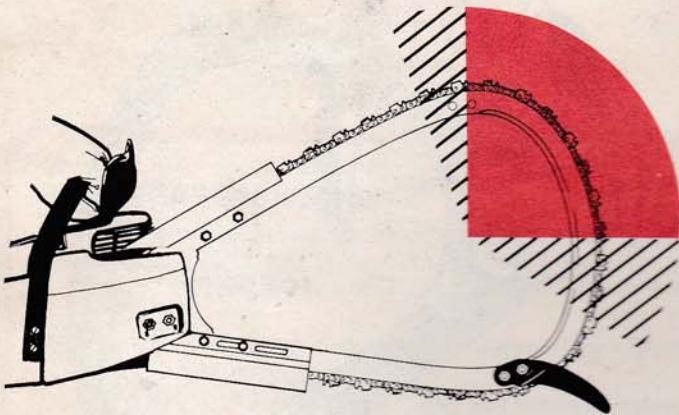


CAUTION AREA WHERE KICKBACK MAY OCCUR.

UPPER SEGMENT OF FRONT. MOST DANGEROUS KICKBACK ZONE OF BOW GUIDE.

HOW TO MAINTAIN CONTROL OF A BOW SAW

1. Read all the instructions about kickback, push, and pull on page 3 of this manual. Follow these instructions for control of the saw and for the reduction of the chances of kickback.
2. Do the following:
 - a) Hold the front handlebar with your left hand, close to the balance point of the saw. Keep your left arm straight (elbow locked) for good control and to prevent injury from KICKBACK.
 - b) Get a good grip on the rear handle with your right hand.
 - c) Start all cuts with wood in contact with the plunging spurs which are designed to prevent kickback when so used.

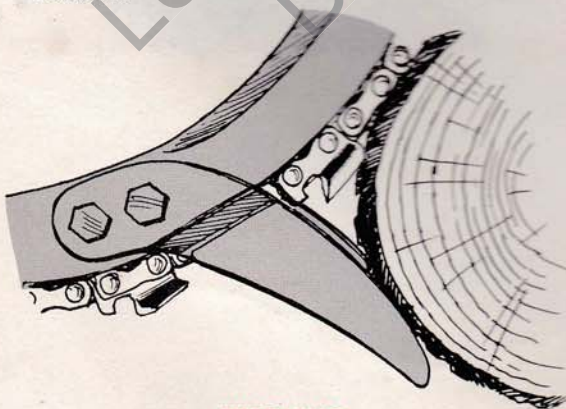


WARNING

Do not operate a bow saw unless the plunging spurs and the bottom and top chain guards are in place. Serious injury may result if any of these parts are left off the bow guide.

DO'S AND DON'TS OF BOW SAWING


Some, but not all of the cutting techniques used with "straight blade" chain saws apply to a bow saw. The following information does apply to bow sawing.

The advantage of a bow saw is its ability to cut through wood without being pinched or bound in the cut. Thus, in stressed wood situations where two cuts (overbuck and underbuck) would be necessary with a "straight blade," the bow can do it in one cut.

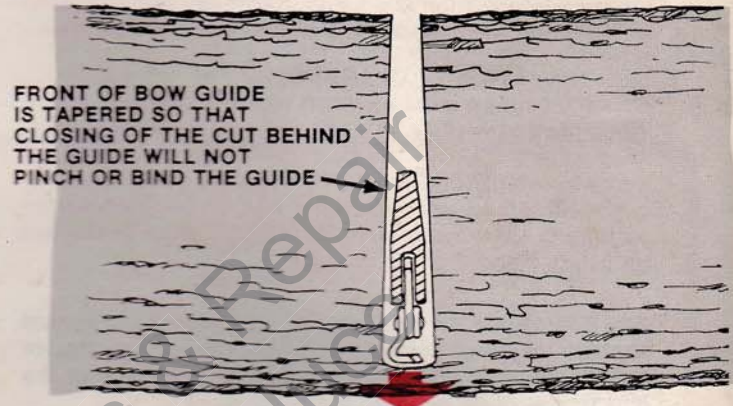

The basic cut with a bow is the *plunge cut*. It is made by placing the plunging spurs against the side of the log or tree, and plunging the tapered front of the bow guide through the wood. Plunging, with the spurs as a work stop, offers the maximum means of preventing kickback with a bow.

Another cut which makes use of the bow's plunging spurs (see illustrations at bottom) is the "pivot cut," useful in bucking logs flat on the ground. Anchor the spurs by placing them onto the ground near the log. Then rev up the engine and pivot the saw on the spurs to feed the chain into the wood. Initial control should always be made close to the spurs to prevent a kickback.

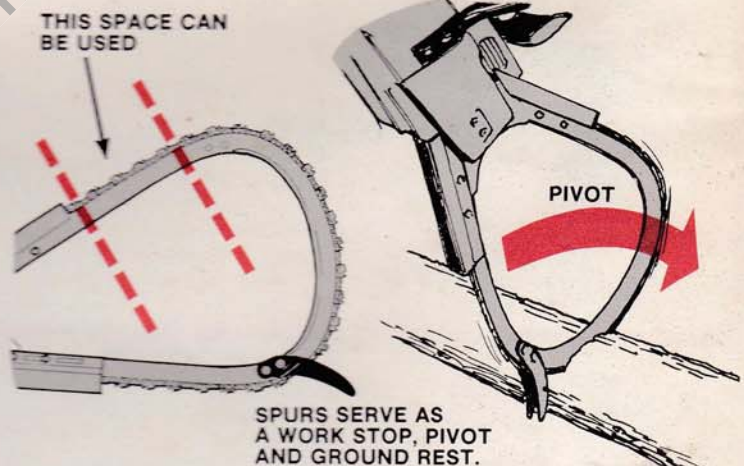

Some professionals prefer to use the top section of the bow (between the kickback zone and the top guard) for lopping off small branches. If you intend to use the bow in this manner, **BE EXTREMELY CAREFUL NOT TO LET THE CHAIN AT THE KICKBACK ZONE MAKE CONTACT WITH ANY OBJECT.**


Here are some of a bow saw's disadvantages: It is a heavier, more cumbersome tool than a conventional chain saw. The wide bow configuration puts the chain closer to your body, hands, face and legs. The higher friction drag of the bow (greater chain-bar contact surface) uses up more engine power than does a "straight

blade" of the same capacity. After plunging all the way through a log you may have to chop the bow free if the cut sections of the log have come back together, entrapping the bow.

No matter what type of cutting you do, make sure your left arm is straight, with the elbow locked. In the event of a kickback, this "locked elbow" combined with the proper grip on the handlebar may prevent you from being injured. Balance and positioning are also important considerations. Maintain a firm, balanced stance. DO NOT work with your head or body directly over or behind the saw. Always stand to the left of the potential kickback path.

MAINTENANCE OF THE BOW ASSEMBLY

1. At end of day, remove the bow. Clean the drive case cover and the drive case, including the oil discharge hole in the guide bar mounting pad. Also clean the bow chain groove and the oil entry holes.
2. Maintain the chain as in Section 4.
3. Before each day of use, check that all fasteners of the top and bottom guards and the spurs are tight.

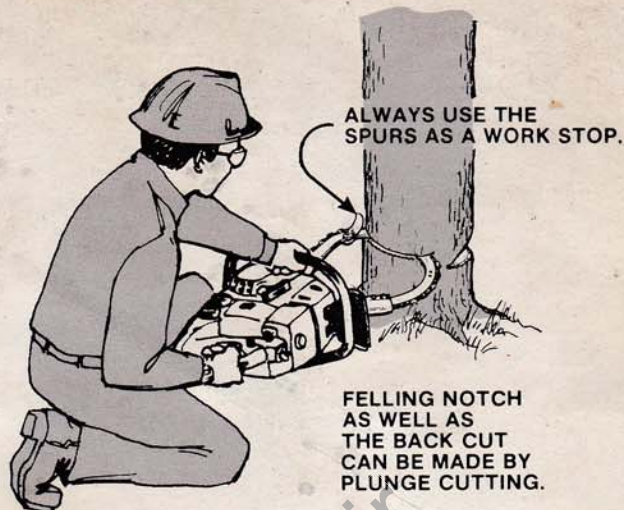

4. The bow guide is reversible for distribution of wear. Once a week or so, the guards and spurs should be removed and the guide reversed top-for-bottom. Then the guards and spurs should be reassembled in the correct position for use. If this procedure is regularly followed the guide will last a lot longer than if all the wear is in one place on the rails.


10486
6C 2120022

Model #
Serial #

NOTICE

Technology changes with the times. Homelite strives not only to create new products, but also to refine and improve existing designs. By contacting our manager of customer relations (address on back cover) you can learn of any improvements or new devices which have been developed since you purchased your chain saw.

SAVE THIS MANUAL FOR
FREQUENT REFERENCE

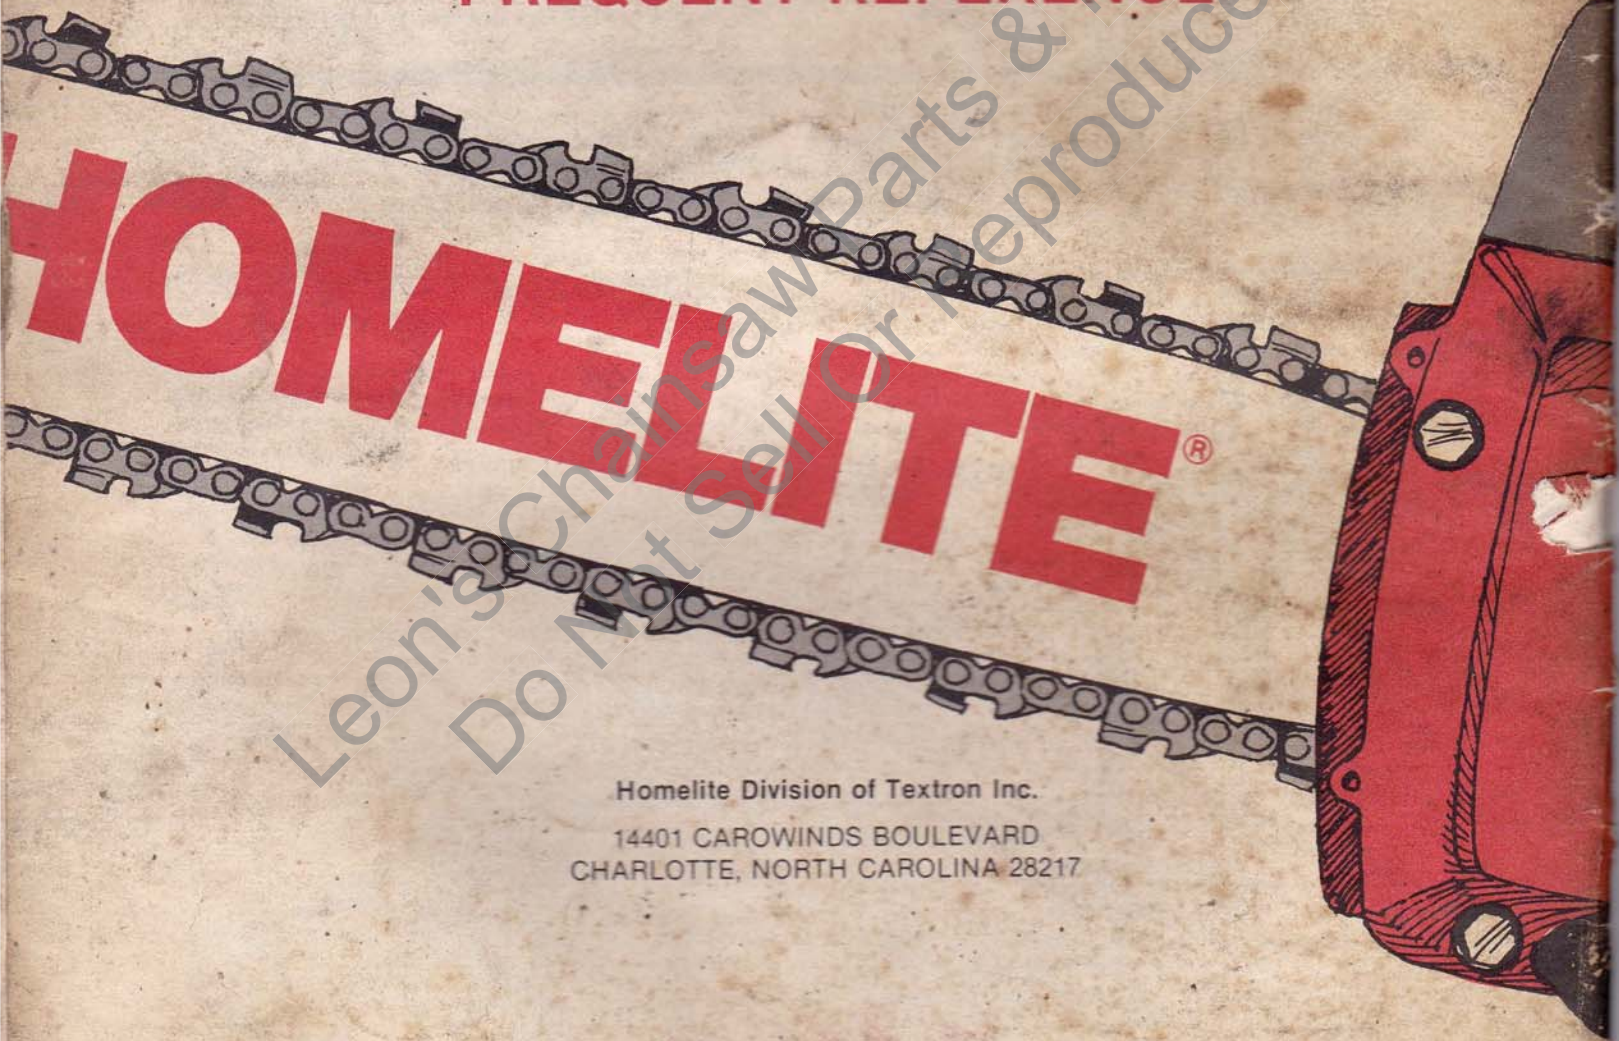

Homelite Division of Textron Inc.
14401 CAROWINDS BOULEVARD
CHARLOTTE, NORTH CAROLINA 28217

HOMELITE **TEXTRON**