


# **HOMELITE®**

## **SUPER**

## **XL**

## **925**

### **CHAIN SAW**

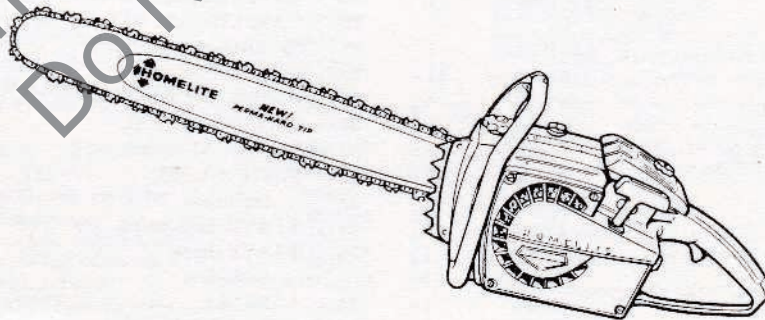

*Leon's Chainsaw Parts & Repair  
Do Not Sell or Reproduce*

# SUPER XL 925

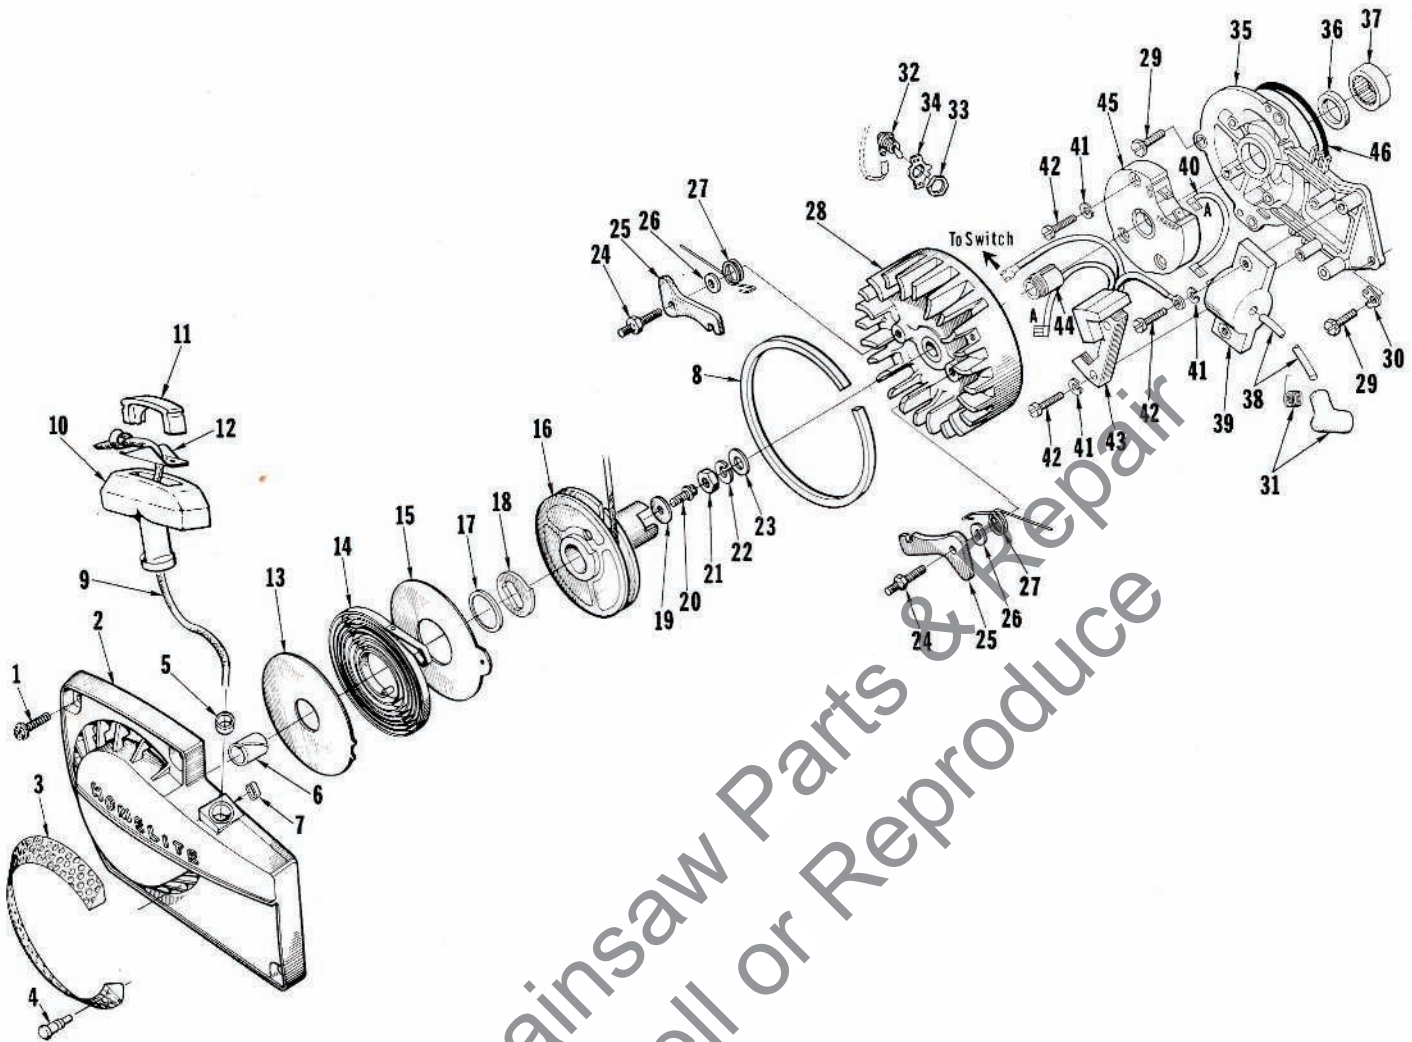


FIGURE 1

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	SCREW-hex hd., 12-24 x 5/8	80676	4	*24	STUD-pawl	58757-D	2
2	HOUSING-fan	A-64504-B	1	25	PAWL-starter	58756	2
	Includes:			26	WASHER-lock, #12	83056	2
3	SCREEN-fan housing	A-64421	1	27	SPRING-starter pawl	65375-2	2
4	STUD-drive	67191	11	28	ROTOR-magneto	67165	1
5	BUSHING-starter rope	67177	1	29	SCREW-hex hd., 1/4-20 x 5/8	80048	4
6	BUSHING-starter post	64443	1	30	WASHER-tab lock	67875-1	1
7	BUSHING-rewind spring	65830	1	31	TERMINAL-spark plug	A-33055	1
8	RING-air flow	67409	1	32	SWITCH-toggle	A-57650-3	1
9	ROPE-starting	58806	1	33	Includes: NUT	72084-A1	1
*10	GRIP-starting rope	12624	1	34	PLATE-indicating "ON-OFF"	72085-A	1
*11	CAP-rope grip	12782	1	*35	PLATE-back	A-67618-A	1
*12	INSERT-rope retaining	12649	1		Includes:		
13	SHIELD-spring (inner)	63566	1	36	SEAL	58688-A	1
14	SPRING-rewind	63268-A	1	37	BEARING-roller	63195	1
15	SHIELD-spring (outer)	63565-A	1	38	LEAD-high tension	67166	1
16	PULLEY-rewind starter	A-64446	1	39	COIL-transformer	67164	1
	Includes:			40	LEAD-transformer	67167	1
17	BUSHING-spring lock	64400	1	41	WASHER-lock, #8	83022	7
18	LOCK-rewind spring	64049-A	1	42	SCREW-pan, 8-32 x 3/4	82178	7
19	WASHER-retaining	58763	1	43	COIL-core and generator	67163	1
20	SCREW-hex hd., 10-32 x 1/2	80648	1	44	CAP-dust	64002	1
21	NUT-hex, 3/8-24	81124	1	45	MODULE-ignition	67162	1
22	WASHER-lock, 3/8	83102	1	46	"O" RING	67559	1
23	WASHER-flat, 3/8	84010-1	1				

\* Denotes new parts

# SUPER XL 925

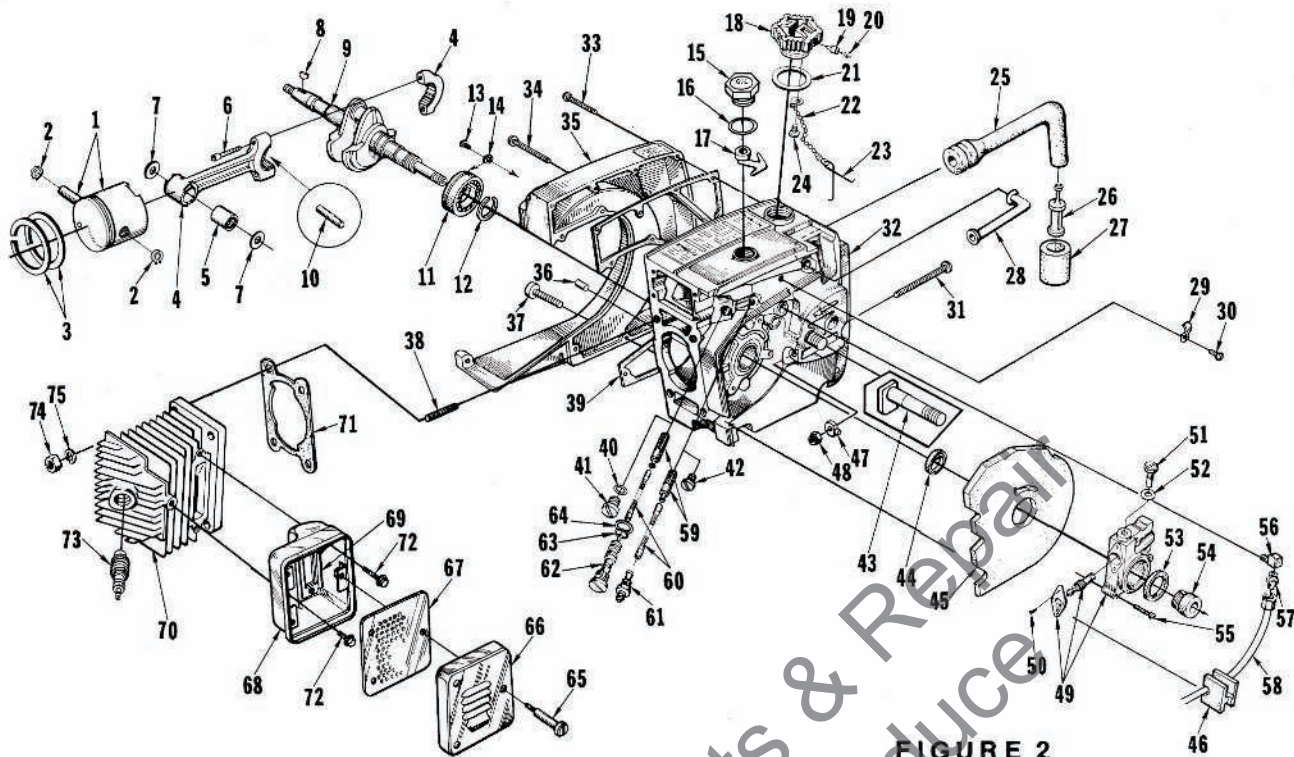


FIGURE 2

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	PISTON & PIN	A-69467	1	47	PIN-guide bar adjusting	67586-1A	1
2	Inc: RING-piston pin retaining	64742	2	*48	NUT-Gripco	81204	1
3	PISTON RING	69452	2	49	PUMP-automatic oil	A-68265	1
* 4	ROD-connecting	A-69658	1	50	Inc: SCREW-pan hd., 4-40 x 1/4	80919	2
* 5	Inc: BEARING-needle	69688	1	51	SCREW-cam	64102-A	1
6	SCREW-soc. hd., 8-32 x 9/16	80805	2	52	GASKET-cam screw	59736	1
7	WASHER-thrust	8070	2	53	SEAL-felt	59926	1
8	KEY-woodruff	75078	1	54	WORM-gear	59675	1
9	CRANKSHAFT	67168-1	1	55	SCREW-fil. hd., 8-32 x 3/4	80248	3
10	BEARING-needle (set of 28)	A-69056	1	56	CONNECTOR-elbow	31734	1
11	BEARING-ball	58190-5	1	57	FITTING-tube	65896	1
12	RING-retaining	59319-A	1	58	LINE-oil (discharge)	A-65682	1
13	SCREW-bearing retaining	59704	2	59	FILTER-oil	A-64293	2
14	WASHER-lock	59705	2	60	LINE-oil pick-up	59000	2
15	CAP-oil filler	A-65284-A	1	61	CONNECTOR-oil filter	65695	1
16	Inc: "O" RING	65133	1	62	TUBE-oil line	63452-A	1
* 17	VALVE-check (not shown)	69451	1	63	"O" RING	58406	1
18	RETAINER	68750	1	64	GASKET-oil line tube	63751	1
19	Inc: VALVE-check (oval duckbill)	69451	1	65	SCREW-shoulder	68480	3
* 20	FILTER-filler cap	69451	1	* 66	CAP-muffler	A-69591-1	1
21	GASKET-fuel cap	69501	1	67	BAFFLE-muffler	65633	1
22	CHAIN-head	69502	1	68	BODY-muffler	A-68979	1
23	RETAINER	69503	1	69	Inc: PLATE-muffler body	68978	1
24	SCREW-pan hd. Plastite, 6 x 1/4	82256	1	* 70	CYLINDER-2-1/16" bore	A-69649	1
25	LINE-fuel	65593	1	71	Inc: GASKET-cylinder	63778-1	1
26	FILTER-fuel	A-59251	1	72	SCREW-hex hd. cap, 1/4-20 x 5/8	80402	3
27	Inc: FILTER-felt	59253-1	1	73	SPARK PLUG-Champion #C-J6	63547-S	1
28	CONNECTOR-fuel line	67080	1		SPARK PLUG-Champion #C-J4 optional (Colder Plug)	69027-S	1
29	CLAMP-fuel line	65597-1	1	74	NUT-hex, 1/4-28	81065-2	4
30	SCREW-pan hd., 6-32 x 5/16	80605	1	75	WASHER-lock, 1/4	83009	4
31	SCREW-guide bar adjusting	63367	1	*	SHIELD-muffler	69284-1	1
32	CRANKCASE & TANK	A-68023-A	1				
	Inc: GASKET-check valve (not shown)	65144	1				
	CAP-check valve (not shown)	65143	1				
33	SCREW-fil. hd., 8-32 x 5/8	82146	6				
34	SCREW-fil. hd., 8-32 x 2-3/16	82155	8				
35	COVER-fuel tank	67153-2	1				
36	PIN-dowel	63621	2				
37	SCREW-fil. hd., 8-32 x 1-3/4	82147	1				
38	STUD	55871	4				
39	GASKET-fuel tank	67159	1				
40	WASHER	58138	1				
41	CAP	63115	1				
42	PLUG-pipe	28097	1				
43	BOLT-guide bar	67158	2				
44	SEAL	58688-A	1				
45	SHIELD-sawdust	A-64715	1				
46	GROMMET-oil line	65357	1				

Accessory

MUFFLER-down draft	A-68983	1
Includes:		
BAFFLE-muffler	65633	1
BODY-muffler	A-68979	1
Includes:		
PLATE-muffler body	68978	1
CAP-muffler	A-68911-1	1
NUT-hex, 10-32 Flexloc	81109-2	3
SCREW-hex cap hd., 1/4-20 x 5/8	80402	3
STUD-muffler	68874	3

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# SUPER XL 925

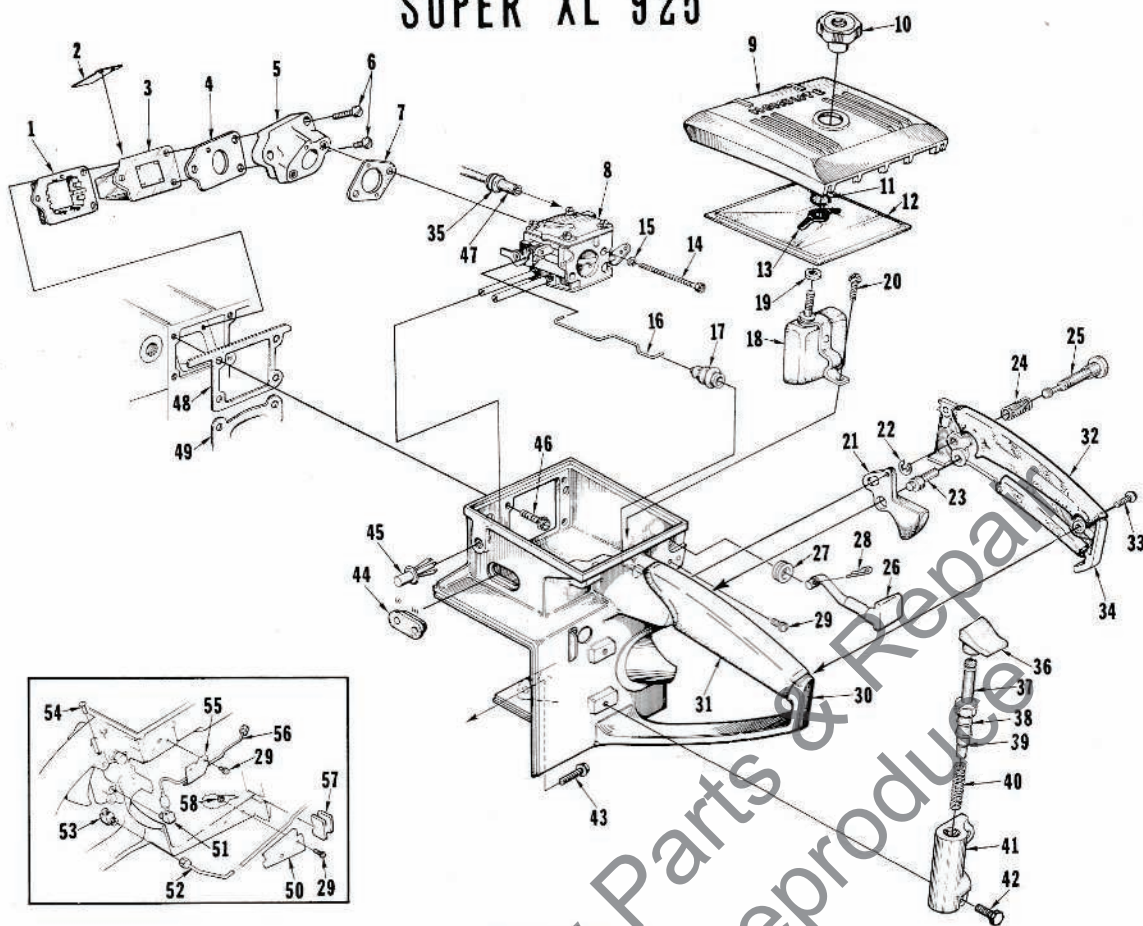


FIGURE 3

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	RETAINER-reed valve	63370-A	1	30	HANDLE-throttle	A-68025-C	1
2	VALVE-reed	63166-A	4		Includes:		
3	SEAT-reed	63371-B	1		BUSHING-(not shown)	68445	1
4	GASKET-reed valve seat	65483	1	31	GRIP-throttle handle	68767	1
5	MANIFOLD-intake	A-67460-1	1	32	GRIP-throttle handle cover	68768	1
6	SCREW-pan hd., 8-32 x 1-1/8	82196	3	33	SCREW-pan hd., 8-32 x 1/2	80560	2
7	GASKET-carburetor	67540	1	34	COVER-throttle handle	A-69045	1
* 8	CARBURETOR	A-69745	1		Includes: BUSHING-nylon	59064	1
9	COVER-air filter element	A-69414-2	1		(not shown)		
10	NUT-cover mounting	A-67639	1	35	GROMMET-fuel line	68046	1
11	RING-retaining	58319-A	1	36	BUTTON-oil pump plunger	63622	1
*12	FILTER ELEMENT-air	A-69305-A	1	37	PLUNGER-oil pump	A-57834-16	1
13	Includes: GROMMET	63878	1		Includes:		
14	SCREW-hex hd., 10-32 x 1-7/8	82179	2	38	"O" RING-shaft	59074	1
15	WASHER-lock, #10	83046	2	39	"O" RING-plunger	74388	1
16	ROD-throttle	63266-A	1	40	SPRING-compression	59293	1
17	BOOT-throttle rod	58348	1	41	BODY-oil pump	63343-5	1
18	BRACKET-air filter	A-67101	1	42	SCREW-hex hd., 3-32 x 7/8	80568	2
19	Includes: GASKET-mounting nut	58392-1	1	43	SCREW-hex hd., 12-24 x 7/8	80891	1
20	SCREW-hex, 12-24 x 1/2	80821	1	*44	GROMMET-"Hi-Lo"	69751	1
21	TRIGGER-throttle	65745	1	45	PLUG-plastic	53572	1
22	RING-retaining	58409	1	46	SCREW-hex hd., 12-24 x 5/8	80676	4
23	PIN-throttle latch adjusting	65719	1	*47	LINE-fuel	65718-A	1
24	SPRING-throttle latch	58405	1	48	GASKET-throttle handle	63779-C	1
25	PIN-throttle latch	58924-4	1	49	GASKET-cylinder	63778-1	1
26	ROD-choke	A-68429	1	50	CLAMP-oil line	65513-1	1
27	Includes: GROMMET	64862	1	51	VALVE-check	A-65502	1
28	PIN-cotter	86324	1		Includes: BALL (not shown)	25527	1
29	SCREW-pan hd., 6-32 x 3/8	80571	6	52	LINE-oil (discharge)	A-65682	1
				53	VALVE-check	A-65515	1
					Includes: BALL (not shown)	25527	1
					SPRING (not shown)	59022	1
				54	SCREW-fil. hd., 8-32 x 5/8	80023-2	1
				55	CLAMP-oil line	65660-1	1
				56	LINE-oil (intake)	A-65705	1
				57	GROMMET-oil line	65357	1
				58	NUT-lock, 6-32	81126	2

\* Denotes new parts

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

# SUPER XL 925

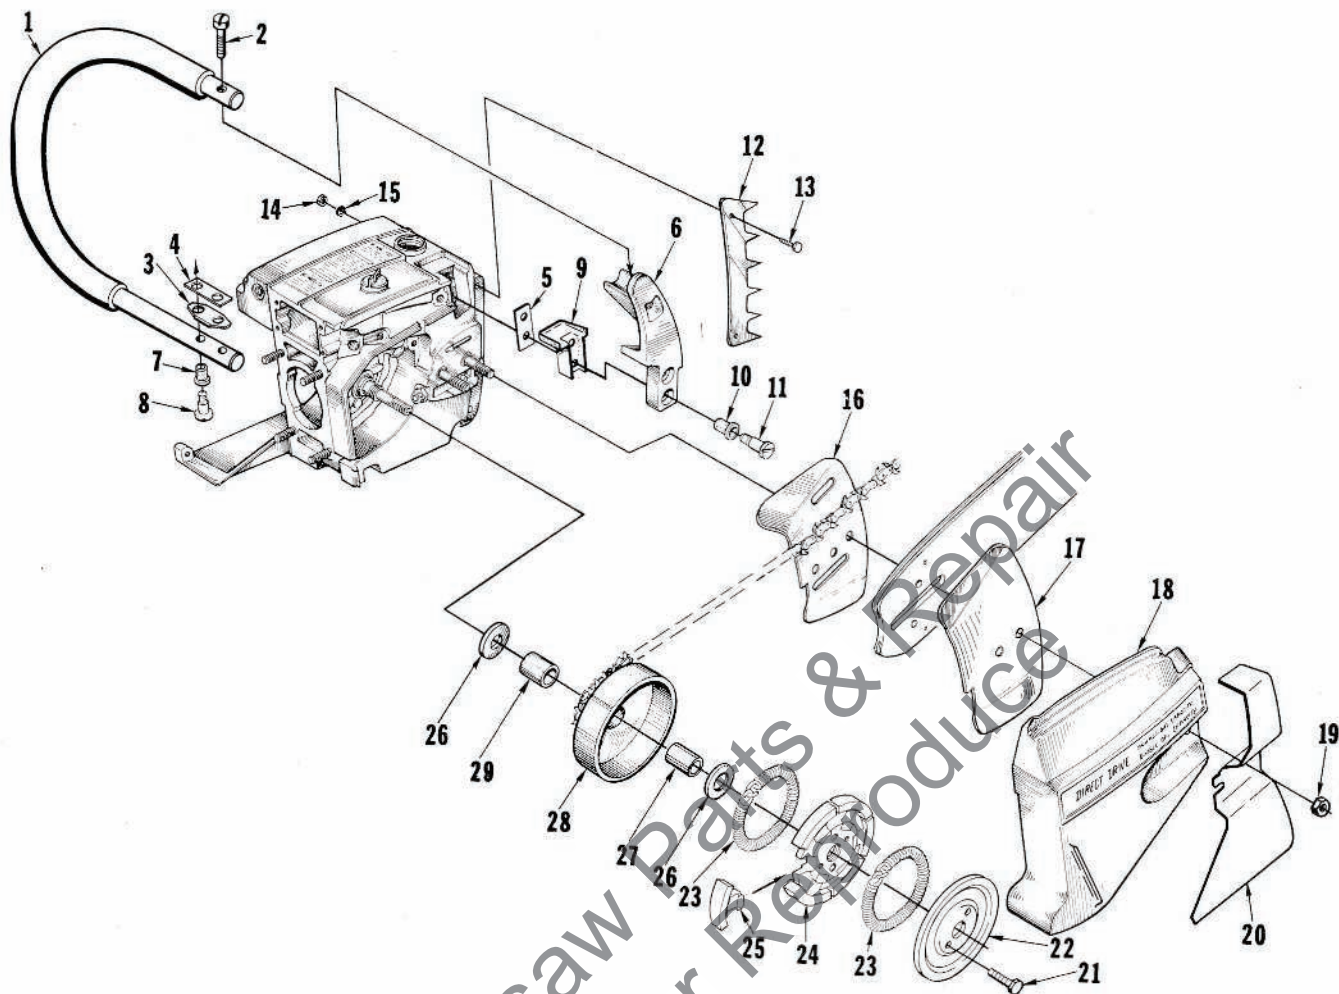


FIGURE 4

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
* 1	HANDLE BAR-flush cut (rubber covered)	A-69934	1	16	PLATE-guide bar (inner)	67160-A	1
2	SCREW-fil. hd., 1/4-20 x 1	82259	1	17	PLATE-guide bar (outer)	67161	1
3	SPACER-handle bar	68765	1	18	COVER-drivecase	67156-3	1
4	PLATE-handle bar	65599	1	19	NUT-hex, 3/8-16	81089-2	1
5	PLATE-handle bar bracket	65598	1	20	GUARD-chain (Accessory)	68078-1	1
6	BRACKET-handle bar	68766-2	1	21	SCREW-hex hd., 10-32 x 1/2	80361-1	1
7	GROMMET-handle bar	65518	2	22	COVER-clutch	58751-1	1
8	SCREW-shoulder	65520	2	23	SPRING-clutch	67441	2
9	MOUNT-shock	65509	1	24	CLUTCH-spider	65723-2	1
10	GROMMET	65519	2	*25	SHOE-clutch	69754-1	6
11	SCREW-shoulder	65521	2	26	WASHER-thrust	63462	2
12	KIT-spiked bumper	A-63720	1	27	BEARING-roller	64124	1
	Includes:			28	DRUM & HUB-rim type	A-65990	1
13	SCREW-hex hd., 12-24 x 3/4	80867	2		SPROCKET-3/8 pitch, 7 tooth (rim type)	63284	1
14	NUT-12-24	81068	2		option .404 pitch, 7 tooth (rim type)	OM10513	
15	WASHER-lock, #12	83056	2	29	RACE-inner	64129	1

\* Denotes new parts


Accessory Sprockets & Drum

SPROCKET & DRUM .404 pitch, 7 tooth	A-65886
3/8 pitch, 8 tooth	A-65732
.404 pitch, 8 tooth	A-65887
3/8 pitch, 7 tooth	A-65884

When using optional Sprocket & Drum, you must use one 63463 thrust washer (inner).

PLATE-bumper (West Coast)	69275
KIT-wrap around handle bar	A-65894
CLUTCH-(one piece)	12671-1
COVER-clutch	12772

# SUPER XL 925

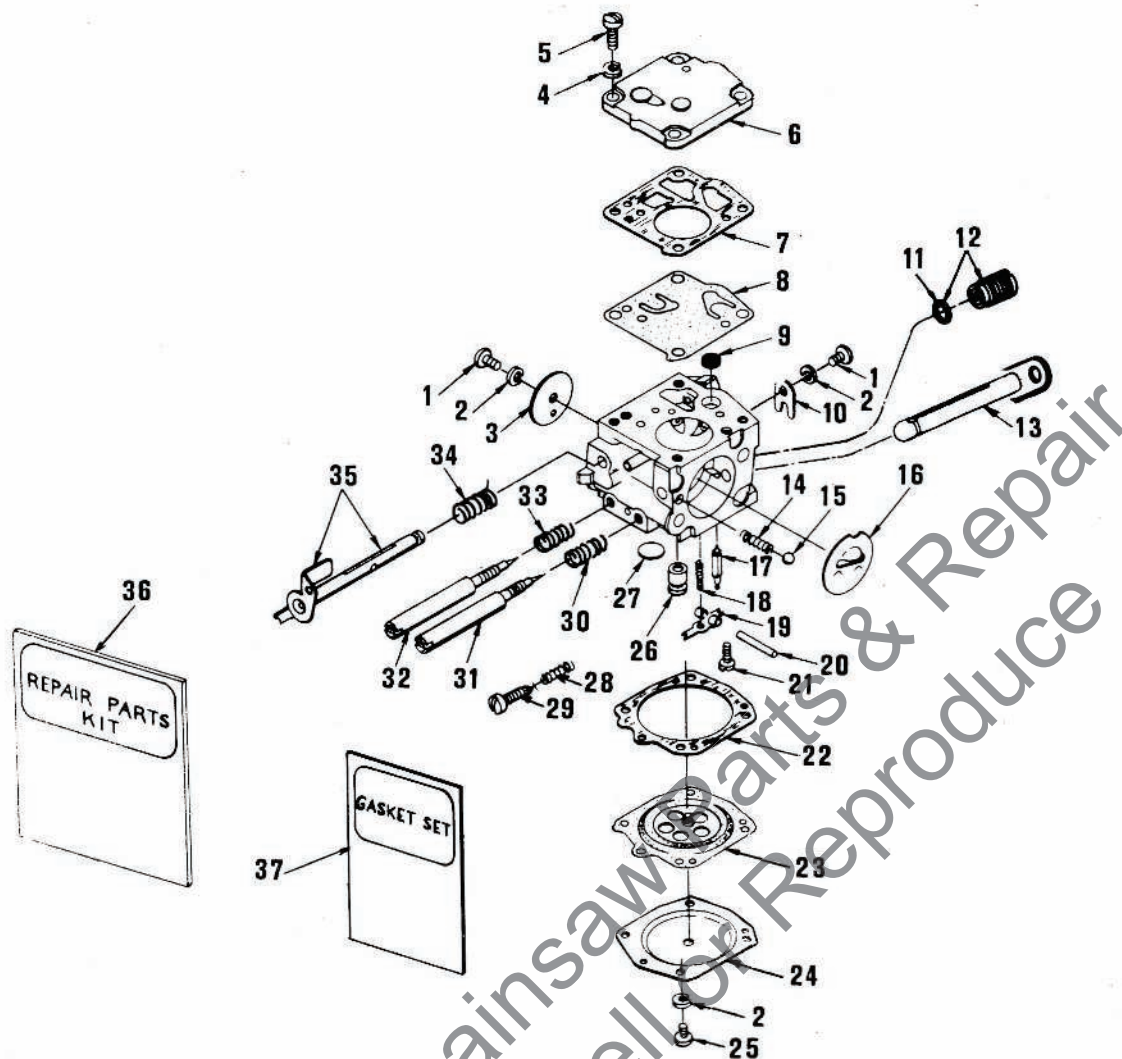

A-69745

HS 151 A

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	SCREW-rd., 4-40 x 3/16	†80264	2	20	PIN-control lever fulcrum	†58977	1
2	WASHER-lock, #4	†83008-1	6	21	SCREW-oval, 4-40 x 1/4	†65798	1
3	SHUTTER-throttle	67994	1	22	GASKET-main diaphragm	†58978	1
4	WASHER-lock, #6	83024	4	23	DIAPHRAGM-main control	†58988	1
5	SCREW-fil, 6-32 x 3/8	80275	4	24	COVER-main diaphragm	58979	1
6	COVER-fuel pump diaphragm	58975	1	25	SCREW-rd., 4-40 x 1/4	80591	4
7	GASKET-pump diaphragm	†58981	1	*26	VALVE-check	69793	1
8	DIAPHRAGM-fuel pump	†58980-R	1	27	PLUG-welch, 11/32 dia.	†58991	1
9	SCREEN-fuel inlet	†58974	1	28	SPRING-idle speed	†58973	1
10	CLIP-throttle shaft retaining	58982	1	29	SCREW-idle speed	†58993	1
11	GASKET	†74060	1	30	SPRING-main adjustment needle	†73075	1
*12	VALVE-governor	69794	1	*31	NEEDLE-main adjustment	69792	1
*13	SHAFT & LEVER-choke	69789	1	*32	NEEDLE-idle adjustment	69785	1
14	SPRING-choke friction	73264	1	33	SPRING-idle adjustment needle	†54440	1
15	BALL-choke friction	25527	1	34	SPRING-throttle return	†59460	1
16	SHUTTER-choke	58984	1	35	SHAFT & LEVER-throttle	A-67995	1
17	NEEDLE-inlet	59717	1	*36	REPAIR KIT	69790	1
18	SPRING-control lever	†65603	1	37	GASKET-set	†67866	1
19	LEVER-inlet control	†59716	1		DIAPHRAGM & GASKET-set	63711	1

†Indicates Contents of Repair Kit, #69790

\* Denotes new parts

†Indicates Contents of Gasket Set, #67866

# SUPER XL 925

## Tools

ANVIL-bearing disassembling remover (back plate)	23846-2
ANVIL-crankshaft installation	23846-1
BIT-pozidriv, #2	24304
COLLAR-bearing installation	22820-4
JACKSCREW-(crankshaft)	A-23965

### Includes:

WASHER	84035
JACKSCREW-bearing remover (back plate)	A-23962
PLATE-crankshaft aligning	24006-1
PLUG-bearing and seal installation (back plate)	23956
PLUG-bearing installation	23420
PLUG-bearing installation (conn. rod)	23955
PLUG-seal installation (back plate)	24302
PLUG-seal installation (crankcase)	23957
PULLER-rotor	A-23960
SCREWDRIVER-hand pozidriv	24230
SHIM-(black) air gap	24306
SHIM-magneto air gap	23987
SLEEVE-bearing and shaft installation	23136-1
SLEEVE-seal installation (crankcase)	23972
SLEEVE-seal protecting (crankcase)	23971
WRENCH-combination	A-22808
WRENCH-socket screw (conn. rod)	23528
WRENCH-spanner	A-23696-A
Includes:	
PIN-clutch spanner	23717-A
WRENCH-spark plug removal	24094

## Accessories

KIT-fastening parts	A-24279
KIT-filter	A-24270
Includes:	
AIR FILTER & ELEMENT	
KIT-guide bar plate	A-24413
Includes:	
PLATE, INNER & OUTER	
*KIT-starting rope	A-24792
Includes:	
ROPE, CAP, INSERT & GRIP	
LOCTITE	23488-B
REEL-250 ft., starting rope, #5	57084-1

## Paint

SPRAY CAN-black	22772
SPRAY CAN-red	23475

\* Denotes new parts

Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.
OM-10513	Sprocket	1	58993	Screw-idle speed	1	65520	Screw-shoulder	2	A-69414-2	Cover-air filter	1
*12624	Grip-starting rope	1	59000	Line-oil pick-up	2	65521	Screw-shoulder	2	*69451	Valve-check	2
*12649	Insert-rope	1	59022	Spring-(not shown)	1	65593	Line-fuel	1	69452	Piston Ring	2
*12671-1	Clutch	1	59064	Bushing-(not shown)	1	65597-1	Clamp-fuel line	1	*69454	Filter-filler cap	1
*12772	Cover-clutch	1	59074	O Ring-shaft	1	65603	Spring-control	1	A-69467	Piston & Pin	1
*12782	Cap-rope grip	1	A-59251	Filter-fuel	1	65633	Baffle-muffler	1	A-69500	Cap-fuel filler	1
22772	Spray Can-black	1	59253-1	Filter-felt	1	65660-1	Clamp-oil line	1	69501	Gasket-fuel cap	1
A-22508	Wrench	1	59293	Spring	1	65695	Connector-oil	1	69502	Chain-bead	1
22520-4	Collar-bearing	1	59460	Spring-throttle	1	A-65632	Line-oil (discharge)	1	69503	Retainer	1
23136-1	Sleeve-bearing	1	59675	Worm-gear	1	A-65705	Line-oil (intake)	1	*A-69591-1	Cap-muffler	1
23420	Plug-bearing	1	59704	Screw-bearing	2	*65718-A	Line-fuel	1	*69638	Bearing-needle	1
23475	Spray Can-red	1	59705	Washer-lock	2	65719	Pin-throttle latch	1	*A-69649	Cylinder	1
23488-B	Loctite	1	59716	Lever-inlet	1	65723-2	Clutch-spider	1	*A-69658	Rod-connecting	1
23528	Wrench-socket	1	59717	Needle-inlet	1	A-65732	Sprocket & Drum	1	*A-69745	Carburetor	1
A-23698-A	Wrench-spanner	1	59736	Gasket-cam screw	1	65745	Trigger-throttle	1	*69751	Grommet-Hi-Lo	1
23846-1	Anvil-crankshaft	1	59926	Seal-felt	1	65798	Screw-4-40 x 1/4	1	*69754-1	Shoe-clutch	6
23846-2	Anvil-bearing	1	63115	Cap	1	65830	Bushing-rewind	1	*69785	Needle-idle	1
23955	Plug-bearing	1	63166-A	Valve-reed	4	A-65884	Sprocket	1	*69789	Shaft & Lever	1
23956	Plug-bearing	1	63195	Bearing-roller	1	A-65886	Sprocket & Drum	1	*69790	Repair Kit	1
23957	Plug-seal	1	63266-A	Rod-throttle	1	A-65887	Sprocket	1	*69792	Needle-main	1
A-23960	Puller-rotor	1	63268-A	Spring-rewind	1	A-65894	Kit-handle bar	1	*69793	Valve-check	1
A-23962	Jackscrew-bearing	1	63284	Sprocket	1	67080	Connector-fuel line	1	*69794	Valve-governor	1
A-23965	Jackscrew	1	63343-5	Body-oil pump	1	A-67101	Bracket-air filter	1	72084-A1	Nut	1
23971	Sleeve-seal	1	63367	Screw-guide bar	1	67156-3	Cover-drivecase	1	72085-A	Plate-On-Off	1
23972	Sleeve-seal	1	63370-A	Retainer-reed	1	67158	Bolt-guide bar	2	73075	Spring-main	1
23987	Shim-magneto	1	63371-B	Seal-reed	1	67159	Gasket-fuel tank	1	73262	Spring-choke	1
24006-1	Plate-crankshaft	1	63452-A	Tube-oil line	1	67160-A	Plate-guide bar	1	74060	Gasket	1
24094	Wrench-spark plug	1	63462	Washer-thrust	2	67161	Plate-guide bar	1	74388	O Ring-plunger	1
24230	Screwdriver	1	63547-S	Spark Plug	1	67162	Module-ignition	1	75078	Key-woodruff	1
A-24270	Kit-filter	1	63565-A	Shield-spring	1	67163	Coil-core	1			
A-24279	Kit-fastening parts	1	63566	Shield-spring	1	67164	Coil-transformer	1			
24302	Plug-seal	1	63621	Pin-dowel	2	67165	Rotor-magneto	1	80023-2	8-32 x 5/8	1
24304	Bit-pozidriv, #2	1	63622	Button-oil pump	1	67166	Lead-high tension	1	80018	1/4-20 x 5/8	4
24306	Shim-black air gap	1	63711	Dia. & Gasket	1	67167	Lead-transformer	1	80248	8-32 x 3/4	3
A-24413	Kit-guide bar plate	1	A-63720	Kit-spiked bumper	1	67168-1	Crankshaft	1	80264	4-40 x 3/16	2
*A-24792	Kit-starting rope	1	63751	Gasket-oil line	1	67177	Bushing-starter	1	80275	6-32 x 3/8	4
25527	Ball-choke	3	63779-C	Gasket-throttle	1	67191	Stud drive	11	80361-1	10-32 x 1/2	2
28097	Plug-pipe	1	63778-1	Gasket-cylinder	1	67409	Ring-air flow	1	80402	1/4-20 x 5/8	6
31734	Connector-elbow	1	63878	Grommet	1	67441	Spring-clutch	2	80560	8-32 x 1/2	2
A-33055	Terminal	1	64002	Cap-dust	1	A-67450-1	Manifold-intake	1	80568	3/32 x 7/8	2
53572	Plug-plastic	1	64049-A	Lock-rewind spring	1	67540	Gasket-carburetor	1	80571	6-32 x 3/8	6
54440	Spring-idle	1	64102-A	Screw-cam	1	67559	O Ring	1	80591	4-40 x 1/4	4
55871	Stud	4	64124	Bearing-roller	1	*A-67618-A	Plate-back	1	80605	6-32 x 5/16	1
57084-1	Reel-starting rope	1	64129	Race-inner	1	A-67639	Nut-cover	1	80648	10-32 x 1/2	1
A-57650-3	Switch-toggle	1	A-64293	Filter-oil	2	67866	Gasket-set	1	80676	12-24 x 5/8	8
A-57834-16	Plunger-oil pump	1	64400	Bushing-spring	1	67875-1	Washer-tab lock	1	80805	8-32 x 9/16	2
58138	Washer	1	A-64421	Screen-fan housing	1	67994	Shutter-throttle	1	80821	12-24 x 1/2	1
58190-S	Bearing-ball	1	64443	Bushing-starter	1	A-67995	Shaft & Lever	1	80867	12-24 x 3/4	2
58319-A	Ring-retaining	2	A-64446	Pulley-rewind	1	68480	Screw-shoulder	3	80891	12-24 x 7/8	1
58348	Boot-throttle rod	1	A-64504-B	Housing-lan	1	68010	Washer-thrust	2	80919	4-40 x 1/4	2
58392-1	Gasket-mounting	1	A-64715	Shield-saw dust	1	A-68025-C	Handle-throttle	1	81065-2	Nut-1/4-28	4
58405	Spring-throttle	1	64742	Ring-piston pin	2	A-68032-A	Crankcase & Tank	1	81068	Nut-12-24	2
58406	O Ring	1	64862	Grommet	1	68046	Grommet-fuel line	1	81089-2	Nut-3/8-16	2
58409	Ring-retaining	1	65133	O Ring	1	68078-1	Guard-chain	1	81109-2	Nut-10-32	3
58688-A	Seal	2	65143	Cap-check valve	1	A-68265	Pump-automatic	1	81124	Nut-3/8-24	1
58751-1	Cover-clutch	1	65144	Gasket-check valve	1	A-68429	Rod-choke	1	81126	Nut-6-32	2
58756	Pawl-starter	2	65357	Grommet-oil line	1	68445	Bushing-(not shown)	1	*81204	Nut-Gripco	1
*58757-D	Stud-pawl	2	65483	Gasket-reed valve	1	68750	Retainer	1	82146	8-32 x 5/8	6
58763	Washer-retaining	1	65509	Mount-shock	1	68765	Spacer-handle bar	1	82147	8-32 x 1-3/4	1
58806	Rope-starting	1	65518	Grommet	2	68766-2	Bracket	1	82155	8-32 x 3/16	8
58924-4	Pin-throttle latch	1	65519	Grommet	2	68767	Grip-throttle	1	82178	8-32 x 3/4	7
58973	Spring-idle speed	1	65598	Plate-handle bar	1	68768	Grip-throttle	1	82179	10-32 x 1-7/8	2
58974	Screen-fuel inlet	1	65599	Plate-handle bar	1	68874	Stud-muffler	3	82196	8-32 x 1-1/8	3
58975	Cover-fuel pump	1	A-65682	Line-oil	1	A-68911-1	Cap-muffler	1	82256	#6 x 1/4	1
58977	Pin-control lever	1	65696	Fitting-tube	1	68978	Plate-muffler	1	82259	1/4-20 x 1	1
58978	Gasket-main dia.	1	A-65990	Drum & Hub	1	A-68979	Body-muffler	1	83008-1	Washer-lock, #4	6
58979	Cover-main dia.	1	67153-2	Cover-fuel tank	1	A-68983	Muffler-down draft	1	83009	Washer-lock, 1/4	4
58980-R	Diaphragm-fuel	1	67586-1A	Pin-guide bar	1	69027-S	Spark Plug	1	83022	Washer-lock, #8	7
58981	Gasket-pump dia.	1	A-65284-A	Cap-oil filler	1	*A-69034	Handle Bar	1	83024	Washer-lock, #6	4
58982	Clip-throttle shaft	1	65375-2	Spring-starter	2	A-69045	Cover-throttle	1	83046	Washer-lock, #10	2
58984	Shutter-choke	1	A-65502	Valve-check	1	A-69056	Bearing-needle	1	83056	Washer-lock, #12	4
58988	Diaphragm-main	1	65513-1	Clamp-oil line	1	69274	Plate-bumper	1	83102	Washer-lock, 3/8	1
58991	Plug-welch	1	A-65515	Valve-check	1	*69284-1	Shield-muffler	1	84010-1	Washer-flat, 3/8	1
						*A-69305-A	Filter-element	1	84035	Washer	1
									86324	Pin-cotter	1

**FASTENING PARTS**

\* Denotes new parts

