

35 CENTS




ILLUSTRATED PARTS CATALOGUE

HOLIDAY II MODEL 970

PART NO. 430265 REPRINTED APRIL 80




HOLIDAY II

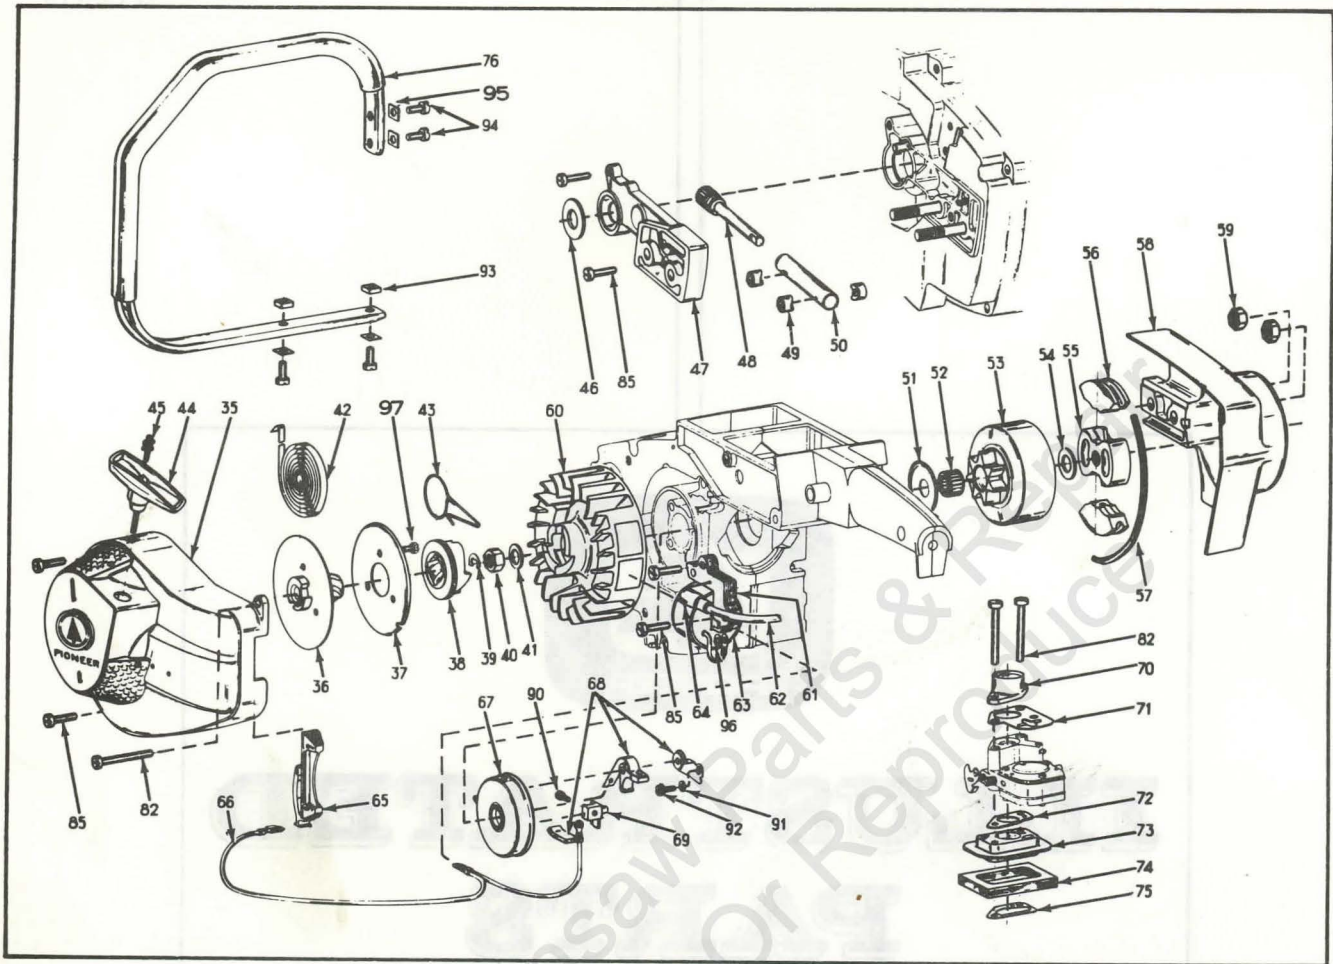

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
51	429672	Thrust Washer-Inner Clutch	1	77	429478	Rear Handle Brace	1
52	429526	Bearing-Clutch	1	81	307190	Screw-Crankcase Halves	13
53	473156	Sprocket & Clutch Drum Assy. Bearings, Complete	1	82	316133	Screw-Cyl. Shroud to C'case	1
54	429252	Thrust Washer-Outer Clutch	1			Screw-Blower Cover to C'case	1
55	429250	Clutch Driver	1	83	306286	Screw-Carburetor	2
56	429251	Clutch Shoe	2			Screw-Rear Handle	1
57	426964	Garter Spring	1			Screw-Cyl. Shroud to C'case	2
58	429214	Strut	1	85	510195	Screw-Handle Brace	1
59	306320	Nut-Strut	2			Screw-Muffler to Cylinder	2
60	473160	Flywheel Assembly	1			Screw-Bar Pad to C'case	2
61	473341	Core Assy.	1			Screw-Blower Cover to C'case	2
62	427745	H. T. Lead	1	86	315381	Screw-Coil Lamination	2
63	473340	Coil (Less H. T. Lead)	1	86	315381	Nut-Cylinder Base	4
64	429422	Retainer	1	87	306985	Lockwasher-Cylinder Base	4
65	429270	Switch Body	1	88	300635	Screw-Cylinder Base	4
66	473627	Switch Wire Assembly	1	89	311516	Screw-Condenser to C'case	1
67	429268	Ignition Cover	1	90	429266	Screw-Primer Pump to C'case	2
68	473330	Breaker Point Set With Wiper	1			Screw-Terminal	1
69	429925	Terminal Block	1			Screw-Handle Brace	2
70	429304	Blowback Tube	1	91	303497	Washer-Base Breaker Plate	1
71	429306	Bracket-Air Filter Cover	1	92	311516	Screw-Base Breaker Plate	1
72	429303	Gasket-Carb. to Ins. Block	1	93	306542	Nut-Front Handle	2
73	429302	Insulating Block	1			Nut-Handle Brace	1
74	429305	Gasket-Ins. Block to Airbox	1	94	510338	Screw-Front Handle	4
75	429301	Gasket-Cylinder to Ins. Block	1	95	429472	Washer-Front Handle Bar	4
76	473175	Front Handle Assembly	1	96	300154	Washer-Lamination	1
				97	602821	Screw-Plate Pulley	3

HOLIDAY II

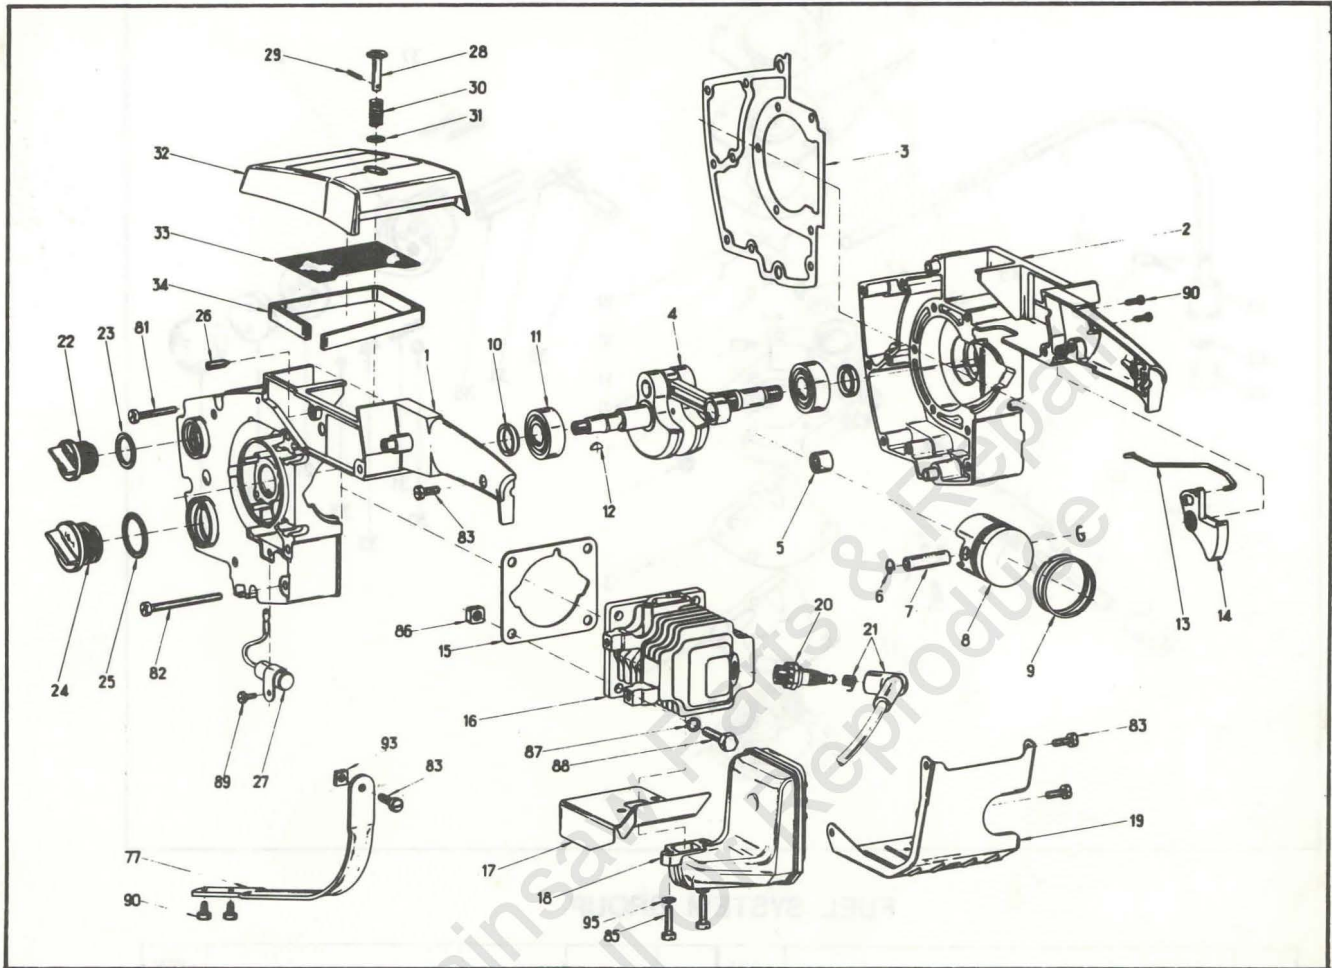


Item No.	Part No.	Description	Qty. Req'd.
1	473590	Crankcase Half Assy.-Mag. Side	1
2	473152	Crankcase Half Assy.-Strut Side	1
3	429228	Gasket-Crankcase	1
4	473176	Cranksahft & Conrod Assy.	1
5	427662	Bearing-Wristpin	1
6	427671	Retainer-Wristpin	2
7	429216	Wristpin	1
8	473150	Piston Assembly	1
9	473155	Piston Ring Set	1
10	428746	Oil Seal	2
11	427849	Main Bearing	2
12	429271	Key-Flywheel	1
13	429261	Throttle Link	1
14	427696	Throttle Trigger	1
15	429262	Gasket-Cylinder	1
16	429256	Cylinder	1
17	429309	Muffler Shroud	1
18	473172	Muffler Assembly	1
19	429236	Cylinder Shroud	1
20	428601	Spark Plug (CJ6)	1
21	580339	Sparky Cover Assembly	1
22	429323	Oil Cap	1
23	429324	"O" Ring-Oil Cap	1
24	429321	Gas Cap	1
25	429322	"O" Ring-Gas Cap	1
26	429376	Idle Adjustment Screw	1
27	473161	Condenser Assembly	1

Item No.	Part No.	Description	Qty. Req'd.
28	429313	Fastener Pin-Air Filter Cover	1
29	429314	Pin-Air Filter Cover	1
30	429312	Spring-Air Filter Cover	1
31	302417	Washer-Air Filter Cover	1
32	429311	Air Filter Cover	1
33	429310	Air Filter Element	1
34	429276	Sealing Strip-Air Filter Cover	1
35	473145	Blower Cover & Starter Shaft Assy	1
36	429242	Starter Pulley	1
37	429243	Plate-Pulley	1
38	429244	Pinion	1
39	429246	Retaining Ring	1
40	404837	Nut-Flywheel	1
41	429851	Washer-Flywheel	1
42	604257	Starter Spring	1
43	429572	Yoke	1
44	311372	Starter Handle	1
45	429278	Starter Rope	1
46	429254	Seal Washer	1
47	429277	Bar Pad	1
48	473166	Plunger Assembly-Oil Pump	1
49	429274	Sealing Pad-Oil Pump	3
50	429233	Pump Sleeve-Oil Pump	1
*	429529	Pivot Grip-Optional Accessory	
*	429580	Chain Adjuster-Optional Accessory	
*	429581	Spring-Chain Adjuster-Optional Accessory	

* Not Shown

HOLIDAY II

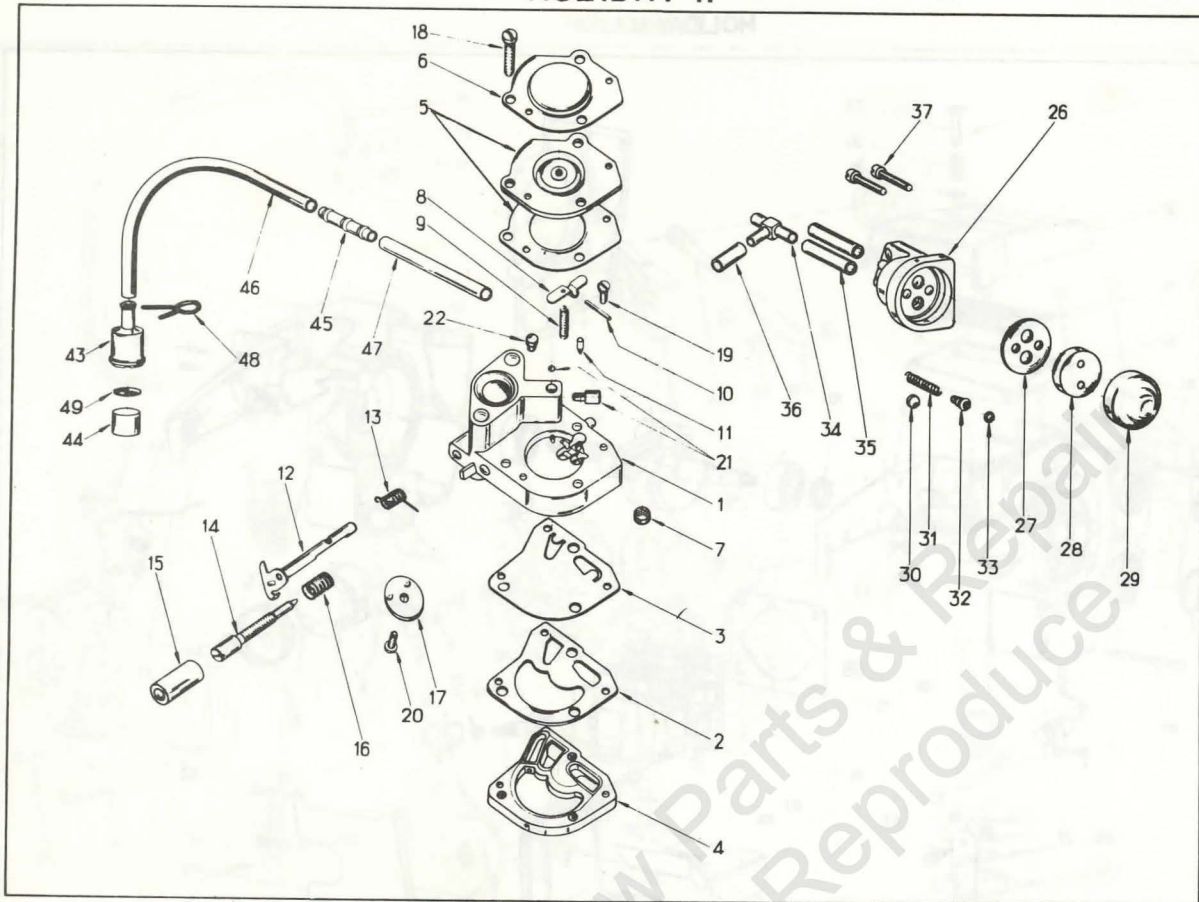

FUEL SYSTEM GROUP

REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.	REF. NO.	PART NO.	NAME OF PART	QTY. PER ASSY.
CARBURETOR COMPLETE							
1	473688	Carb. Assy.	1	13	429404	Spring - Throttle Return	1
2	429286	Gasket - Diaphragm-Fuel Pump	1	14	429455	Adjustment Needle	1
3	429285	Diaphragm - Fuel Pump	1	15	429449	Hose - Low Speed Adjustment	1
4	429293	Cover - Fuel Pump	1	16	310393	Spring-Needle	1
5	473600	Diaphragm Assembly	1	17	429297	Throttle Valve	1
6	429294	Cover - Diaphragm	1	18	316056	Screw - Cover to Carb.	1
7	429292	Screen	1	19	317267	Screw - Inlet Pin	1
8	429772	Lever - Inlet Control	1	20	303760	Screw - Throttle	1
9	429298	Spring - Lever - Inlet Valve	1	21	473383	Plug and Ball-Metering Valve Assembly	1
10	429299	Pin-Lever-Inlet Valve	1	22	304201	Lead Shot	1
11	429427	Needle-Inlet Valve-Carb.	1				
12	473170	Throttle Shaft & Lever Assy.	1				
PART NO. 473174 - PRIMER PUMP ASSEMBLY COMPLETE - Includes †							
26	429316	† Primer Body	1	32	426835	† Stem-Valve	1
27	429419	† Gasket-Plate to Primer Body	1	33	308528	† "O" Ring-Stem	1
28	429420	† Valve Plate	1	34	427896	Tee Fitting	1
29	429413	† Bulb	1	35	429451	Fuel Hose - to Carb. (1)	1
30	429320	† Disc Valve	1			Fuel Hose - Tee to Primer (1)	2
31	426837	† Spring-Valve	1	36	429416	Fuel Hose - Tee to Carb.	1
				37	429421	† Screw - Self Tapping	2
FUEL PICKUP ONLY							
43	473459	Fuel Pick-up Assembly	1	46	429241	Fuel Line-Pickup Head	1
44	425670	Felt-Pickup	1	47	429383	Fuel Line- Tank to "T"	1
45	429821	Connector-Pickup Head to Tank Wall	1	48	429471	Hose Clamp	1
				49	429530	Screen - Fuel - Pickup	1